

 
ACCESSORIES

Handle



1494V-H1 (Painted)
1494V-W1 (Stainless)

Connecting Rod



1494V-RA1 (short)
1494V-RA2 (long)

Fuse Cover



1495-N59

Auxiliary Contacts



595-A (N.O.)
595-B (N.C.)

Handle



1494F-P1 (Plastic)
1494F-M1 (Painted)
1494F-S1 (Stainless)

Connecting Rod



1494V-RA3 (short)
1494V-RA4 (long)

Fuse Cover



1495-N59

Auxiliary Contacts



 
595-A (N.O.)
595-B (N.C.)

Handle




1494F-P1 (Plastic)
1494F-M1 (Painted)
1494F-S1 (Stainless)

Connecting Rod



1494V-RA3 (short)
1494V-RA4 (long)

 Fuse Cover

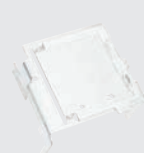

1495-N56

Auxiliary Contacts



1495-N8 (N.O.)
1495-N9 (N.C.)

Handle



 
1494F-P1 (Plastic)
1494F-M1 (Painted)
1494F-S1 (Stainless)

Connecting Rod



1494V-RA3 (short)
1494V-RA4 (long)

Fuse Cover

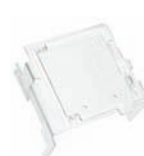

1495-N64
1495-N65

Auxiliary Contacts



1495-N8 (N.O.)
1495-N9 (N.C.)
Right Hand Switch: No Adapter Kit
Left Hand Switch: Adapter Kit
1495-N24

Note: The Handle and Connecting Rod are compatible within each kit. They are not interchangeable.