


COMPONENTS

Series A

Disconnect Switch Kit
(1975 – 2004)

Disconnect Switch

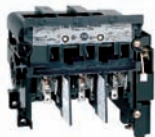

1494V-DS200 Series A
(Right and Left Hand)
(1975–1993)

1494V-DS200 Series B
(Right and Left Hand)
(1993–1999)
1494V-DS200 Series C
(Right and Left Hand)
(1999–2005)

Trailer Fuse Block



1494V-FS200 Series A
1494V-FSR622 Series A

1494V-FS200 Series B
1494V-FSR622 Series B

Fuse Clips




1401-N45 250V Class H
250V Class R

1401-N45 600V Class H & J
600V Class R

Series 1

Disconnect Switch Kit
(2004 – 2006)

Disconnect Switch

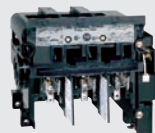

1494V-DS200 Series C
(Right and Left Hand)

Trailer Fuse Block



1494V-FS200 Series B

Fuse Clips



1401-N45 250V Class H
1401-N54 250V Class R
1401-N45 600V Class H & J
1401-N54 600V Class R

Series 3

Disconnect Switch Kit
(2006 – Present)

Disconnect Switch



1494V-DS200 Series D
(Right Hand)
1494V-DSX200 Series D
(Left Hand)

Trailer Fuse Block



1494V-FS200 Series D

Fuse Clips



1401-N45 250V Class H
1401-N54 250V Class R
1401-N45 600V Class H & J
1401-N54 600V Class R

Note: The Disconnect Switch and Trailer Fuse Block must have the same series letter.