



ATTENTION: Proper safety precautions must be followed during installation by a trained electrician. Never install while bus is energized. The current transformer must have its secondary terminals short circuited or the burden connected, before energizing the primary circuit.

1411-2xxx Dimensions and Accuracy

Figure 1 - 1411-2xxx Dimensions

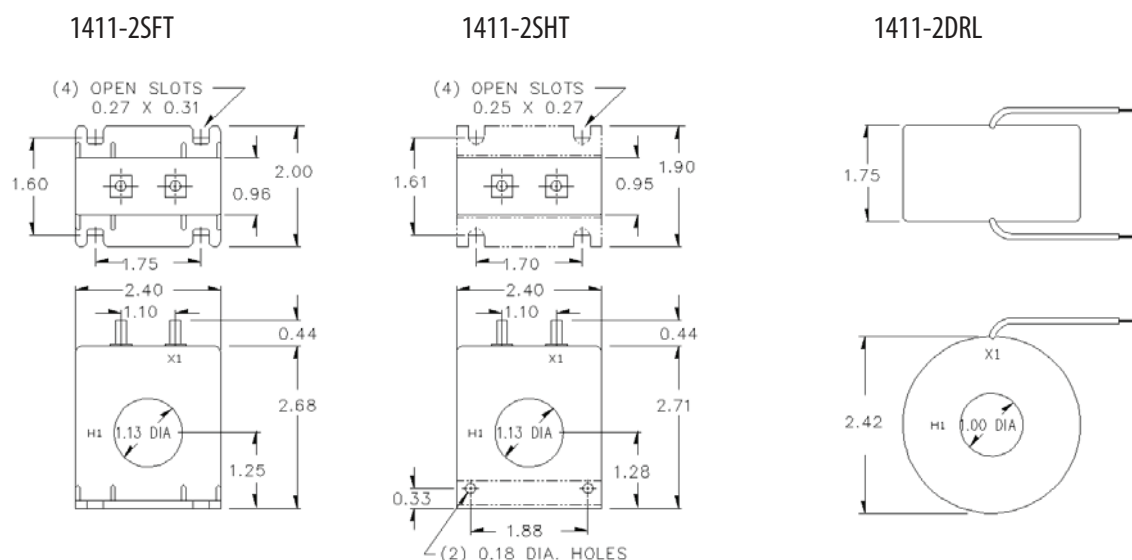


Table 1 - 1411-2xxx Accuracy

Cat. No.	Current Ratio	Models 2SFT, 2SHT		Model 2DRL	
		Accuracy at 60 Hz	Burden VA at 60 Hz	Accuracy at 60 Hz	Burden VA at 60 Hz
1411-2 ⁽¹⁾ -500	50:5	±3 %	1.5	±2 %	1.5
1411-2 ⁽¹⁾ -600	60:5	±3 %	2.0	±2 %	2.0
1411-2 ⁽¹⁾ -750	75:5	±2 %	2.0	±2 %	3.0
1411-2 ⁽¹⁾ -600	80:5	±2 %	2.0	±2 %	4.0
1411-2 ⁽¹⁾ -101	100:5	±1 %	2.0	±1 %	5.0
1411-2 ⁽¹⁾ -121	120:5	±1 %	2.5	±1 %	5.0
1411-2 ⁽¹⁾ -1250	125:5	±1 %	2.5	±1 %	5.0
1411-2 ⁽¹⁾ -151	150:5	±1 %	4.0	±1 %	8.0
1411-2 ⁽¹⁾ -201	200:5	±1 %	4.0	±1 %	10.0
1411-2 ⁽¹⁾ -251	250:5	±1 %	6.0	±1 %	12.5
1411-2 ⁽¹⁾ -301	300:5	±1 %	8.0	±1 %	15.0

(1) When ordering, prefix Cat No. with model designation required, for example, 1411-2SFT-301 or 1411-2DRL-301.