


PowerMonitor 500 Unit

Catalog Numbers 1420-V1, 1420-V2, 1420-V1A, 1420-V1P, 1420-V2A, 1420-V2P, 1420-V1-ENT, 1420-V1-485, 1420-V2-ENT, 1420-V2-485, 1420-V1A-ENT, 1420-V1A-485, 1420-V2A-ENT, 1420-V2A-485, 1420-V1P-ENT, 1420-V1P-485, 1420-V2P-ENT, 1420-V2P-485

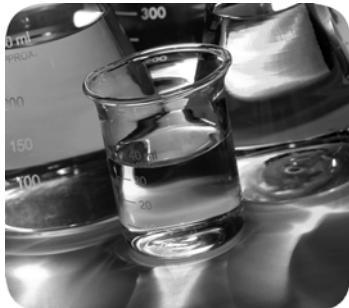

Important User Information

Read this document and the documents listed in the additional resources section about installation, configuration, and operation of this equipment before you install, configure, operate, or maintain this product. Users are required to familiarize themselves with installation and wiring instructions in addition to requirements of all applicable codes, laws, and standards.

Activities including installation, adjustments, putting into service, use, assembly, disassembly, and maintenance are required to be carried out by suitably trained personnel in accordance with applicable code of practice.

If this equipment is used in a manner not specified by the manufacturer, the protection provided by the equipment may be impaired.

In no event will Rockwell Automation, Inc. be responsible or liable for indirect or consequential damages resulting from the use or application of this equipment.

The examples and diagrams in this manual are included solely for illustrative purposes. Because of the many variables and requirements associated with any particular installation, Rockwell Automation, Inc. cannot assume responsibility or liability for actual use based on the examples and diagrams.

No patent liability is assumed by Rockwell Automation, Inc. with respect to use of information, circuits, equipment, or software described in this manual.

Reproduction of the contents of this manual, in whole or in part, without written permission of Rockwell Automation, Inc., is prohibited.

Throughout this manual, when necessary, we use notes to make you aware of safety considerations.



WARNING: Identifies information about practices or circumstances that can cause an explosion in a hazardous environment, which may lead to personal injury or death, property damage, or economic loss.



ATTENTION: Identifies information about practices or circumstances that can lead to personal injury or death, property damage, or economic loss. Attentions help you identify a hazard, avoid a hazard, and recognize the consequence.

IMPORTANT

Identifies information that is critical for successful application and understanding of the product.

Labels may also be on or inside the equipment to provide specific precautions.



SHOCK HAZARD: Labels may be on or inside the equipment, for example, a drive or motor, to alert people that dangerous voltage may be present.



BURN HAZARD: Labels may be on or inside the equipment, for example, a drive or motor, to alert people that surfaces may reach dangerous temperatures.



ARC FLASH HAZARD: Labels may be on or inside the equipment, for example, a motor control center, to alert people to potential Arc Flash. Arc Flash will cause severe injury or death. Wear proper Personal Protective Equipment (PPE). Follow ALL Regulatory requirements for safe work practices and for Personal Protective Equipment (PPE).

| | |
|--|----------|
| Preface | 5 |
| Summary of Changes | 5 |
| Catalog Number Explanation | 6 |
| Access Product Release Notes | 6 |
| Additional Resources | 6 |
| | |
| Chapter 1 | |
| PowerMonitor 500 Unit Overview | |
| About the PowerMonitor 500 Unit..... | 7 |
| PowerMonitor 500 Features and Functions | 8 |
| Front Panel Features..... | 9 |
| Display Features..... | 11 |
| Selecting Data to Display | 12 |
| | |
| Chapter 2 | |
| Installation and Wiring | |
| Installation | 15 |
| Wiring Diagrams..... | 17 |
| | |
| Chapter 3 | |
| Unit Configuration | |
| Configure with the Display | 25 |
| Configuration Flowchart | 28 |
| Configure the IP Address | 33 |
| Digital Filtering Operation..... | 35 |
| Analog Output Configuration Examples | 38 |
| Alarm Configuration Example | 39 |
| Digital Output Configuration Examples | 39 |
| | |
| Chapter 4 | |
| Communication | |
| EtherNet/IP Communication..... | 43 |
| Modbus Communication | 54 |
| | |
| Appendix A | |
| PowerMonitor 500 Unit Data Tables | |
| Summary of Data Tables..... | 57 |
| Geometric Representation of Power and Power Factor | 58 |
| Data Tables..... | 59 |
| List of Connectable Variables | 74 |
| | |
| Appendix B | |
| Technical Specifications | |
| | 77 |

| | |
|---|--|
| PowerMonitor 500 EtherNet/IP Device Profile | Appendix C |
| | General 85 |
| | Object Model and Interface 85 |
| | Identity Object - CLASS CODE 0x0001 85 |
| | Assembly Object - CLASS CODE 0x0004 90 |
| | Technical Notes 93 |
| Unit Configuration - Base Firmware Revision 11 and Earlier | Appendix D |
| | Configure with the Display 95 |
| | Configuration Flowchart 98 |
| | Index 103 |

This manual contains detailed information on these topics for the PowerMonitor 500 unit:

- Mounting and wiring of the unit
- Wiring to native and optional communication port
- Set-up and use of the display module
- Information on metering functionality and measurements
- Use of the display module for configuration, monitoring, and commands
- Discussion of communication options, functionality, configuration, and operation
- Alarm configuration and operation
- PowerMonitor™ 500 data tables


This manual is intended for qualified personnel. You need a basic understanding of electric power and energy theory and terminology, and alternating-current (AC) metering principles.

Summary of Changes

This manual contains new and updated information as indicated in this table.

| Topic | Page |
|---|-------------|
| Updated Pulse configuration definitions. | 30 |
| Added information on how to configure the IP address. | 33 |
| Added digital output configuration examples. | 39 |
| Added information about the EDS Add-On Profile. | 46 |
| Updated the Modbus address for DMD - Synchronization. | 67 |
| Updated the Modbus address in the Commands: Write-only table. | 71 |
| Updated the Pulse Weight and Pulse Duration specifications in Table 39. | 78 |
| Updated the kWh consumption specification in Table 43. | 81 |

Catalog Number Explanation

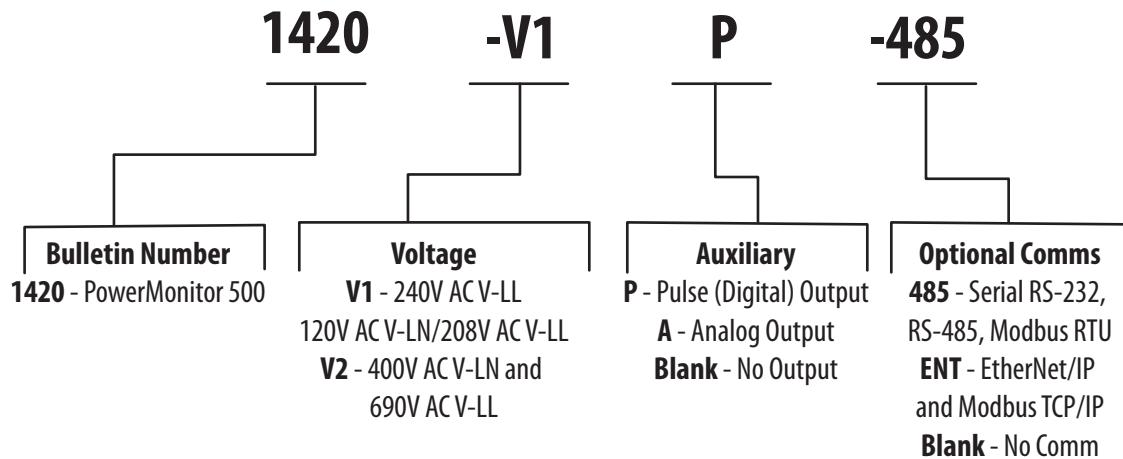

Access Product Release Notes

Download the latest PowerMonitor 500 unit Ethernet firmware, associated files (such as AOP, EDS, and DTM), and access product release notes from the Product Compatibility and Download Center at

http://www.rockwellautomation.com/rockwellautomation/support/_pcdc.page.

- From the Product Compatibility and Download Center, search for your product or choose Energy Monitoring from the All Categories pull-down menu.

FIND DOWNLOADS

| | | | |
|------------------|----------------|--------------|--|
| PowerMonitor 500 | All Categories | All Families | |
|------------------|----------------|--------------|--|

- Select your product and firmware revision and click Downloads.
- Click the download icon to access product release notes.

Additional Resources

These documents contain additional information concerning related products from Rockwell Automation.

| Resource | Description |
|---|---|
| Industrial Automation Wiring and Grounding Guidelines, publication 1770-4.1 | Provides general guidelines for installing a Rockwell Automation industrial system. |
| Product Certifications website, http://www.rockwellautomation.com/global/certification/overview.page | Provides declarations of conformity, certificates, and other certification details. |

You can view or download publications at <http://www.rockwellautomation.com/global/literature-library/overview.page>. To order paper copies of technical documentation, contact your local Allen-Bradley distributor or Rockwell Automation sales representative.

PowerMonitor 500 Unit Overview

About the PowerMonitor 500 Unit

The PowerMonitor™ 500 unit is an AC power monitor with a built-in advanced configuration system and LCD data display. The unit is designed for measurement of electrical parameters in various three-phase, single-phase (2-wire European), and split-phase (3-wire North American single phase) circuits. The unit modular housing can be mounted in a panel that provides IP65 degree protection from the front. The power monitor can be provided with analog or digital (relay) outputs. These outputs can be selected to output a pulse proportional to the real and reactive energy that is measured, or to annunciate alarms. The instrument can also be equipped with a serial RS-485/RS-232 port or an EtherNet/IP port.

Equipped with an optional communication port, the unit communicates power and energy parameters to applications, such as FactoryTalk® EnergyMetrix™ software. The power monitor works with these software applications to address these key customer applications:

- Load profiling - log power parameters such as real energy, apparent power, and demand, for analysis of power usage by loads over time
- Cost allocation - report actual energy cost by department or process to integrate energy information into management decisions
- Billing and sub billing - charge users of energy the actual usage cost rather than allocating by square footage or other arbitrary methods
- Power system monitoring and control - display and control power flow and energy utilization

PowerMonitor 500 Features and Functions

The power monitor connects to your three-phase, split-phase (3-wire North American single phase), or single-phase (2-wire European) AC power system directly or through instrument transformers (PTs and CTs). It converts instantaneous voltage and current values to digital values, and uses the resulting digital values in calculations of voltage, current, power, energy, and demand.

The power monitor family includes several models that combine the following basic components:

- A panel-mounted power monitor in one of two AC voltage ranges: 120/208V or 400/600V
- An optional pair of digital (relay) outputs
- An optional pair of 0...20 mA analog outputs
- Optional serial RS-232/RS-485 communication supporting Modbus RTU
- Optional Ethernet port supporting EtherNet/IP and Modbus TCP/IP
- Front protection degree: IP65, NEMA 4X, NEMA 12
- Up to four configurable virtual alarms
- Class 1 (kWh) according to EN62053-21
- Class B (kWh) according to EN50470-3
- Class 2 (kVARh) according to EN62053-23
- Accuracy $\pm 0.5\%$ of reading (current/voltage)
- Metering values display: Four rows with 4 digits
- Energy value display: Ten digits and the plus/minus sign
- Three-phase (system) variables: V(L-L), V(L-N), A, VA, W, VAR, power factor, frequency
- Single phase variables: V(L-L), V(L-N), A(L), An (calculated), VA, W, VAR, power factor
- System and single phase average and maximum variables
- Energy measurements (imported/exported): kWh and kVARh
- Revenue grade energy measurements per ANSI C12.1 Class 1.0, ANSI C12.1
- Run hours counter (8+2 digits)
- Real-time clock function
- Universal power supply: 120/240V AC 50/60 Hz, or 120/240V DC
- Front dimensions: 96 x 96 mm (3.78 x 3.78 in)

Front Panel Features

This section describes the front panel of the unit.


Front Panel Indicators and Control Buttons



The buttons are enhanced touch buttons. The touch icon turns on each time a button is pressed. We recommend using your forefinger to activate the touch buttons.

In Metering mode, buttons 4 and 5 (shown in [Figure 1](#)) are used to display the maximum and demand (average) values of the displayed measurements.

Figure 1 - Front Panel

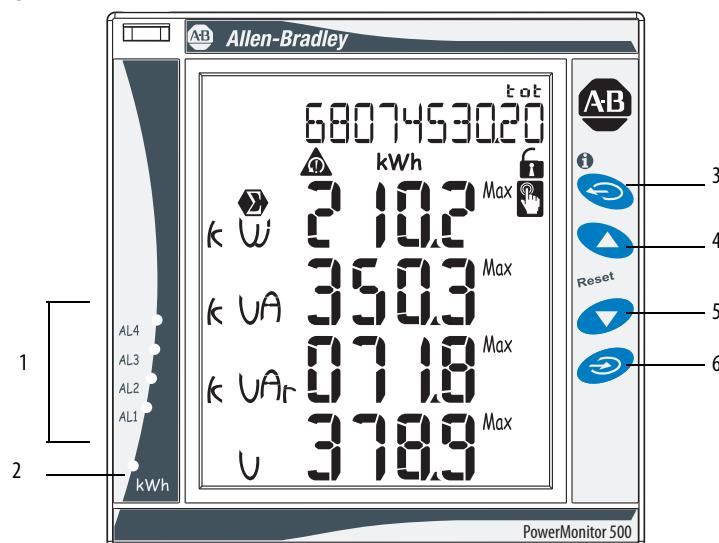

| Display Item | Description |
|--------------|---|
| 1 | Active Alarms AL1...AL4 status indicators. |
| 2 | Real Energy consumption-rate status indicator. Faster flashing indicates higher rate of consumption. Maximum frequency 16 Hz per EN5047-1. |
| 3 | Exit Button - Press quickly to exit submenus, or to exit the programming menus in Programming mode. When in the programming menu, press and hold Exit for at least 2 seconds to exit the programming menu. Press Program/select to confirm and return to the metering display and exit the programming menu without saving your changes. To save changes, use the Up and Down arrows to go to the End menu, then press Program>Select. When not in the programming menu, press and hold for more than 2 seconds to view the information pages. In Metering mode, press quickly to scroll through the energy counters. |
| 4 | Up Button - Press the Up button to browse menus and to increase values to be set. |
| 5 | Down Button - Press the Down button to browse menus and to decrease values to be set. |
| 6 | Program/select Button - Press and hold the Program/select button for at least 2 seconds to access the programming menu. When in the programming menu, press Program/select to confirm the programmed values in the active page. Press Program/select to enter and exit edit mode on the active page. When not in the programming menu, press Program/select to select measured values for display. Press quickly to scroll through the metering display pages. See Table 1 and Table 2 for a list of the measurement screens. |

Additional Button Functions

Certain buttons have two functions. To access the second function, press and hold the button for more than 2 seconds.



Displays PowerMonitor 500 information screens, which provide reference standards, firmware revision, and year of manufacture.




Resets the max (maximum) of the displayed variables. You must press Program/select to confirm the reset.



Resets the dmd (demand) of the displayed variables. You must press Program/select to confirm the reset.

Display Features

Figure 2 - Features

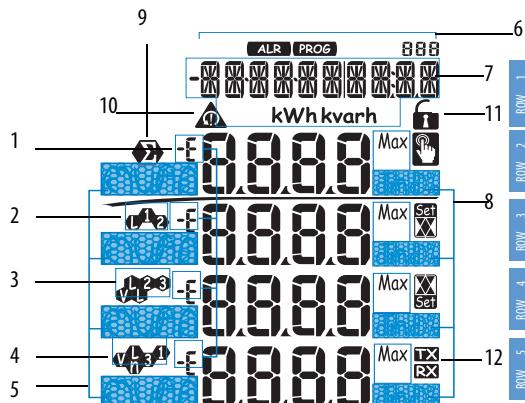

| Display Item | Description |
|--------------|--|
| 1 | Phase displacement indicator: inductive L, -L, or capacitive C, -C. The sign is based on the direction of real power flow. Positive = consuming power, negative = generating power. See the Geometric Representation of Power and Power Factor in Appendix A for more information. In Programming mode, the indicator displays E when a parameter can be edited. |
| 2 | Indicates the measured value phase (line-to-neutral L1 or line-to-line L12). |
| 3 | Indicates the measured value phase (line-to-neutral L2 or line-to-line L23). |
| 4 | Indicates the measured value phase (line-to-neutral L3 or line-to-line L31). |
| 5 | Engineering unit and multiplier indicator (k, M, V, W, A, var, PF, Hz, An). |
| 6 | ALR: the alarm display function is active. PROG: the programming function is active. |
| 7 | Area set aside for energy counters (see Table 1), text messages, date and time (format: dd.mm.yy/hh:mm). |
| 8 | Indicates that metering values are dmd (demand) or MAX (maximum) values. |

Display Icons



| Display Item | Description |
|--------------|---|
| 9 | Indicates that the metering values displayed are system (three-phase) values. |
| 10 | Indicates a phase sequence error alarm for Voltage rotation. |
| 11 | Configuration lock switch is not active. Always indicates unlocked. |
| 12 | Indication of serial RS-485/RS-232 data transmission (TX) and reception (RX). |

Alarm Icons



- Indicates a high value alarm

- Indicates a low value alarm

Selecting Data to Display

[Table 1](#) and [Table 2](#) provide a guide to navigation through the metering data displays available on the front panel display. Row 1...Row 5 indicate the rows of the display (see [Figure 2 on page 11](#)).

 Press  for <2 seconds to cycle through the data that is displayed in Row 1 of the display.

 Selected data for Row 1 remains displayed until  is pressed.

Table 1 - Row 1 Data

| Parameters | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 |
|--------------|---------------|-----------------|---------------|-----------------|---------------|-----------------|---------------|-----------------|-------------------------|-----|
| Row 1 | Total kWh (+) | Total kVARh (+) | Total kWh (-) | Total kVARh (-) | kWh (+) part. | kVARh (+) part. | kWh (-) part. | kVARh (-) part. | Run Hours (99999999.99) | RTC |

 Press  for <2 seconds to cycle through the data that is displayed in Rows 2...5 of the display.

Selected data for Rows 2...5 displays momentarily and then returns to the default display.

Use  and  to cycle through the max, instantaneous, and demand (dmd) values.

IMPORTANT

The appropriate data is displayed based on the configured system. For example, for delta (3P) systems, individual line data is not displayed for line-to-neutral voltage, VA, VAR, W, and power factor.

Table 2 - Rows 2...5 Data

| Parameters Set | 0 | 1 | 2 | 3 | 4 | 5 | 6 | 7 |
|----------------|----------------|----------------|------|----|-------------|--------------|------------|-------------|
| Row 2 | V L N Σ | V L L Σ | A n | Hz | VA Σ | VAR Σ | W Σ | PF Σ |
| Row 3 | V L1 | V L1-2 | A L1 | - | VA L1 | VAR L1 | W L1 | PF L1 |
| Row 4 | V L2 | V L2-3 | A L2 | - | VA L2 | VAR L2 | W L2 | PF L2 |
| Row 5 | V L3 | V L3-1 | A L3 | - | VA L3 | VAR L3 | W L3 | PF L3 |

To access information pages, press and hold  for more than 2 seconds,

then press  and  to select information items, as shown in [Table 3](#). After a period of inactivity, the information pages close, and the display returns to the default screen.

IMPORTANT Information items are not displayed for options that are not installed. For example, a module that does not have the analog output option does not display analog parameters (columns 11 and 12 in [Table 3](#)).

Table 3 - Rows 1...5 Information Pages

| Page No. | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 14 | 15 |
|--------------|-----------------------------|---|--------------------------------------|---|---|---------------------------|-------------------|-------------------|-------------------|---------------------|-------------------------|---------------------------------|----------------------------|------------|---|
| Row 1 | Serial Number (9 digits) | Conn. xxx (3PN/ 3P/3P1/ 3P2/1P/ 2P) | Status Indicator Pulse kWh | Pulse OUT1 kWh/ kVARh ⁽¹⁾ | Pulse OUT2 kWh/ kVARh ⁽¹⁾ | Remote out ⁽¹⁾ | AL1 | AL2 | AL3 | AL4 | Analog 1 ⁽¹⁾ | Analog2 ⁽¹⁾ | COM port ⁽¹⁾ | IP Address | XX•XX•X XXX:XX (Real-time clock) |
| Row 2 | Yr. xx | CT.rA | 0.001... 1000 kWh per pulse | 0.001... 1000 kWh/ kVARh per pulse | xxxx kWh/ kVARh per pulse | Out 1 | Variable | Variable | Variable | Hi.E ⁽²⁾ | Hi.E ⁽²⁾ | Add XXX | XXX | dAtE | |
| Row 3 | rEL | 1.0...9 9.99k | | +/- tot/ PAr | +/- tot/PAr | on/oFF | Set 1 | Set 1 | Set 1 | 0.0... 9999k | 0.0... 9999k | 1... 247 | XXX | tiME | |
| Row 4 | A.10 | Pt.rA | | | | Out2 | Set 2 | Set 2 | Set 2 | Hi.A ⁽³⁾ | Hi.A ⁽³⁾ | bdr | XXX | | |
| Row 5 | 1...60 (min) 'dmd' | 1.0...9 999 | | | | on/oFF | (measure ment) | (measure ment) | (measure ment) | 0.0... 100.0% | 0.0... 100.0% | 9.6/ 19.2/ 38.4/ 115.2 | XXX | | |

(1) If appropriate option is selected.

(2) Hi.E corresponds to the configured Max Input for the analog output.

(3) Hi.A corresponds to the configured Max Output for the analog output.

[Figure 3](#) and [4](#) are examples of how the information pages are displayed.

Figure 3 - Information Page 2


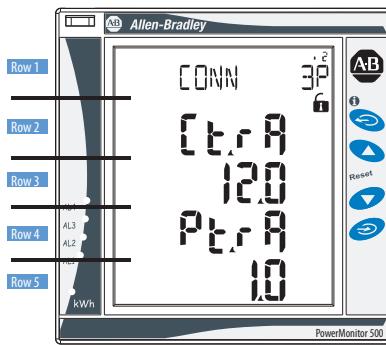


Figure 4 - Information Page 15

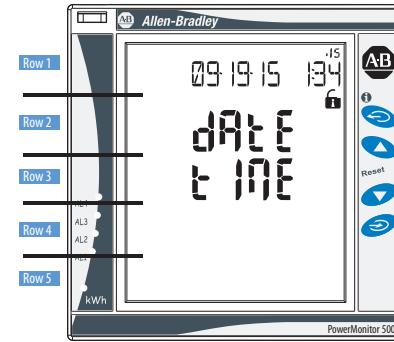

Installation and Wiring

Installation

This section shows the dimensions of the unit for installation in a panel.

Figure 5 - Base Unit Dimensions

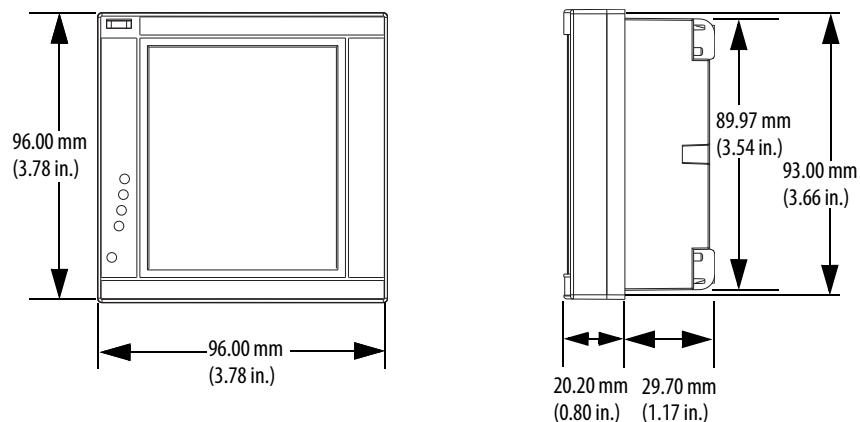


Figure 6 - Panel Cut-out


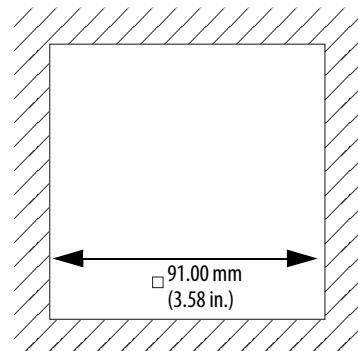


Figure 7 - Factory-installed Optional Modules

Digital and Analog Output Modules

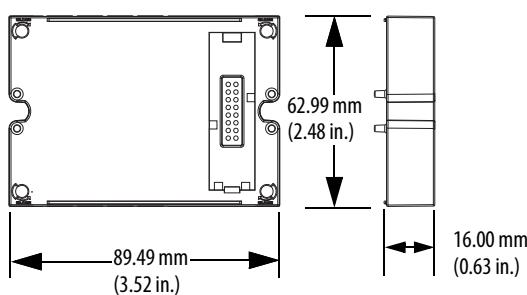

Serial and Ethernet Communication Modules

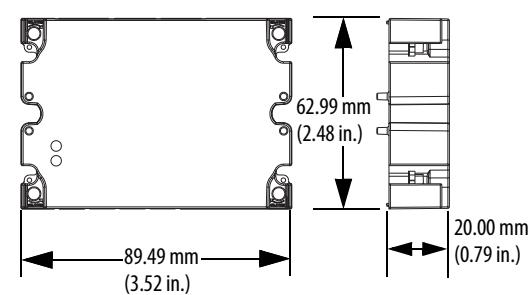


Figure 8 - Installation in Panel


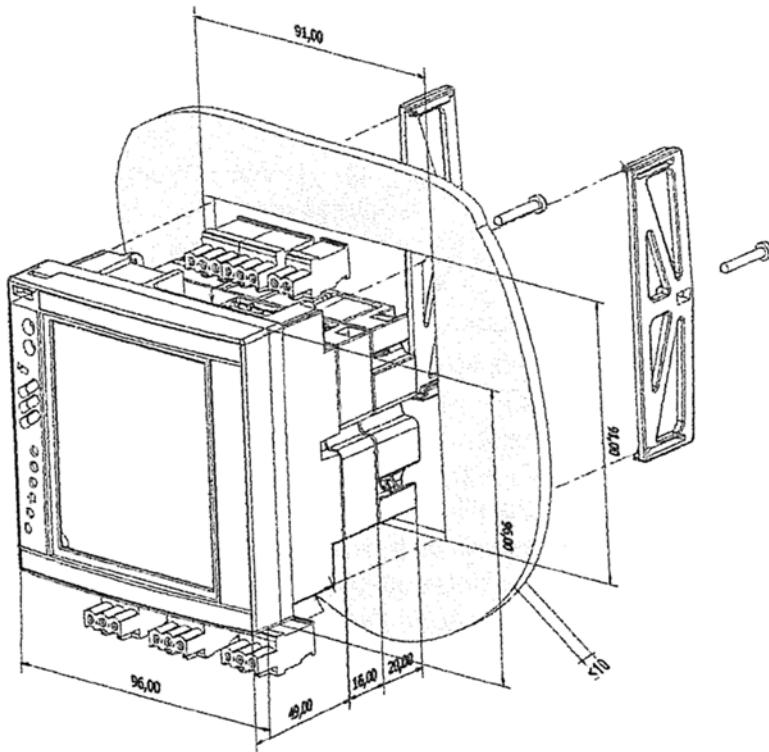


Figure 9 - Rear View of Unit Showing Wiring Terminals

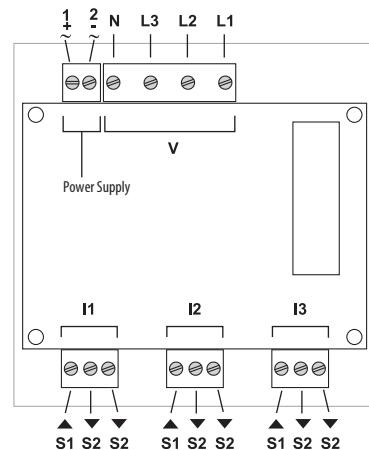

Wiring Diagrams

The PowerMonitor™ 500 unit can monitor various three-phase, single-phase, and split-phase circuits. Select the voltage connections, current wiring, and system metering mode to match the configuration of the circuit being monitored.


[Table 4](#) provides a key for you to select the proper wiring diagrams and system metering modes.

Table 4 - Wiring Diagram Explanation

| Circuit type | No. of CTs | No. of PTs | Wiring Diagram | System Configuration |
|---------------------------------------|------------|------------|---------------------------|----------------------|
| 3-phase, 4-wire Wye Unbalanced load | 3 | - | Figure 12 | 3Pn |
| | 3 | 3 | | |
| 3-phase, 2-wire Wye Balanced load | 1 | - | Figure 11 | 3P2 |
| | 1 | 1 | | |
| 3-phase, 3-wire Delta Unbalanced load | 3 | - | Figure 13 | 3P |
| | 2 | - | | |
| Open Delta Unbalanced load | 3 | 2 | Figure 13 | 3P |
| | 2 | 2 | | |
| Open Delta Balanced load | 1 | 2 | Figure 14 | 3P1 |
| 3-phase, Single CT Balanced load | 1 | - | Figure 14 | 3P1 |
| | 1 | 3 | | |
| Split-phase | 2 | - | Figure 15 | 2P |
| | 2 | 2 | | |
| Single phase | 1 | - | Figure 16 | 1P |
| | 1 | 1 | | |

The wiring diagrams in this manual are drawn with U.S. (NEMA) conventions. For convenience, a connection diagram is shown in IEC style on the left and in its corresponding NEMA style (used in the U.S.) on the right.

Figure 10 - Wiring Diagram Interpretation

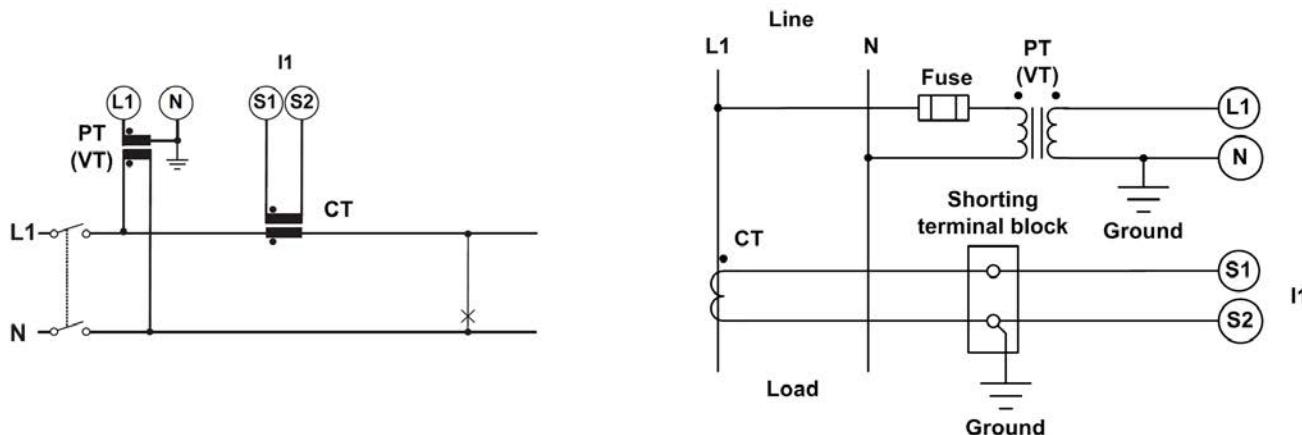

These diagrams are simplified. Wiring of the power monitor must comply with all applicable codes, standards, and regulations. Protect voltage and control power wiring with suitable overcurrent protection. Connect current transformer (CT) secondary wiring through a suitable shorting terminal block.

IMPORTANT In these diagrams, 'balanced load' configurations permit 3-phase measurement by using only one phase connection. Unbalance in the measured circuit affects the accuracy of the measurements.

Figure 11 - 3-phase, 2-wire Wye, Balanced Load

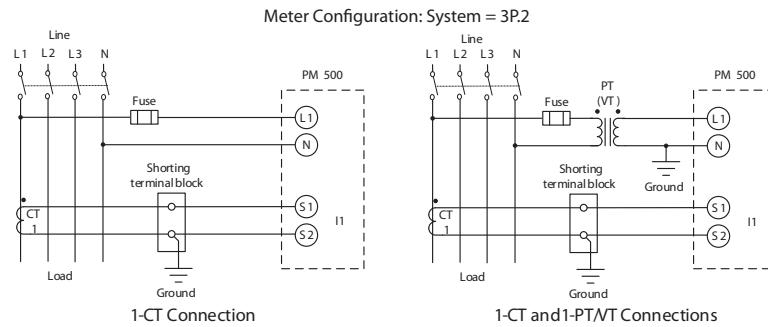


Figure 12 - 3-phase, 4-wire Wye, Unbalanced Load

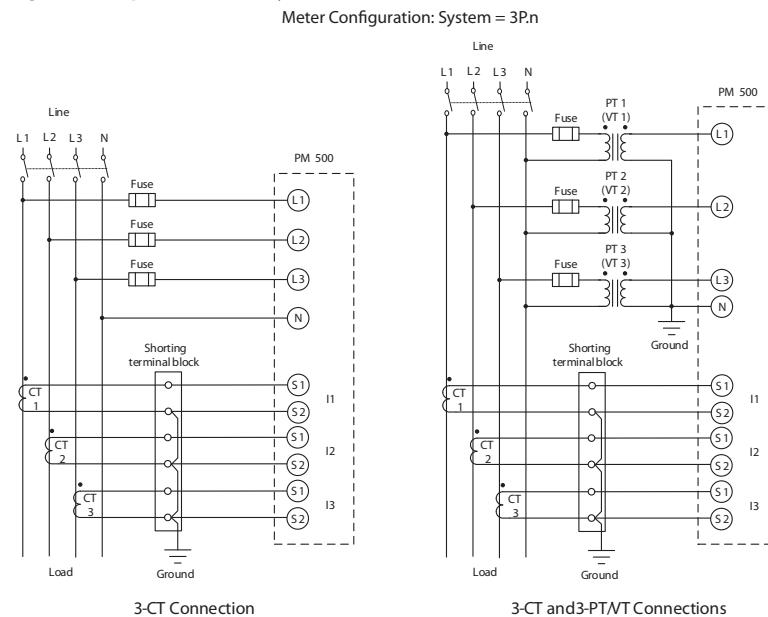
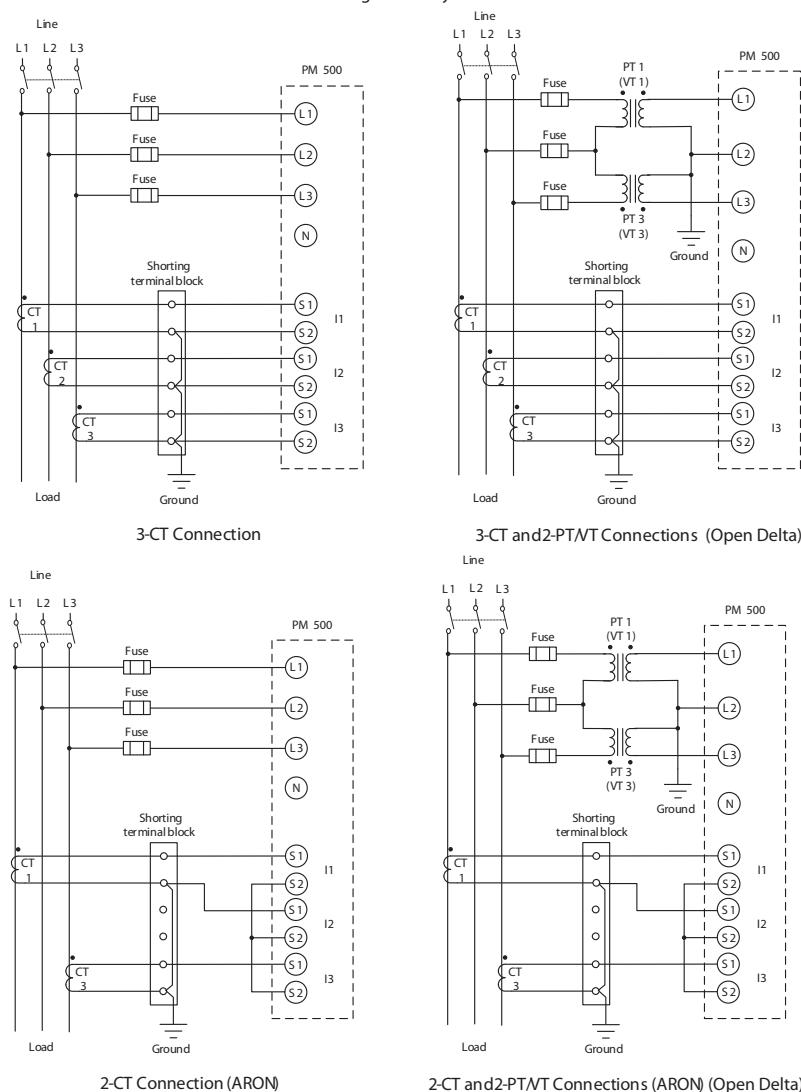


Figure 13 - 3-phase, 3-wire Delta, Unbalanced Load

Meter Configuration: System = 3P

**Figure 14 - 3-phase, Single CT, Balanced Load**

Meter Configuration: System = 3P.1

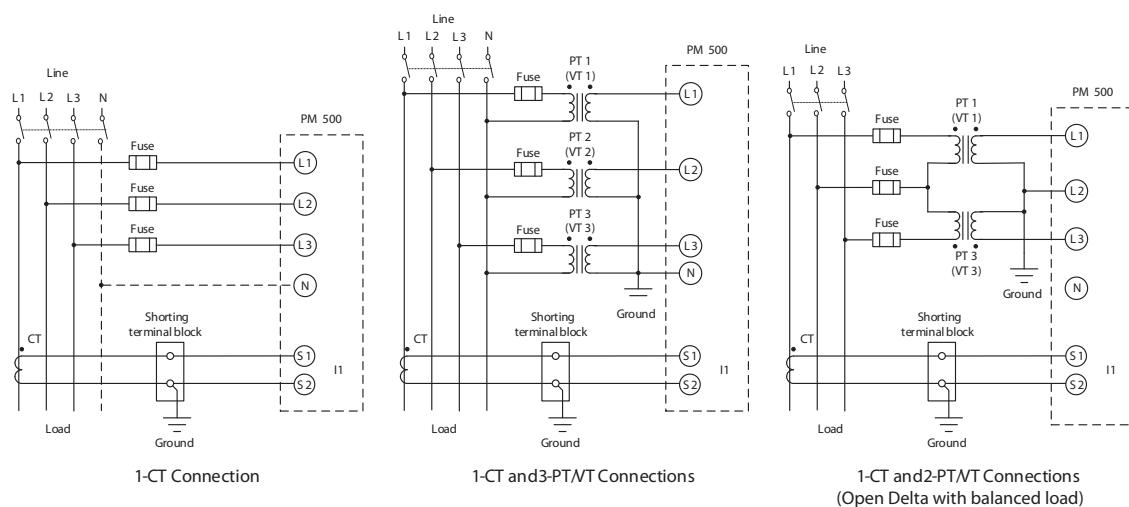


Figure 15 - Split-phase

Meter Configuration: System = 2P


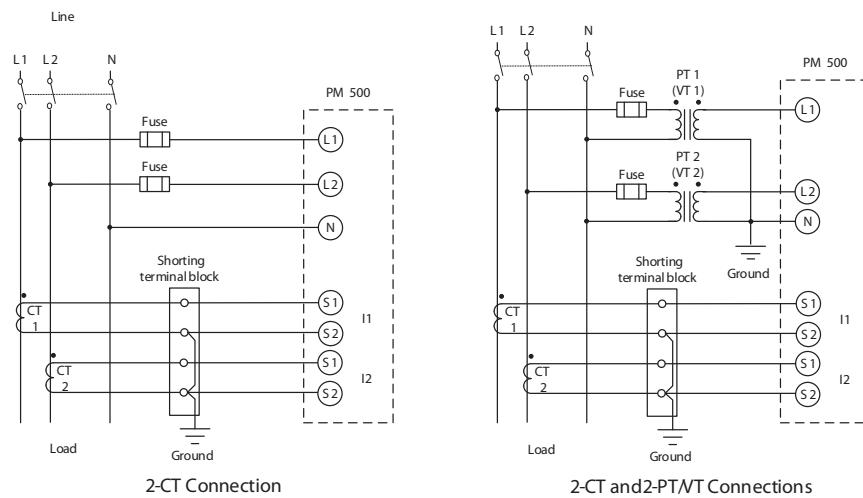


Figure 16 - Single-phase

Meter Configuration: System = 1P

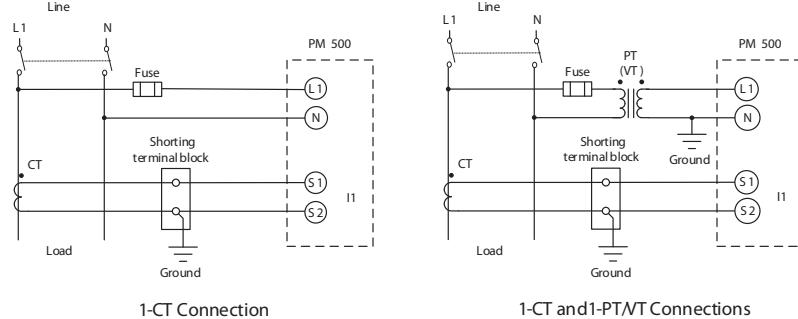


Supply Power

Connect the PowerMonitor 500 unit to a source of supply power through user-provided disconnecting means, such as a switch or circuit breaker close to the power monitor. Provide overcurrent protection that is sized to protect the wiring. Apply supply power only after all wiring connections are made to the unit.

Figure 17 - Supply Power

120/240V AC 50/60Hz, or 120/240V DC

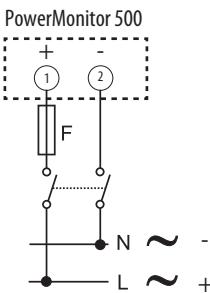

$F = 250V (T) 630\text{ mA}$

Factory Installed Option Wiring

Figure 18 - Pulse (digital) Outputs (P option)

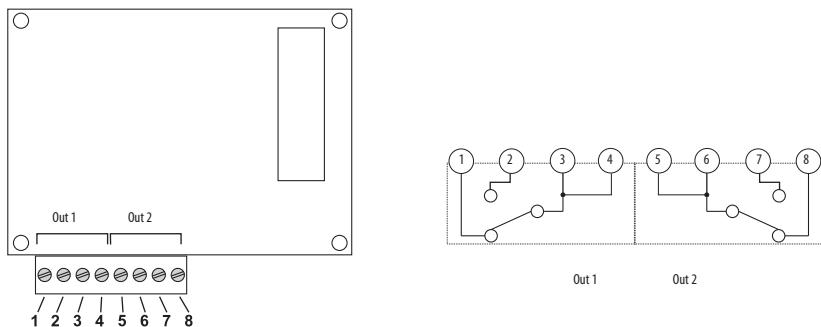


Figure 19 - Analog Outputs (A option)

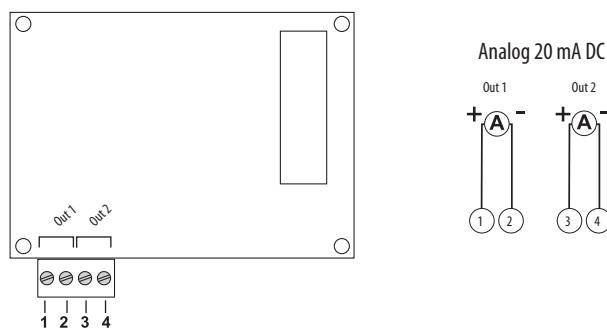
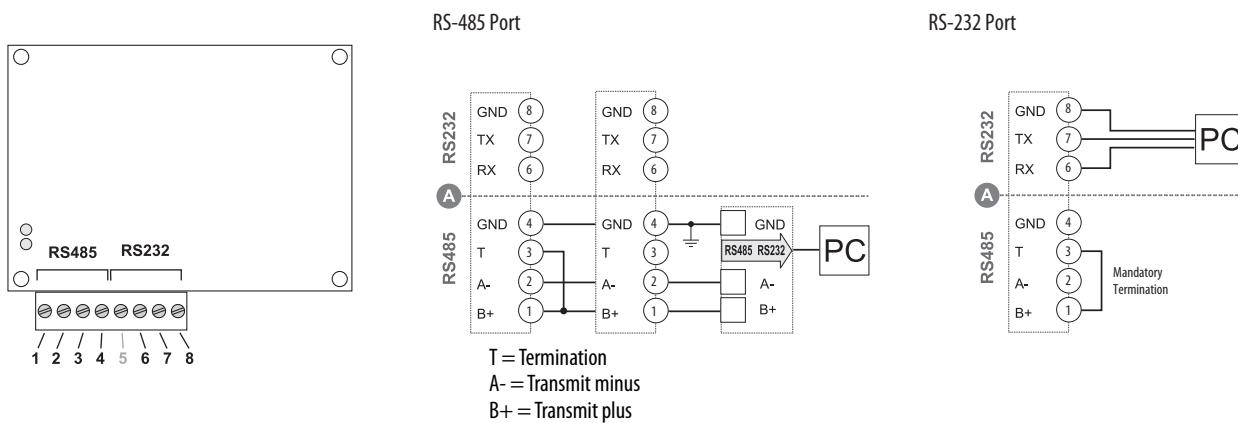
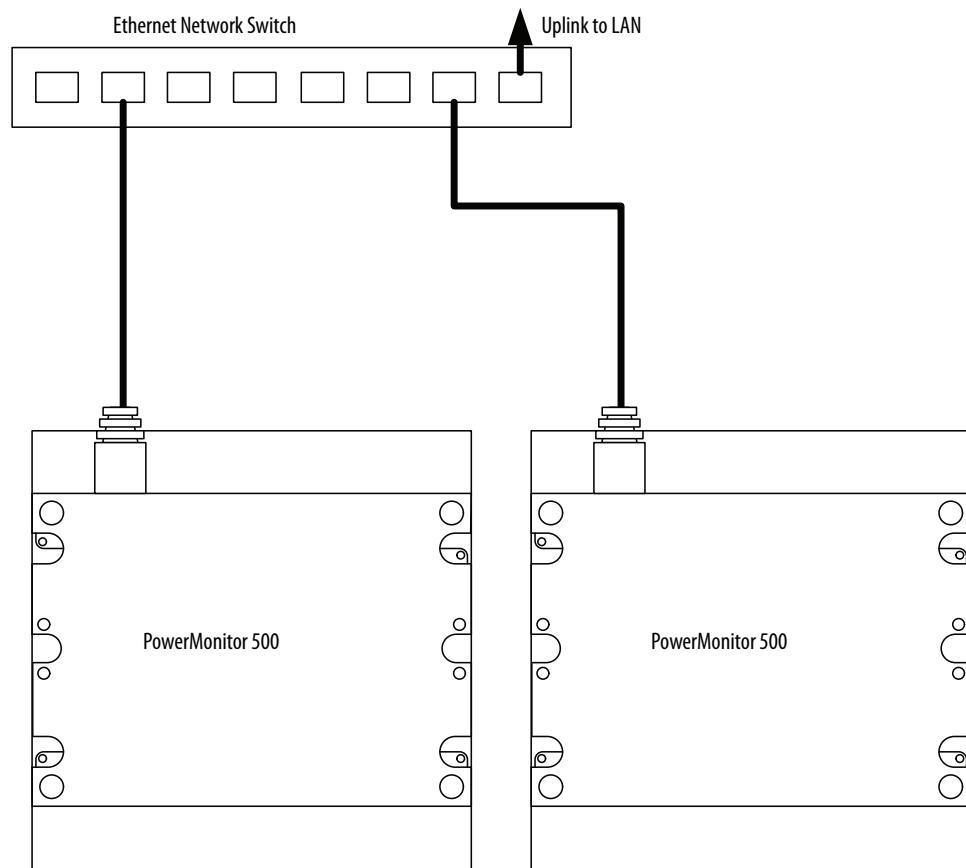


Figure 20 - Serial RS-485 and RS-232 Communication Wiring (485 option)

IMPORTANT Additional devices that are provided with RS-485 are connected in parallel. The termination of the serial output is implemented only on the last instrument of the network, with a jumper between (B+) and (T). The jumper applies an internal termination resistance between (A-) and (B+). The RS-232 and RS-485 communication ports cannot be connected and used simultaneously.

Figure 21 - Ethernet Communication (ENT option)

The PowerMonitor 500 unit connects to industry-standard Ethernet hubs and switches by using standard CAT-5 UTP (unshielded twisted-pair) cables with RJ45 connectors. [Table 5](#) shows the cable and connector pin assignments.

Table 5 - Ethernet Network Connections

| Terminal | Signal |
|----------|--------|
| 1 | TX+ |
| 2 | TX- |
| 3 | RX+ |
| 4 | |
| 5 | |
| 6 | RX- |
| 7 | |
| 8 | |

Notes:

Unit Configuration

TIP For configuration of units with base firmware revision 11 and earlier, see [Appendix D](#).

Configure with the Display

The PowerMonitor™ 500 unit provides menu-based configuration (programming) by using its front panel display. The programming menus let you select parameters to edit, select digits within parameters, and increase or decrease the value of each digit.

Place the unit in Programming mode by pressing Program/select (8) for about 2 seconds. The front panel displays the PASSWORD? menu page 0 in Editing mode. Enter the correct password by using the Up and Down arrows (the default password is 0) and press Program/select. The front panel then displays the BACKLIGHT menu page 10.

See the programming flowchart that begins on [page 28](#) for a view of the organization of programming menus and submenus. Each page is identified with a number, which is displayed in the top right corner. Menu page numbers end in zero, while submenu pages end in 1 through 9. For example, the System page is menu 40. Likewise, the Dmd page is menu 70, and the demand interval Time page is menu 72.

While you are programming the power monitor, the display items and control buttons function one way when you are navigating between menu or submenu pages, and another way when you are editing a menu page.

Figure 22 - Front Panel Display

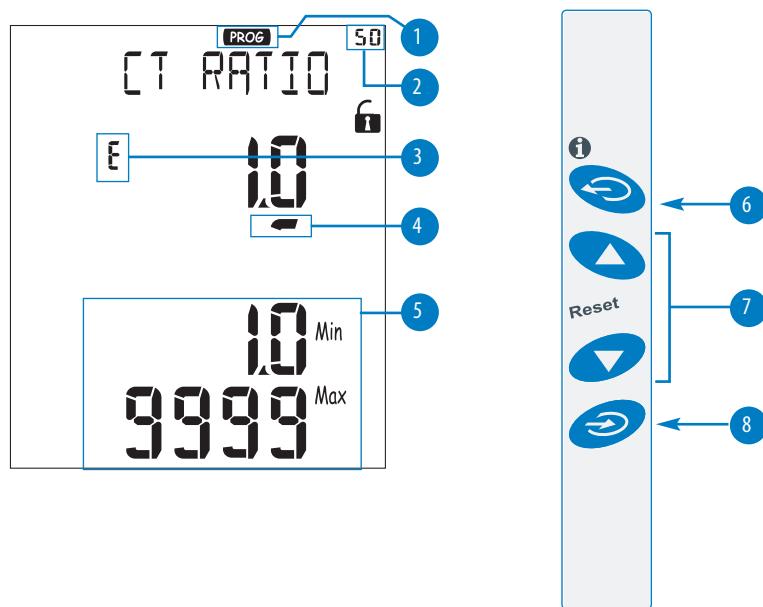


Table 6 - Front Panel Display Descriptions


| Display Item | Description | Navigating Menus | Editing a Menu |
|--------------|----------------------------|---|--|
| 1 | Programming mode indicator | Indicates programming mode. | |
| 2 | Programming menu page | Identifies the current programming menu page. See the programming flowchart that begins on page 28 . | |
| 3 | Editing mode indicator | Does not appear. | Indicates the parameter being edited. |
| 4 | Cursor | Does not appear. | Appears beneath the digit currently being edited. |
| 5 | Permitted range | Displays the permitted range of values for the selected parameter. | |
| 6 | Exit button | <ul style="list-style-type: none"> When in a menu page, exits Programming mode without saving changes. Program/select button confirms exit. When in a submenu page, exits to menu page. | <ul style="list-style-type: none"> Moves the cursor one digit to the left. When the leftmost digit is selected, dP is indicated and you can change the decimal point and multiplier (see Edit Decimal Point and Multiplier on page 27). When held for at least 2 seconds, cancels the edit and restores the previous value of the selected parameter. |
| 7 | Up button | Selects the next higher-numbered menu or submenu page. | <ul style="list-style-type: none"> Increments the value of the digit indicated by the cursor. When dP is indicated, increments the decimal point and multiplier. |
| | Down button | Selects the next lower-numbered menu or submenu page. | <ul style="list-style-type: none"> Decrements the value of the digit indicated by the cursor. When dP is indicated, decrements the decimal point and multiplier. |
| 8 | Program/select button | <ul style="list-style-type: none"> Press and hold for 2 seconds to enter the Program mode. Selects a menu page for editing. When in a menu page with submenus, displays the first submenu page. After pressing the Exit button, confirms exit from Programming mode without saving changes. From SAVE menu page 260, saves new configuration and exits Programming mode. | Stores the new value of the selected parameter, but does not save the new configuration to the power monitor. |

IMPORTANT To save programming changes, navigate to the SAVE menu page 260 and press Program/select. To exit the Programming mode without saving any changes, press Exit and confirm by pressing Program/select. If no buttons have been pressed for 2 minutes, the power monitor exits Programming mode without saving any changes.

TIP You can make programming changes by using the PowerMonitor 500 software.


Edit Decimal Point and Multiplier

When the cursor is beneath the last digit on the left, pressing Exit (6) lets you change the decimal point and the multiplier (9) (k or M). The blinking 'dP' (decimal point) text (10) indicates this capability.

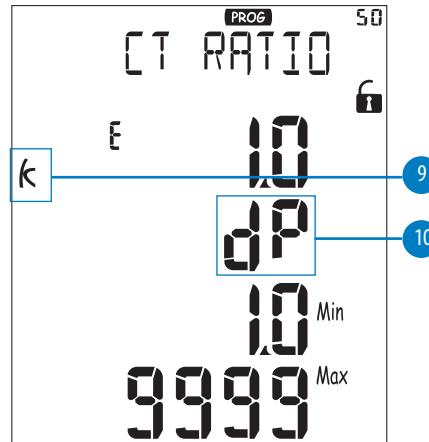


To modify the decimal point position and the multiplier, use the Up and Down arrow (7) to select the desired value.

Configuration Flowchart

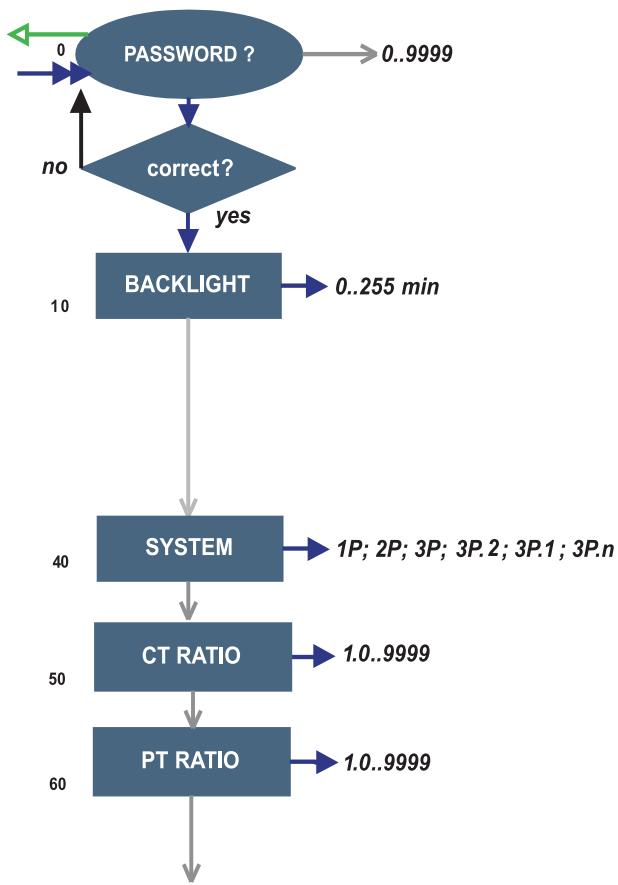

The following flowchart shows the configuration menus and submenus that are accessed through the display. To navigate through the menu pages, use the up and down arrows. To enter Edit mode or to access a submenu, press the Program/select button. The menu pages available depend on your module type.

- 0 PASSWORD?: enter password by using up and down arrows to change the digit. Use the Exit button to move the cursor between digits. Press the Program/select button to confirm password. The default password is 0.
- 10 BACKLIGHT: adjusts backlight time from 0...255 minutes (0 = always on).
- 40 SYSTEM: this function lets you select the type of electrical system.
See pages 17...20 for descriptions and wiring diagrams that correspond to the system type designations, such as, 3P and 3P.n.
- 50 CT RATIO: this function lets you select the value of the CT ratio (primary/secondary ratio of the current transformer being used). Example: if the CT primary (current transformer) has a current of 300 A and the secondary a current of 5 A, the CT ratio corresponds to 60 (300 divided by 5).
- 60 PT RATIO: this function lets you select the value of the PT (VT) ratio (primary/secondary ratio of the potential/voltage transformer being used). Example: if the primary of the connected PT is 20 kV and the secondary is 100V, then the PT ratio corresponds to 200 (20,000 divided by 100). If the voltage level is such that PTs are not required and are not in place, configure the PT ratio to 1.0.

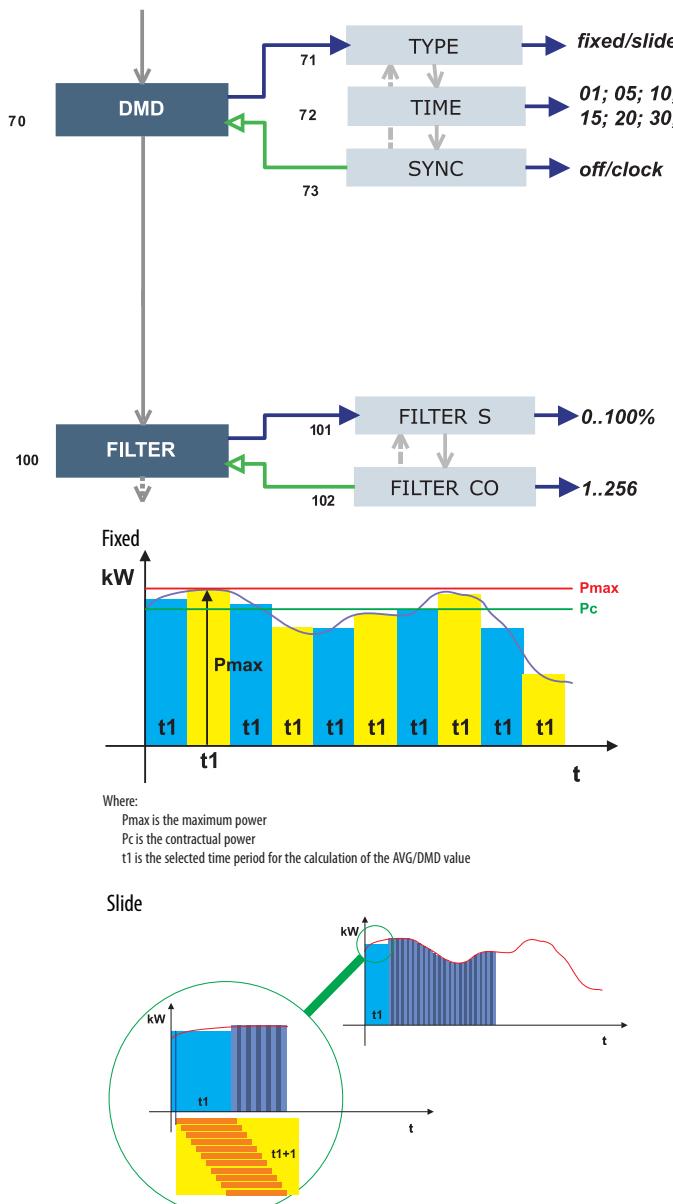

- 70 DMD: This function lets you select the calculation method of the DMD/AVG value of the selected variable.

- 71 TYPE: select the type of Calculation mode to be used for the DMD/AVG calculation.

FIXED: The instrument calculates the AVG/DMD value of the measured variable over the selected interval, updates the AVG/DMD value at the end of the interval, then resets and starts a new calculation.

SLIDE: When first configured, the instrument calculates the AVG/DMD value and updates its value at the beginning after the first selected interval. After the first interval, the instrument calculates the AVG/DMD value every minute. After the calculation, the instrument generates a window whose width is the selected interval and that moves forward every minute.

- 72 TIME: select the time interval for the DMD/AVG calculation. Default is 15 minutes.

- 73 SYNC: select the Synchronization mode. That mode is the method that controls the calculation method of the average/demand according to the selected time.


- 100 FILTER: The digital filter makes it possible to stabilize the display of fluctuating measurements.

See [Digital Filtering Operation on page 35](#).


- 101 FILTER S: set the operating range (span) of the digital filter. The value is expressed as a % (filter to 0.0 means filter excluded).

- 102 FILTER CO: set the filtering coefficient of the instantaneous measures. By increasing the value, also the stability and the settling time of the measures are increased.


IMPORTANT Some specific menus display only if the relevant modules are installed.

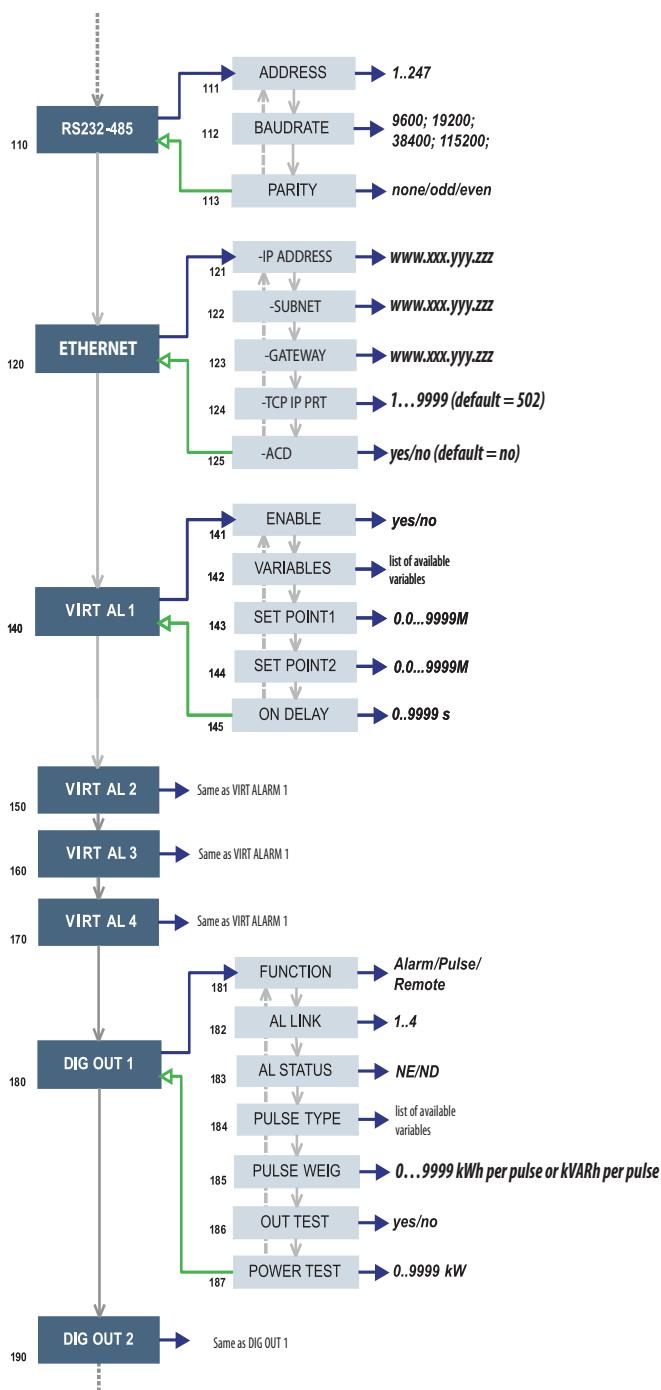

- 110 RS232-485: User settings for the RS-232 and RS-485 serial communication ports.
- 120 ETHERNET: User settings for the Ethernet communication port.
- 140 VIRT AL 1: This virtual alarm function lets you set the alarm parameters.
 - 141 ENABLE: enable (YES) or disable (NO) the alarm.
 - 142 VARIABLES: set the variable to be linked to the alarm, see [Table 36](#) for variables.
 - 143 SET 1: set the on alarm set point of the variable.
 - 144 SET 2: set the off alarm set point of the variable.
 - 145 ON DELAY: set a delay on activation of the alarm.
- 180 DIG OUT 1: This function lets you link a virtual alarm to the digital relay output and to its working parameters.
 - 181 FUNCTION: Alarm - the digital output is enabled when the associated alarm status occurs.
Pulse - the measured energy is retransmitted by the digital output with pulses.
Remote - the digital output can be controlled through a command that is sent through the serial communication port.
 - 182 AL LINK: select the virtual alarm that it has to be associated.
 - 183 AL STATUS: 'ND' (normally de-energized relay) or 'NE' (normally energized relay).
 - 184 PULSE TYPE: The variable linked to the pulse output. See [Table 37](#) for Pulse Output variables.
 - 185 PULSE WEIG: selects the pulse weight (kWh per pulse or kVARh per pulse).
 - 186 OUT TEST: Tests the digital output. YES enables the test, No disables the test.
 - 187 POWER TEST: sets a simulated power value (kW) to test the energy pulse output.

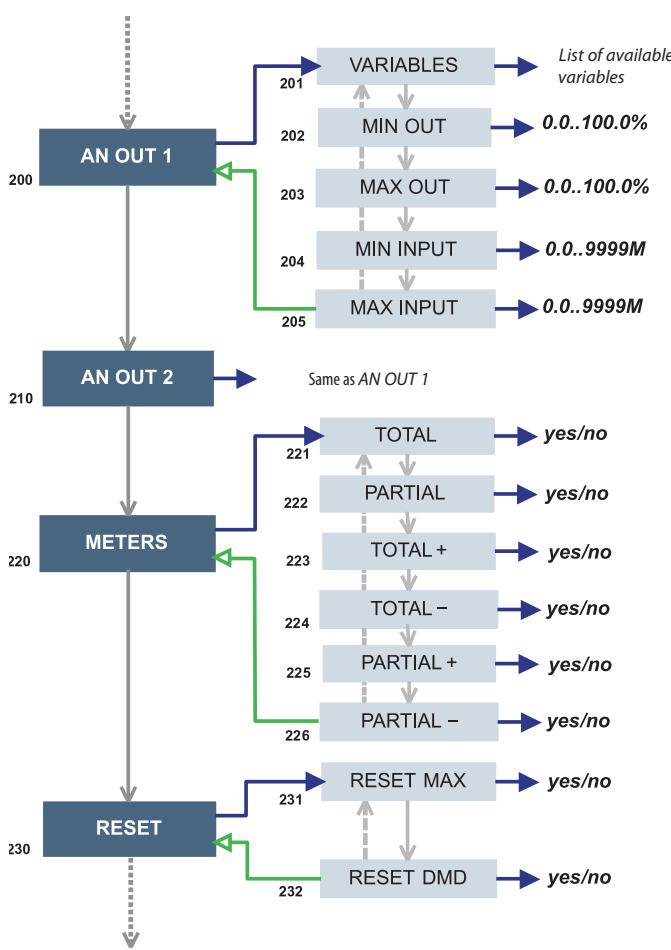

- 200 AN OUT 1: User programming of the analog outputs (0...20 mA).
 - 201 VARIABLES: selects the variable to be retransmitted with the analog output, see [Table 36](#) for variables.
 - 202 MIN OUTPUT: sets the value that is expressed as % of the output range (0...20 mA) that corresponds to the minimum measured value.
 - 203 MAX OUTPUT: selects the value that is expressed as % of the output range (0...20 mA) that corresponds to the maximum measured value.
 - 204 MIN INPUT: minimum value of the variable input range, corresponds to the 'MIN OUTPUT' value of the analog output.
 - 205 MAX INPUT: maximum value of the variable input range corresponds to the 'MAX OUTPUT' value of the analog output.
- 220 METERS: reset the ENERGY METERS. Choose among the following:
 - 221 TOTAL: resets all total energy meters.
 - 222 PARTIAL: resets all partial energy meters.
 - 223 TOTAL +: resets the total meters of imported energy.
 - 224 TOTAL -: resets the total meters of exported energy.
 - 225 PARTIAL +: resets the partial meters of imported energy.
 - 226 PARTIAL -: resets the partial meters of exported energy.
- 230 RESET: Resets the MAX or dmd stored values.

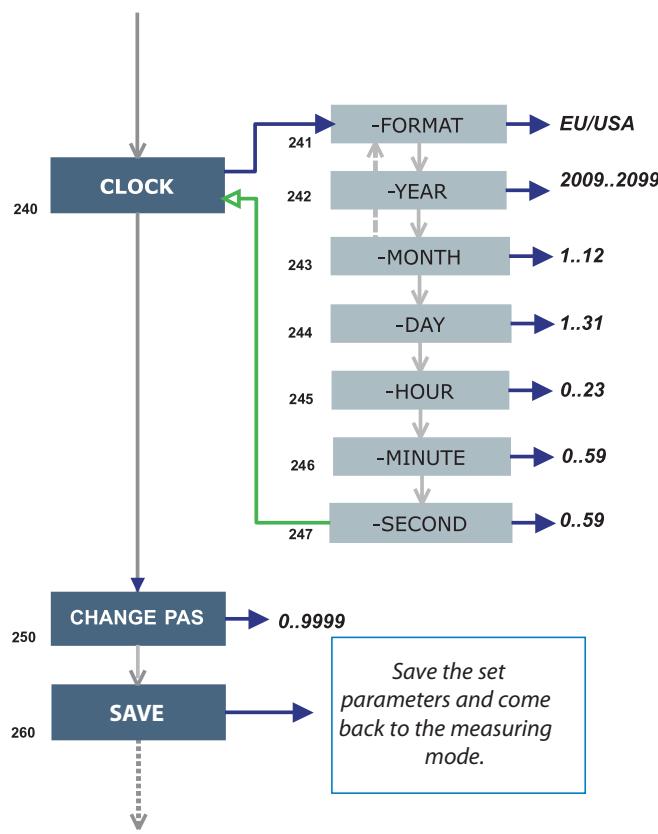

- 240 CLOCK:

- 241 FORMAT: UE, sets the European time format as 24h (00:00) or sets the time format as 12h (12:00 AM/PM).
- 242 YEAR: sets the current year.
- 243 MONTH: sets the current month.
- 244 DAY: sets the current day.
- 245 HOUR: sets the current hour.
- 246 MINUTE: sets the current minute.
- 247 SECOND: sets the current second.

- 250 CHANGE PAS: this function lets you modify the PASS value with a new value (from 0...9999).

- 260 SAVE:

- To save programming changes, press Program/select.
- To exit the Programming mode without saving any changes, press Exit and confirm by pressing Program/select.
- If no buttons are pressed for two minutes, the unit exits Programming mode without saving changes.

Configure the IP Address

The PowerMonitor 500 unit comes with default IP configuration settings that you can view or change by using the front panel display.

The factory default settings are:

IP Address: 192.168.0.1


Subnet Mask: 255.255.255.0

Gateway Address: 0.0.0.0

Follow these steps and use [Figure 23](#) to configure a static IP address.

1. Press and hold  (4) for at least two seconds to enter Programming mode.
PROG appears at the top of the display and the PASSWORD page is displayed.

Figure 23 - Program Screen and Navigation Buttons

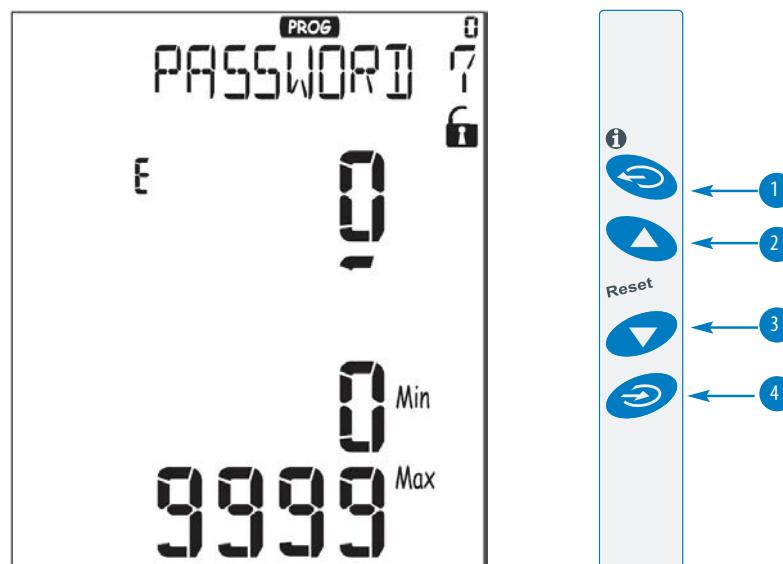

2. On the Password page, press  (4) to enter the default password of 0.
3. Press the Up arrow  (2) to navigate through the pages to the Ethernet page.
4. Press  (4) to access the ETHERNET page
The IP ADDRESS page is displayed.
5. Press  (4) to edit the parameter.
The 'E' appears on the first row.

6. Press the up  (2) and down  (3) arrow to increase/decrease the value.
7. Press  (1) to edit the next row on the display.

For example, to edit the second octet of the IP address.
8. Press  (4) when you have finished editing each octet.
9. Press the Up arrow  (2) to access the SUBNET page.
10. Repeat steps 5...8 to configure the subnet mask.
11. Press the Up arrow  (2) to access the GATEWAY page.
12. Repeat steps 5...8 to configure the gateway address.
13. Press  (1) to return to the ETHERNET page.
14. Press the Up arrow  (2) several times to navigate through the pages to the SAVE page.

IMPORTANT For firmware revision 11.000 and earlier, there is no SAVE page. Instead, navigate to the END page.

15. Press  (4) to save the changes and exit Programming mode.

The IP address of the PowerMonitor 500 unit is now successfully configured.


Digital Filtering Operation

Digital filtering smooths out the display of fluctuating values. The parameter FILTER S defines the operating range of the filter. This operating range is represented as a yellow band (each small square is one digit). While the measured value (red curve in [Figure 24](#)) is within this band, the filter is active. Once the value exceeds the operating range, the filter is deactivated and a new band is active around the new value. The range of fluctuation (in digits) is a good starting value for such parameters.

The parameter FILTER CO represents the filtering coefficient. The higher the FILTER CO, the smoother the curve of the displayed values (black in [Figure 24](#)). There is not a theoretical rule to define this parameter, it is set in the field. One rule is to start with the value of the FILTER S coefficient and then increase FILTER CO until the desired stability is reached.

The digital filter affects the values retransmitted both via serial communication and analog output.

Figure 24 - Digital Filter

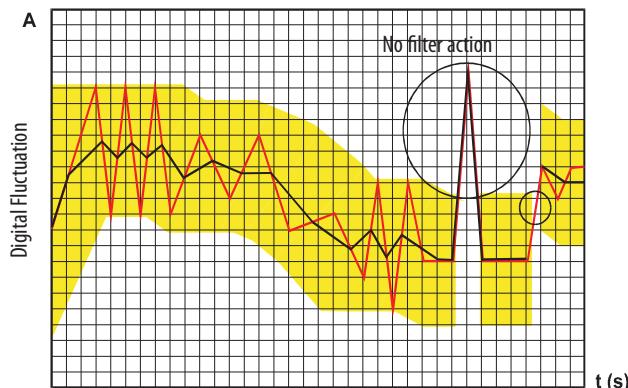

Digital Filter Programming Examples

This section gives digital filter programming examples.

Example 1

This example describes how to stabilize the displayed value of the VL-N variable, which fluctuates between 222V and 228V. The parameters of the digital filter have to be programmed as follows.

FILTER S: The variable fluctuates within the mean value whose amplitude is equal to $\pm 0.75\%$ of the full scale rated value of the variable itself, which is obtained by the following calculation:

$$(228 - 222)/2 = \pm 3V, \text{ then } \pm 3 * 100/400V = \pm 0.75\% \\ \text{where } 400V \text{ is the line-to-neutral rated value of a 1420-V2 unit input}$$

The FILTER S parameter, which represents the action range of the digital filter, is programmed to a value that must be slightly higher than the percentage amplitude of the fluctuation, for example, 1.0%.

FILTER CO: if the new value that is measured by the instrument is within the action range of the filter, the new displayed value is obtained by adding algebraically the previous value to the variation divided by the filtering coefficient. As a consequence, a value higher than this coefficient implies a longer settling time and therefore better stability. You generally obtain the best result by setting the filtering coefficient to a value equal to at least 10 times the range parameter value.

In the following example, $1.0 \times 10 = 10$, the stability of the filtering coefficient can be improved by increasing the filtering coefficient; the allowed values are included within 1 and 255.

Example 2

This example describes how to stabilize the value of the displayed System Real Power (W), which fluctuates 300...320 kW. In this example, the load is connected to the instrument with a 300/5 A CT and a direct measure of the voltage.

The parameters of the digital filter must be programmed as follows.

FILTER S: the variable fluctuates within the mean value whose amplitude is equal to $\pm 2.78\%$ of the full scale rated value of this variable. This value is obtained by the following calculation:

$$(320 - 300) / 2 = \pm 10 \text{ kW}, \\ \text{then } \pm 10 \times 100 / 360 \text{ kW} = \pm 2.78\%,$$

where 360 kW is the rated value of the System Real Power of a 1420-V2 unit input, at the CT and VT ratios and obtained with the following formula:

$$\text{V рated} * \text{V T} * \text{I N} * \text{C T} * 3$$

Where:

V_{LN} = rated input voltage (400V for the V1 input)

VT = primary/secondary ratio of the voltage transformer being used

IN = rated current (5 A)

CT = primary/secondary ratio of the voltage transformer being used (in this example $400 \times 1 \times 5 \times 60 \times 3 = 360 \text{ kW}$).

The FILTER S parameter, which represents the digital filtering coefficient action range, is programmed to a value that must be slightly higher than the percentage of the fluctuation: for example 3.0%.

FILTER CO: if the new value that is acquired by the unit is within the filtering action range, the new displayed value is obtained by adding algebraically the previous value to the variation divided by the filtering coefficient. As a consequence, a value higher than this coefficient implies a higher settling time and therefore better stability. Therefore, the best result is obtained by setting the filtering coefficient to a value equal to at least 10 times the value of the range parameters. In the example, $3.0 \cdot 10 = 30$. To improve the stability, you can increase the filtering coefficient; the admitted values are included within 1 and 255.

Example 3

It is necessary to stabilize the value of the displayed variable A L1 (phase current 1), which fluctuates in the range 470 A and 486 A.

To be able to manage the alarm function and activation and deactivation of the relay, this value is not to be subject to continuous fluctuations. In this example, we have considered using a 500/5 A CT. Program the parameters of the digital filter as follows:

FILTER S: the variable fluctuates within the mean value whose amplitude is equal to $\pm 1.60\%$ of the full scale rated value of this variable (obtained with the calculation:

$$(486 - 470) / 2 = \pm 8 \text{ A, then } \pm 8 * 100 / 500 \text{ A} = \pm 1.60\%$$

where 500 A is the value referred to the primary of the transformer being used).

The FILTER S parameter, which represents the action range of the digital filter, is programmed to a value slightly higher than the percentage amplitude of the fluctuation, for example 2.0%.

FILTER CO: if the new value that is acquired by the instrument is within the filtering action range, the new displayed value is calculated algebraically adding to the previous value the variation divided by the filtering coefficient. As a consequence, a higher value of this coefficient implies a higher settling time and therefore better stability. Therefore, the best result is obtained setting the filtering coefficient at a value equal to at least 10 times the value of the range parameter. In the example, $2.0 \cdot 10 = 20$. To improve the stability, you can increase the filtering coefficient; the admitted values are within 1 and 255.

Analog Output Configuration Examples

These examples apply to units with catalog numbers 1420-V1A and 1420-V2A.

Example 1: Power value retransmission with a 0...20 mA analog output.

This example describes how to retransmit measured power up to 100 kW with a 4...20 mA signal. Program the unit as follows:

- VARIABLE: $W\Sigma$ (system real power)
- MIN OUT: 20.0% means 4 mA. The calculation that is used is the following:
 $(100 \text{ minimum output}) / \text{full scale output} = 100 * 4 \text{ mA} / 20 \text{ mA} = 20\%$
- MAX OUT: 100.0% means 20 mA. The calculation is the following:
 $(100 * \text{maximum output}) / \text{full scale output} = 100 * 20 \text{ mA} / 20 \text{ mA} = 100$
- MIN INPUT: 0.0 k; the multiplier k, M, G can be selected on the unit according to the chosen VT and CT values
- MAX INPUT: 100.0 k; the k, M, G multipliers can be selected on the unit according to the selected VT and CT values

Example 2: Retransmission of the power factor (PF) value with the 0...20 mA analog output.

In this example, the unit is configured to retransmit the whole range of the allowed values for the PF with a signal from 0...20 mA. The value of the PF variable can vary between C0.001 and L0.000 (for each phase); these values, when retransmitted, correspond to 0 mA and 20 mA. When the PF value is equal to 1, the analog output value corresponds to the middle of the scale, which is 10 mA. Program the instrument as follows:

- VARIABLE: PF L1 (or L2 or L3 or $PF\Sigma$)
- MIN OUT: 0.0%
- MAX OUT: 100.0%
- MIN INPUT: C0.001 (the C symbol shows a CAPACITIVE value)
- MAX INPUT: L0.001 (the L symbol shows an INDUCTIVE value). L0.001 has been chosen as minimum value to be set to avoid undesirable rapid changes of the outputs

Alarm Configuration Example


These examples apply to units with catalog numbers 1420-V1P and 1420-V2P.

This example describes an alarm when a measured real power value exceeds a programmed threshold. For example, when 300 kW are exceeded, the alarm occurs and the load that is controlled by the relay output is disconnected.

IMPORTANT The PowerMonitor 500 unit is not intended to be applied as a protective device.

An ‘UP’ alarm is selected. The recommended programming is the following:

- ENABLE: YES
- VARIABLES: W system (W.)
- SET POINT 1: 300 kW
- SET POINT 2: 295 kW
- ON DELAY: set the desired number of seconds, for example 5 seconds

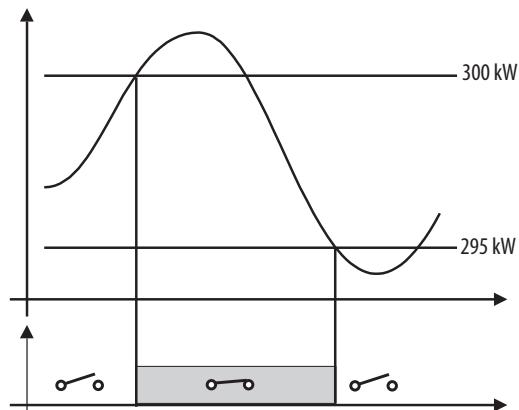

To program a ‘DOWN’ alarm, configure SET POINT 1 to be a lower value than SET POINT 2.

Digital Output Configuration Examples

These examples apply to units with these catalog numbers:

- 1420-V1P
- 1420-V1P-xxx
- 1420-V2P
- 1420-V2P-xxx

There are three ways to trigger the Digital Output:

- Automatically, by a configured alarm
- Automatically, by an energy counter (pulse)
- Manually, by using a Modbus write command (remote)

Example 1 - Alarm

When the digital output function is set to Alarm, the output is enabled when the associated alarm status is ON.

This example describes how to trigger the digital output by using a configured alarm.

Program the unit as follows within the DIG OUT 1 or DIG OUT 2 menu page:

- FUNCTION: Alarm
- AL LINK: AL1 (Alarm 1). This is the alarm that triggers the output
- AL STATUS: nd (normally de-energized)

The following DIG OUT parameters are not used when FUNCTION = Alarm:

- PULSE TYPE
- PULSE WEIG
- OUT TEST
- POWER TEST

In this example, the digital output is triggered, when Alarm 1 goes Active.

Example 2 Pulse

When the digital output function is set to Pulse, the measured energy is retransmitted by the digital output with pulses.

This example describes how to retransmit measured energy with a pulse output.

Program the unit as follows within the DIG OUT 1 or DIG OUT 2 menu page:

- FUNCTION: Pulse
- PULSE TYPE: Total kWh (the output pulses when the selected variable accumulates by the amount configured for the Pulse Weight)
- PULSE WEIG: 0.5 (the output pulses every 0.5 accumulated of the configured Pulse Type)

The following DIG OUT parameters are not used when FUNCTION = Pulse:

- AL LINK
- AL STATUS

In this example, the digital output pulses for every 0.5 kWh accumulated.

Pulse Output Test

The following DIG OUT parameters are optional and can be used to test the pulse output feature.

To test the Digital output pulse feature, first power cycle the PowerMonitor 500 unit, then configure the following parameters in the DIG OUT page:

- OUT TEST: yes
- POWER TEST: 60kW
- PULSE WEIG: 1 (kWh per pulse)

Given this equation with the configured parameters in this example, we can expect 1 pulse per minute with the simulated pulse output test.

POWER TEST/PULSE WEIG = Pulses per minute

$$60 \text{ kW} * (1 \text{ pulse}/1 \text{ kWh}) = 60 \text{ pulses/hour} = 1 \text{ pulse per minute}$$

The pulse output test stays active until the unit is power cycled or until the OUT TEST is changed back to 'no' to disable the test.

Example 3 Remote

When the digital output function is set to Remote, the digital output is controlled by using Modbus communication.

This example describes how to manually set or clear the digital outputs by using Modbus commands.

Program the unit as follows within the DIG OUT 1 or DIG OUT 2 menu page:

- FUNCTION: Remote

The following DIG OUT parameters are not used when FUNCTION = Remote:

- AL LINK
- AL STATUS
- PULSE TYPE
- PULSE WEIG
- OUT TEST
- POWER TEST

When the DIG OUT Function is set to Remote, the digital output is set or cleared by using the Modbus commands found in [Table 33](#) on [page 71](#).

Notes:

Communication

EtherNet/IP Communication


EtherNet/IP communication is supported in PowerMonitor™ 500 units that are ordered with optional Ethernet communication. Communication parameters in the power monitor must be configured. See [Unit Configuration on page 25](#). The Ethernet communication port supports 100 or 10 Mbps data rate, half-duplex, or full-duplex.

TIP The Ethernet hardware address (MAC ID) is printed on the unit label.

The PowerMonitor 500 unit provides nine Assembly Instances that contain real-time, maximum, demand, energy, and status data that can be read by a client by using implicit messaging (Class 1) or Explicit Messaging (Class 3 or UCMM).

[Appendix A](#) lists the Assembly Instances, sizes, data types, and other details. The power monitor returns EtherNet/IP data as little-endian, the same byte order that is used in the Logix family of programmable controllers.

Figure 25 - Byte Order Example

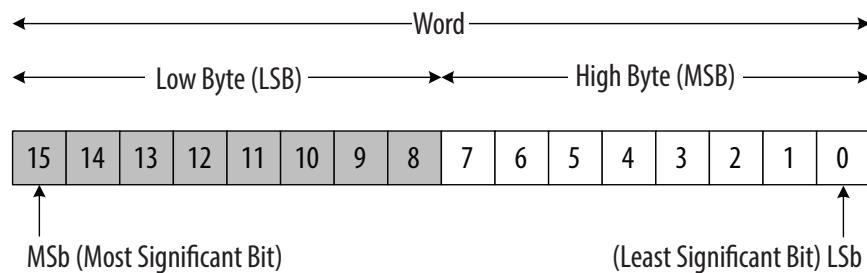

The power monitor supports the following communication commands:

- CIP Generic Assembly Object (Class 04), Get_Attribute_Single (Service Code 0x0E) for Attribute 3 (data)
- CIP Generic Assembly Object (Class 04), Get_Attribute_Single (Service Code 0x0E) for Attribute 4 (size in bytes)

IMPORTANT The power monitor does not support configuration or commands on EtherNet/IP network. To write the configuration of command data, refer to the section on [Modbus Communication on page 54](#).

See [Appendix C](#) for additional information on the EtherNet/IP communication implementation in the PowerMonitor 500 unit.

Electronic Data Sheet (EDS)

The EDS file is used to convey device configuration data that is provided by the manufacturer. You can obtain EDS files for the PowerMonitor 500 unit by downloading the file from the following website:

<http://compatibility.rockwellautomation.com/Pages/MultiProductDownload.aspx>


You can install EDS files on your computer by using the EDS Hardware Installation Tool that comes with RSLogix® Classic software, RSNetWorx™ for EtherNet/IP software, or other tools.

Explicit Messaging - Message Setup with CIP Generic

The following example shows how to configure your message instruction to read from a data table in the power monitor by using a CIP Generic message type for the Studio 5000 Logix Designer® application. This setup applies to ControlLogix® and CompactLogix™ programmable logic controllers. The CIP Generic message type does not support single element reads or writes. In this example, we read the Real-time Metering Values (Voltage and Current) data table from the power monitor.


We assume that you are familiar with basic message programming in a Logix controller. Once you configure the logic, message tag, destination tag, and message instruction, follow these steps to configure the message. This example uses a CompactLogix controller, revision 20.

1. Choose the appropriate parameters in the Message Configuration window.

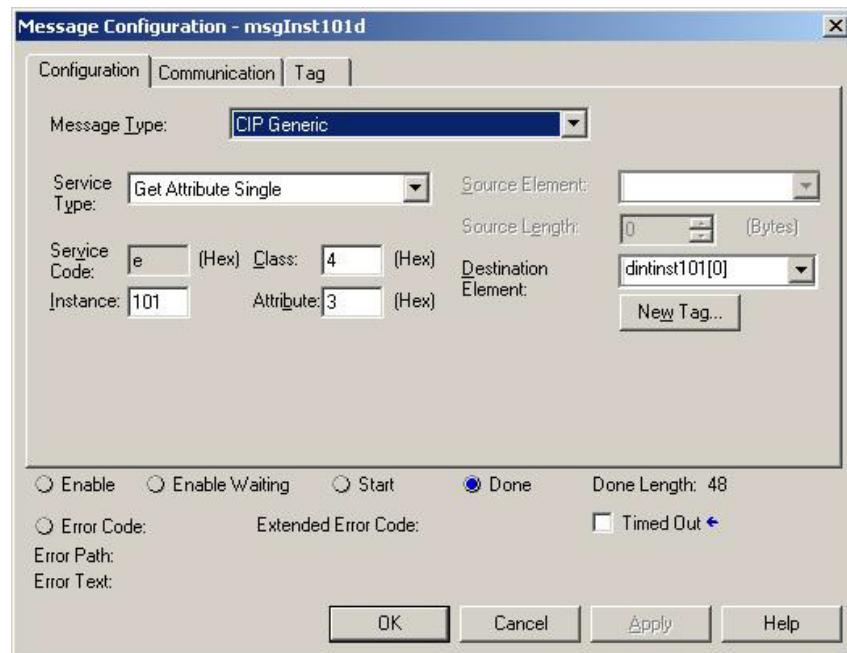

| Parameter | Choice |
|----------------|--|
| Message Type | Choose message type CIP Generic. |
| Service Type | Read: Select service type Get Attribute Single (E hex) |
| Instance | See Appendix A for the CIP Instance of the data table to read. In this example, the power monitor Real-time Metering Values (Voltage and Current) data table is instance 101 (decimal). |
| Class | 4 hex |
| Attribute | 3 hex |
| Destination | Get Attribute Single - This element is the first element of the controller tag that stores the data being read. The tag is an array of the applicable data type the same length as the Assembly Instance; in this example, 12 REAL elements. |
| Source Element | Not applicable to a Read |
| Source Length | Not applicable to a Read |

- Click the Communication tab and enter the path and method.

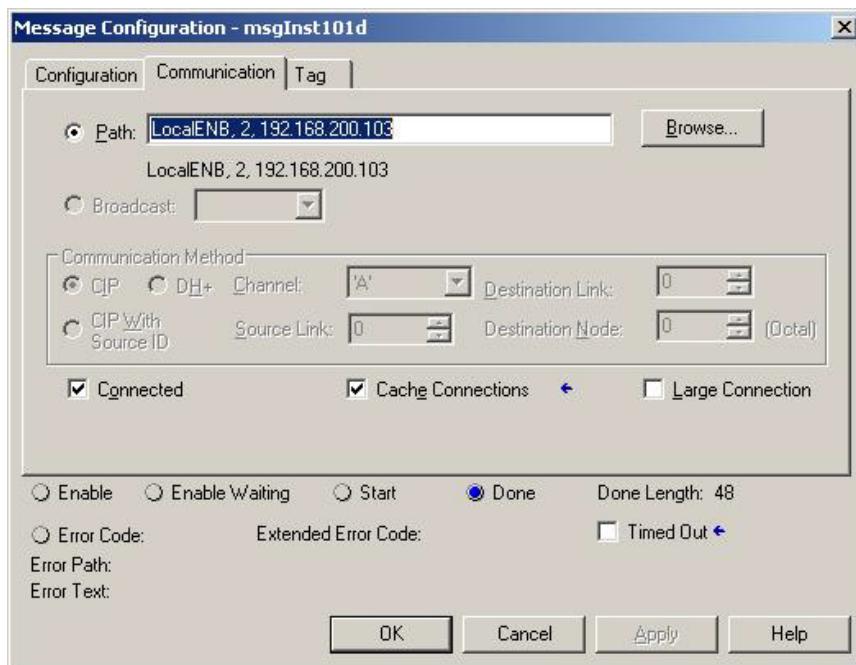

- Click OK to complete message setup.

| Path | Method |
|---|--------|
| <Ethernet Module, Port (always 2 for Ethernet), Power Monitor IP Address> | CIP |

Implicit Messaging

You can configure a PowerMonitor 500 unit by using either a generic Ethernet module input data connection or an EDS Add-On profile.

EDS Add-On Profile


You can add the PowerMonitor 500 unit to the Logix Designer application version 21 or later or RSLogix 5000 software version 20 with an electronic data sheet (EDS) based AOP (Add-on profile). Register the PowerMontior 500 EDS file by using the EDS Hardware Installation Tool on the computer on which you develop the software project.

IMPORTANT The EDS AOP is available for PowerMonitor 500 units with Ethernet firmware revision 5.001 and later.

Download the PowerMonitor 500 EDS files from the Product Compatibility and Download Center


<http://www.rockwellautomation.com/global/support/pcdc.page>

When adding a new module in the Studio 5000 application, the PowerMonitor 500 module is displayed under the catalog number 1420 after the EDS file has been installed.

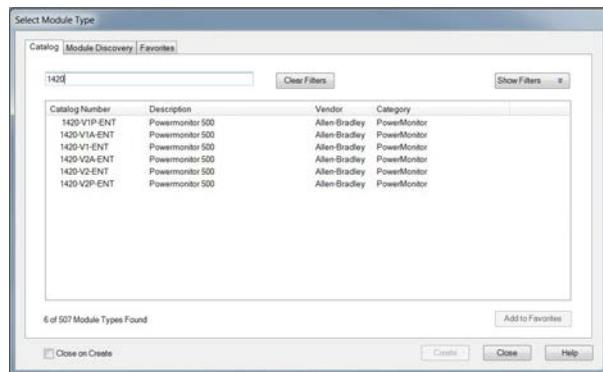


To use the EDS Add-on Profile, follow these steps.

1. Select the catalog number for the PowerMonitor 500 and click Create.
2. Enter the name and IP address of the power monitor.
3. Click Change under Module Definition.

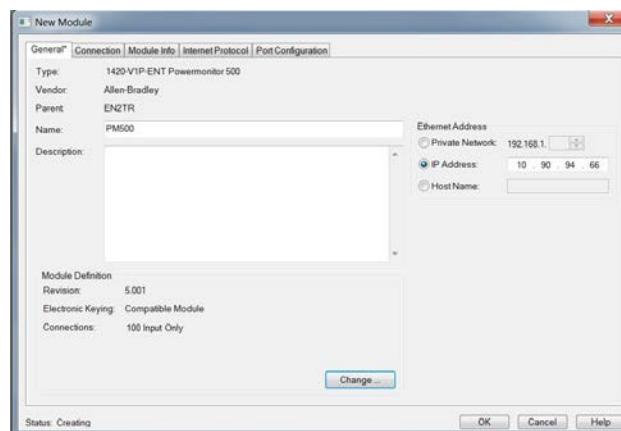

The Module Definition window opens. By default, the first connection is set to 100 Input Only.

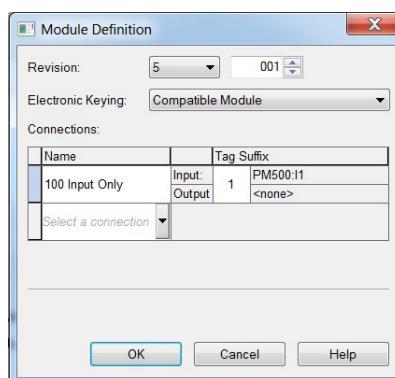

4. Click the Connection Name cell to open the pull-down menu of available selections for the first connection.

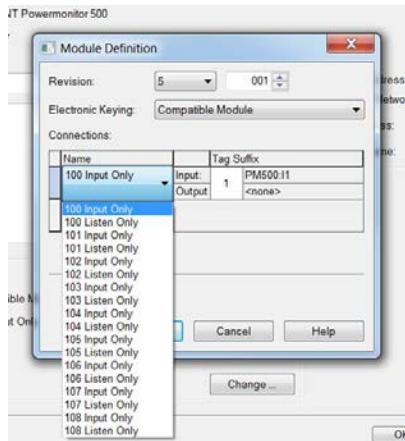


Table 7 - Available Connections


| Connection Name ⁽¹⁾ | Description | Data Access | Module-defined Data Type | Size (Bytes) | Tag Suffix ⁽²⁾ |
|--------------------------------|---|-------------|----------------------------------|--------------|---------------------------|
| 100 Input Only | Product Information (CIP assembly instance 100) | Read | AB:[catalog number]_BC244CBD:I:0 | 24 | [ModuleName]:lx |
| 100 Listen Only | | | | | [ModuleName]:lx |
| 101 Input Only | Real-time Voltage and Current | Read | AB:[catalog number]_4F149A65:I:0 | 52 | [ModuleName]:lx |
| 101 Listen Only | | | | | [ModuleName]:lx |
| 102 Input Only | Real-time Power, PF, Frequency | Read | AB:[catalog number]_A691F258:I:0 | 76 | [ModuleName]:lx |
| 102 Listen Only | | | | | [ModuleName]:lx |
| 103 Input Only | Max Voltage and Current | Read | AB:[catalog number]_18E8A782:I:0 | 52 | [ModuleName]:lx |
| 103 Listen Only | | | | | [ModuleName]:lx |
| 104 Input Only | Max Power, PF, Frequency | Read | AB:[catalog number]_922708DF:I:0 | 72 | [ModuleName]:lx |
| 104 Listen Only | | | | | [ModuleName]:lx |
| 105 Input Only | Demand Voltage and Current | Read | AB:[catalog number]_4A75AFE4:I:0 | 52 | [ModuleName]:lx |
| 105 Listen Only | | | | | [ModuleName]:lx |
| 106 Input Only | Demand Power, PF, Frequency | Read | AB:[catalog number]_DBFAFEFF:I:0 | 72 | [ModuleName]:lx |
| 106 Listen Only | | | | | [ModuleName]:lx |
| 107 Input Only | Energy | Read | AB:[catalog number]_BC1E731C:I:0 | 76 | [ModuleName]:lx |
| 107 Listen Only | | | | | [ModuleName]:lx |
| 108 Input Only | Alarm and Output Status | Read | AB:[catalog number]_D1B1C88D:I:0 | 8 | [ModuleName]:lx |
| 108 Listen Only | | | | | [ModuleName]:lx |

(1) Use the Listen Only connection when an Input Only connection exists with another controller.


(2) Where the x is the connection number configured in the Module Definition.

5. To select multiple input instances, click on the next available cell under the Name column to open the pull-down selection list and choose the desired connection.


A maximum of nine connections can be selected from the selections shown in [Table 7](#).

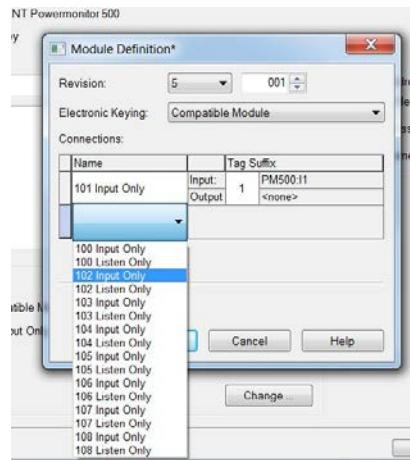

6. After you select the connections, click OK.

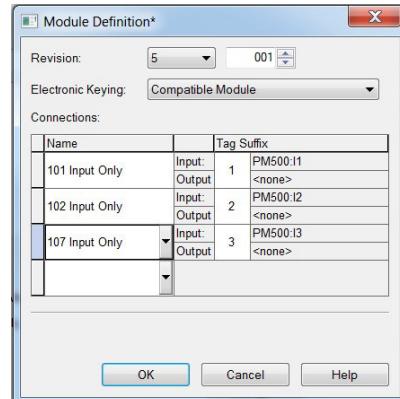


7. Click Yes to change the Module Definition.

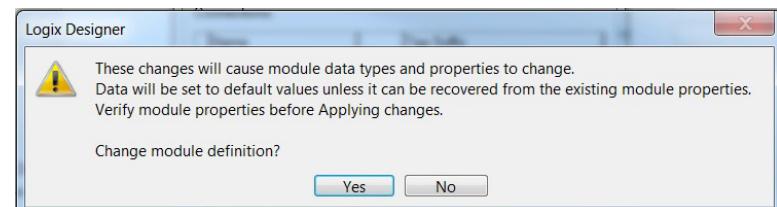

8. On the Connection tab, enter the desired Requested Packet Interval (RPI).

The default RPI is 20 ms. Do not enter an RPI less than 100 ms for the PowerMonitor 500 unit.

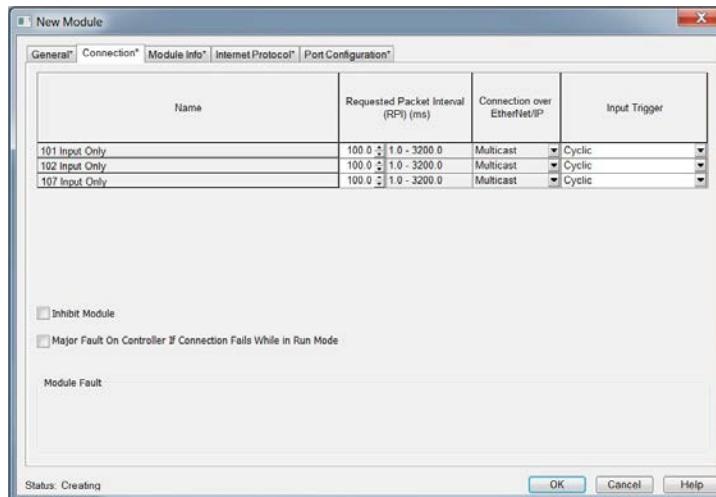


9. Click OK to create the module.

When you create the module, controller tags are generated for each Connection name that is selected in the Module Definition.

In this example, controller tags are created for instances 101, 102, and 107.

| Tag Suffix/Connection Number | Module Definition Connection | Assembly Instance (I) | Controller Tags Created | Module-defined Data Types Created |
|------------------------------|------------------------------|-----------------------|-------------------------|-----------------------------------|
| 1 | 101 Input Only | 101 | [ModuleName]:I1 | AB:[catalog number]_4F149A65:I:0 |
| 2 | 102 Input Only | 102 | [ModuleName]:I2 | AB:[catalog number]_A691F258:I:0 |
| 3 | 107 Input Only | 107 | [ModuleName]:I3 | AB:[catalog number]_BC1E731C:I:0 |

(1) The input tag consists of the Assembly Instance and a single bit (ConnectionFaulted) to monitor the connection to the device.

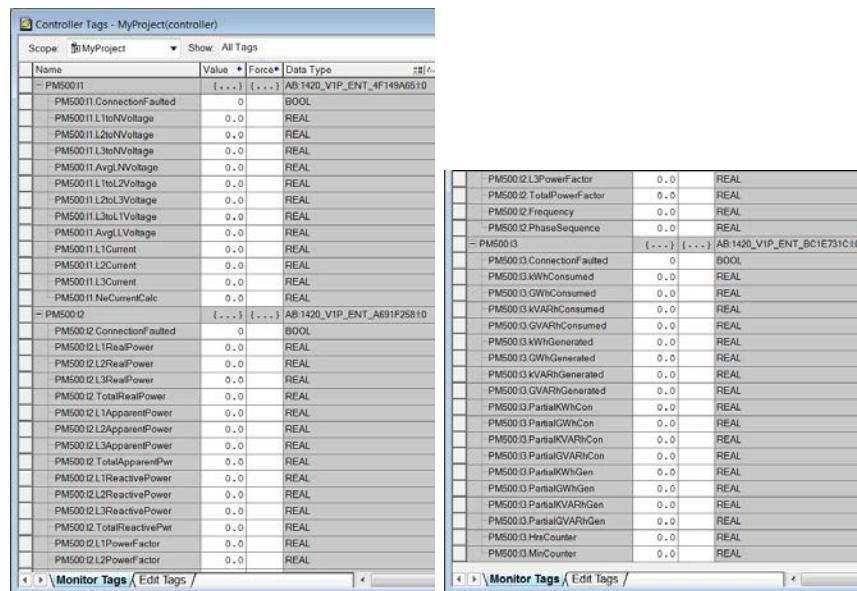

The PowerMonitor 500 Input Only connection does not require an Exclusive Owner connection to exist. The Input Only connection lets you configure the power monitor by using the display, Modbus communications, or the software configuration tool.

Generic Ethernet Module Input Data Connection

The PowerMonitor 500 unit with EtherNet/IP communication supports Class 1 connections to the nine Assembly Instances. To configure a Class 1 connection to a selected Assembly Instance with a Logix controller, follow these steps.

1. Open the controller program offline in the Logix Designer application (or online in Program mode if you are using a ControlLogix controller).
2. In the I/O configuration tree, right-click the Ethernet communication module (for example, 1756-EN2T), and choose New Module.
3. From the Communication pull-down menu, choose ETHERNET-MODULE Generic Ethernet Module.

4. Enter the setup parameters as listed in this dialog box and explained in [Table 8](#).

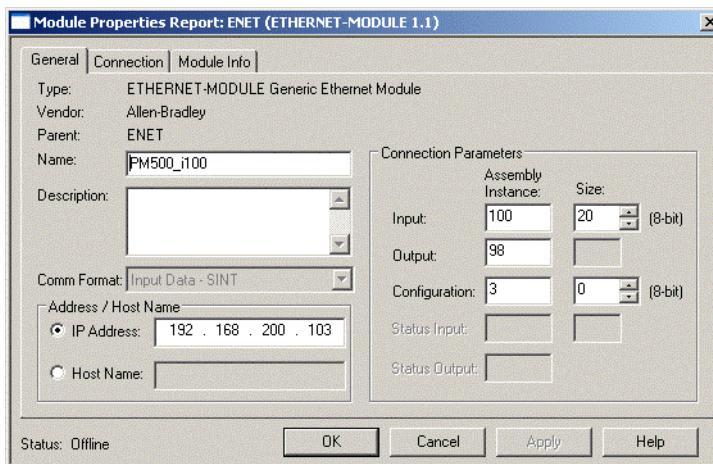


Table 8 - Module Properties Setup Parameters

| Item | Choices | | | |
|-----------------------|--|--|---|--------------------------------|
| General Tab | | | | |
| Name | Required; must be IEC 1131-3 compliant | | | |
| Description | Optional | | | |
| Comm Format | Depends on selected Assembly Instance ⁽¹⁾ | | | |
| Address/Host Name | IP Address | IP address of target PowerMonitor 500 unit | | |
| | Host Name | Not applicable | | |
| Connection Parameters | Assembly Instance | Size | Comm Format | Data Table Description |
| Input (select one) | 100 | 20 | Input Data - SINT | Product Information |
| | 101 | 12 | Input Data - REAL | Real-time Voltage and Current |
| | 102 | 18 | Input Data - REAL | Real-time Power, PF, Frequency |
| | 103 | 12 | Input Data - REAL | Max Voltage and Current |
| | 104 | 17 | Input Data - REAL | Max Power, PF, Frequency |
| | 105 | 12 | Input Data - REAL | Dmd Voltage and Current |
| | 106 | 17 | Input Data - REAL | Dmd Power, PF, Frequency |
| | 107 | 18 | Input Data - REAL | Energy Meters |
| | 108 | 2 | Input Data - INT | Alarm and Output Status |
| Output | 98 | N/A | Inst. 98 used for Input Only connection | |
| | 99 | N/A | Inst. 99 used for Listen Only connection ⁽¹⁾ | |
| Configuration | 3 | 0 | Instance 3 is a placeholder only | |
| Connection Tab | | | | |
| RPI | 100 ms or greater | | | |
| Inhibit Module | Optional - unchecked by default | | | |
| Major Fault | Optional - unchecked by default | | | |
| Unicast Connection | Optional - checked by default | | | |

(1) Use the Listen Only connection only when an Input Only connection exists with another controller.

5. When finished, click OK to save the new module.


The module updates its input tag <Name>.I.Data at the Requested Packet Interval (RPI).

| | | (...) | (...) | | AB:ETHERNET_... |
|--|-----------------------|--------|---------|------|-----------------|
| | PM500_i100:I | | | | |
| | PM500_i100:I.Data | | | | SINT[20] |
| | PM500_i100:I.Data[0] | 'A' | ASCII | SINT | |
| | PM500_i100:I.Data[1] | 8 | Decimal | SINT | |
| | PM500_i100:I.Data[2] | 'A' | ASCII | SINT | |
| | PM500_i100:I.Data[3] | 1 | Decimal | SINT | |
| | PM500_i100:I.Data[4] | '\$00' | ASCII | SINT | |
| | PM500_i100:I.Data[5] | 0 | Decimal | SINT | |
| | PM500_i100:I.Data[6] | 'B' | ASCII | SINT | |
| | PM500_i100:I.Data[7] | 'W' | ASCII | SINT | |
| | PM500_i100:I.Data[8] | '0' | ASCII | SINT | |
| | PM500_i100:I.Data[9] | '6' | ASCII | SINT | |
| | PM500_i100:I.Data[10] | '4' | ASCII | SINT | |
| | PM500_i100:I.Data[11] | '0' | ASCII | SINT | |
| | PM500_i100:I.Data[12] | '0' | ASCII | SINT | |
| | PM500_i100:I.Data[13] | '0' | ASCII | SINT | |
| | PM500_i100:I.Data[14] | '6' | ASCII | SINT | |
| | PM500_i100:I.Data[15] | '0' | ASCII | SINT | |
| | PM500_i100:I.Data[16] | '0' | ASCII | SINT | |
| | PM500_i100:I.Data[17] | '0' | ASCII | SINT | |
| | PM500_i100:I.Data[18] | 'A' | ASCII | SINT | |
| | PM500_i100:I.Data[19] | '\$00' | ASCII | SINT | |

You can use additional programming to show the data in another way. Instances 101...107 show data in the REAL, or floating point, format. However, Instance 100 combines ASCII characters with numeric byte (SINT) values.

This program displays the contents of Instance 100 in a more human-readable fashion:

- The XIC instruction on tag ‘bool_Convert_i100’ enables the conversion.
- The first CPS instruction copies the first 6 bytes of the module input data tag.
- The MOV instruction sets the serial number string length to 13.
- The last CPS instruction copies the serial number from the module input data tag that starts at element (byte) 6.

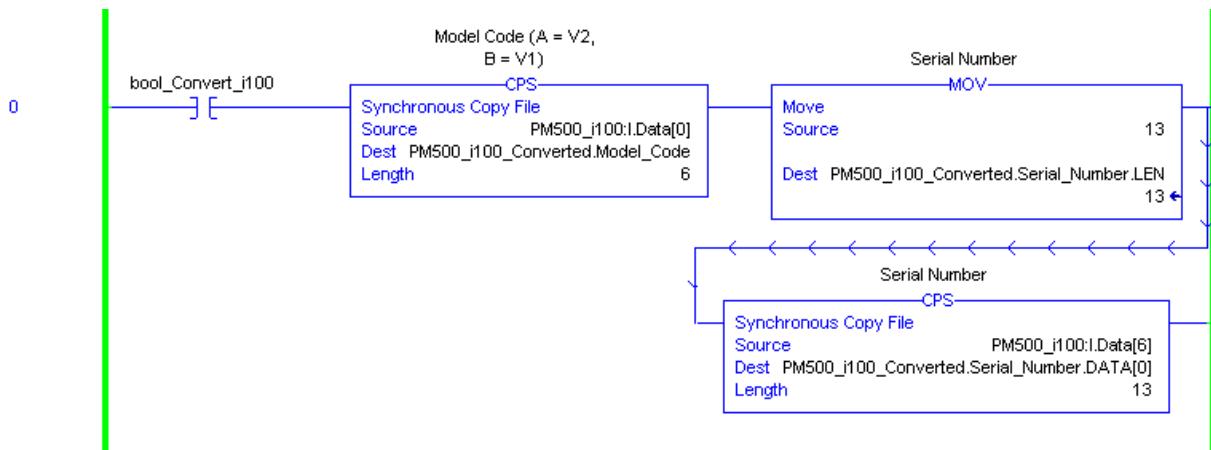

The destinations of the CPS instructions are in a tag with a user-defined data type.

| | | | | |
|--------------|---------------------------------|-----------|---------|--------------------------------------|
| Name: | PM500_Inst100 | | | |
| Description: | | | | |
| Members: | Data Type Size: 96 byte(s) | | | |
| | Name | Data Type | Style | Description |
| | Model_Code | SINT | ASCII | Model Code (A = V2, B = V1) |
| | Base_Firmware_Version | SINT | Decimal | Firmware Rev Number |
| | EtherNetIP_Model_Code | SINT | ASCII | EtherNet/IP Model Code |
| | EtherNetIP_Firmware_Version | SINT | Decimal | EtherNet/IP Firmware Rev Number |
| | Analog_Output_Model_Code | SINT | ASCII | Analog Output Model Code (If Exists) |
| | Analog_Output_Firmware_Revision | SINT | Decimal | Analog Output Firmware Rev |
| +/- | Serial_Number | STRING | | Serial Number |
| -/- | LEN | DINT | Decimal | Read Only |
| -/- | DATA | SINT[82] | ASCII | Read Only |

The destination tag shows the data in this way.

| | | | |
|--|-----------------|---------|--------------------------------------|
| [-] PM500_i100_Converted | (...) | | |
| + PM500_i100_Converted.Model_Code | 'A' | ASCII | Model Code (A = V2, B = V1) |
| + PM500_i100_Converted.Base_Firmware_Version | 8 | Decimal | Firmware Rev Number |
| + PM500_i100_Converted.EtherNetIP_Model_Code | 'A' | ASCII | EtherNet/IP Model Code |
| + PM500_i100_Converted.EtherNetIP_Firmware_Version | 1 | Decimal | EtherNet/IP Firmware Rev Number |
| + PM500_i100_Converted.Analog_Output_Model_Code | '\$00' | ASCII | Analog Output Model Code (If Exists) |
| + PM500_i100_Converted.Analog_Output_Firmware_Revision | 0 | Decimal | Analog Output Firmware Rev |
| -/- PM500_i100_Converted.Serial_Number | 'BN0640006000A' | | Serial Number |
| +/- PM500_i100_Converted.Serial_Number.LEN | 13 | Decimal | Serial Number |
| +/- PM500_i100_Converted.Serial_Number.DATA | (...) | ASCII | Serial Number |

Modbus Communication

For a complete description of the MODBUS protocol refer to the following documents that can be downloaded from <http://www.modbus.org>:

- Modbus_Application_Protocol_V1_1a
- Modbus_Messaging_Implementation_Guide_V1_0a

Modbus Functions Supported

Modbus RTU is supported in PowerMonitor 500 units that are ordered with optional RS-485/RS-232 communication. In addition, Modbus TCP/IP is supported in units that are ordered with optional Ethernet communication. Communication parameters in the power monitor must be configured. See the [Unit Configuration](#) section of this manual.

IMPORTANT We recommend that you use Modbus TCP/IP to configure or write to the PowerMonitor 500 unit and that you use Ethernet/IP to read the PowerMonitor 500 unit.

The PowerMonitor 500 unit supports the following Modbus functions:

- 0x03 - Read n Holding Registers
- 0x04 - Read n Input Register
- 0x06 - Write one Holding Register
- 0x10 - Write multiple registers
- 0x08 - Diagnostic (with subfunction code 0x00)
- 0x42 - Read n Special Registers (vendor specific)
- Broadcast mode (write command on address 00h)

In this section, Modbus addresses are indicated in two ways. The ‘Modbus address’ is expressed as the 6-digit input register address (example: 300123), used with Modbus function code 0x04. The ‘Physical address’ is the hexadecimal representation of the word address that is included in the communication frame.

Modbus function 0x04 can be used with the Modbus address by substituting a 4 for the first digit (example: 400123). With that distinction, functions 0x03 and 0x04 return the same data.

To avoid errors due to signal reflections or line coupling, a termination resistor must be connected at the RS-485 ports of the master station and of the furthest power monitor from the master station. In the PowerMonitor 500, you can implement a jumper between (B+) and (T) to apply the required termination resistance between (A-) and (B+) internally. Termination on both ends is necessary even in case of point-to-point connection, with short distances.

The GND connection is optional if a shielded cable is used. For connections longer than 1000 m (3280 ft), a line amplifier is necessary.

Data Types Supported

| Format | Description | Bits | Range |
|--------|---------------------------------|------|--|
| INT | Integer | 16 | -32768...32767 |
| UNIT | Unsigned Integer | 16 | 0... 65535 |
| DINT | Double integer | 32 | - 2^{31} ... $2^{31}-1$ |
| UDINT | Unsigned Double Integer | 32 | 0... $2^{32}-1$ |
| ULINT | Unsigned long Integer | 64 | 0... $2^{64}-1$ |
| REAL | Single-precision Floating Point | 32 | $-(1+[1\cdot 2^{-23}]) \times 2^{127} \dots 2^{128}$ |


The IEEE754 representation of a 32-bit Floating Point number as an Integer is defined as follows.

| Bits | | |
|------|----------|----------|
| 31 | 30...23 | 22...0 |
| Sign | Exponent | Mantissa |

$$\text{Value} = (-1)^{\text{sign}} \cdot 2^{(\text{Exponent}-127)} \cdot 1.\text{Mantissa}$$

Modbus Register Format

Modbus registers are 16-bit words that are organized as shown in the following diagram.

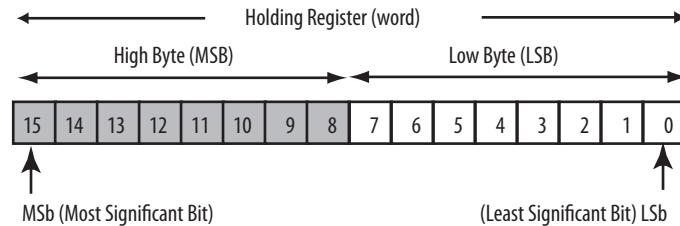

32-bit and 64-bit Data types that are presented as arrays of single registers in LSW (least significant word) to MSW (most significant word) order.

PowerMonitor 500 Unit Data Tables

Summary of Data Tables

The Data Table Summary Index table summarizes all data tables available and their general attributes.

Table 9 - Data Table Summary Index


| Name of Data Table | Read | Write | Modbus Starting Address | CIP Assy. Instance ID (decimal) | No. of Elements | See Page |
|--|------|-------|-------------------------|---------------------------------|-----------------|--------------------|
| Product Information | X | | 300001 ⁽¹⁾ | 100 | 10 | 59 |
| Real-time Metering Values (voltage and current) | X | | 300081 | 101 | 12 | 60 |
| Real-time Metering Values (power, PF, frequency) | X | | 300105 | 102 | 18 | 61 |
| Maximum Metering Values (voltage and current) | X | | 300337 | 103 | 12 | 62 |
| Maximum Metering Values (power, PF, frequency) | X | | 300361 | 104 | 17 | 63 |
| DMD Metering Values (voltage and current) | X | | 300849 | 105 | 12 | 64 |
| DMD Metering Values (power, PF, frequency) | X | | 300873 | 106 | 17 | 65 |
| Total and Partial Energy Meters - EtherNet/IP Data Table | X | | 301281 | 107 | 18 | 66 |
| Configuration - Base Unit: Read and Write | X | X | 304097 | - | 79 | 67 |
| Configuration - Alarms | X | X | Varies | - | 16 | 68 |
| Configuration - RS-485/RS-232 Communication | X | X | 304356 | - | 17 | 68 |
| Configuration - Analog Outputs: Read and Write | X | X | 304609 | - | 32 | 69 |
| Analog Output Configuration Parameters | X | X | Varies | - | 16 | 69 |
| Configuration - Digital Relay Outputs: Read and Write | X | X | 304865 | - | 12 | 70 |
| Commands: Write-only | | X | 312369 | - | 45 | 71 |
| Alarm and Output Status | X | | 316385 | 108 | 2 | 73 |

(1) To obtain the physical address, subtract 300001 from the Modbus address, and convert the result to hexadecimal. Example: Physical address 0x000B corresponds to Modbus address 300012.

Geometric Representation of Power and Power Factor

Power and power factor values are signed values in accordance with EN 62053 and as indicated in the diagram. Inductive or lagging power factor (Quadrant I and III) is indicated by a positive power factor value. Capacitive or leading power factor (Quadrant II and IV) is indicated by a negative power factor value. The PowerMonitor™ 500 unit indicates the quadrant by using +/- L or +/- C as shown in [Figure 26](#).

Figure 26 - Power and Power Factor Diagram

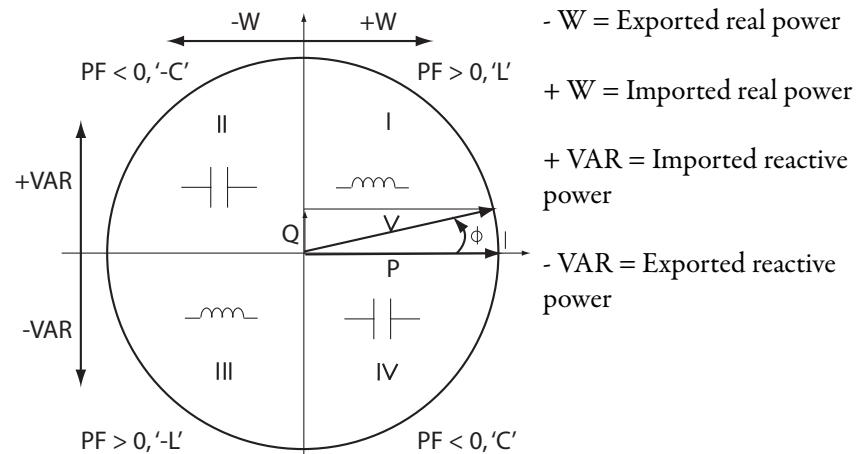

Data Tables

These tables detail each specific data table and its associated elements, such as address, length, description, and format.

IMPORTANT In the data tables, the Σ symbol is used to indicate 3-phase or system values. The context determines whether the symbol indicates average (for example, voltage) or total (for example, power) values.

Product Information

Table 10 - Table Properties

| | |
|-----------------------|-----------|
| CIP Assembly Instance | 100 |
| No. of Elements | 10 |
| Length in Words | 10 |
| Data Type | UINT |
| Data Access | Read Only |

Table 11 - Product Information Data Table

| Element | Modbus Address | Length (words) | Description / Units | Data Format | Tag Name | Notes |
|---------|----------------|----------------|--|-------------|------------------|--|
| 1 | 300001 | 1 | Base firmware revision | UINT | BaseFirmwareRev | MSB: ASCII code for model (A = V2, B = V1) LSB: numeric number for revision |
| 2 | 300002 | 1 | EtherNet/IP module firmware revision | UINT | CommFirmwareRev | MSB: ASCII code for model LSB: numeric number for revision |
| 3 | 300003 | 1 | Analog output module firmware revision (if exists) | UINT | AnalogFWRev | MSB: ASCII code for model LSB: numeric number for revision |
| 4 | 300033 | 1 | Letter 1 (from SX) Letter 2 (from SX) | UINT | Letter1Letter2 | MSB: ASCII code LSB: ASCII code |
| 5 | 300034 | 1 | Letter 3 (from SX) Letter 4 (from SX) | UINT | Letter3Letter4 | MSB: ASCII code LSB: ASCII code |
| 6 | 300035 | 1 | Letter 5 (from SX) Letter 6 (from SX) | UINT | Letter5Letter6 | MSB: ASCII code LSB: ASCII code |
| 7 | 300036 | 1 | Letter 7 (from SX) Letter 8 (from SX) | UINT | Letter7Letter8 | MSB: ASCII code LSB: ASCII code |
| 8 | 300037 | 1 | Letter 9 (from SX) Letter 10 (from SX) | UINT | Letter9Letter10 | MSB: ASCII code LSB: ASCII code |
| 9 | 300038 | 1 | Letter 11 (from SX) Letter 12 (from SX) | UINT | Letter11Letter12 | MSB: ASCII code LSB: ASCII code |
| 10 | 300039 | 1 | Letter 13 (from SX) | UINT | Letter13 | MSB: ASCII code |

Real-time Metering Values (voltage and current)

Table 12 - Table Properties

| | |
|-----------------------|-----------|
| CIP Assembly Instance | 101 |
| No. of Elements | 12 |
| Length in Words | 24 |
| Data Type | REAL |
| Data Access | Read Only |

Table 13 - Real-time Metering Values (voltage and current) Data Table

| Element | Modbus Address | Length (words) | Description / Units | Data Format | Tag Name | Notes |
|---------|----------------|----------------|---------------------|-------------|---------------|-------------------------------|
| 0 | 300081 | 2 | V L1-N | REAL | L1toNVoltage | |
| 1 | 300083 | 2 | V L2-N | REAL | L2toNVoltage | |
| 2 | 300085 | 2 | V L3-N | REAL | L3toNVoltage | |
| 3 | 300087 | 2 | V L-N Σ | REAL | AvgLNVoltage | |
| 4 | 300089 | 2 | V L1-L2 | REAL | L1toL2Voltage | |
| 5 | 300091 | 2 | V L2-L3 | REAL | L2toL3Voltage | |
| 6 | 300093 | 2 | V L3-L1 | REAL | L3toL1Voltage | |
| 7 | 300095 | 2 | V L-L Σ | REAL | AvgLLVoltage | |
| 8 | 300097 | 2 | A L1 | REAL | L1Current | |
| 9 | 300099 | 2 | A L2 | REAL | L2Current | |
| 10 | 300101 | 2 | A L3 | REAL | L3Current | |
| 11 | 300103 | 2 | A N | REAL | NeCurrentCalc | Calculated by instrument base |

Real-time Metering Values (power, PF, frequency)

Table 14 - Table Properties

| | |
|-----------------------|-----------|
| CIP Assembly Instance | 102 |
| No. of Elements | 18 |
| Length in Words | 36 |
| Data Type | REAL |
| Data Access | Read Only |

Table 15 - Real-time Metering Values (power, PF, frequency) Data Table

| Element | Modbus Address | Length (words) | Description / Units | Data Format | Tag Name | Notes |
|---------|----------------|----------------|------------------------|-------------|------------------|---|
| 0 | 300105 | 2 | W L1 | REAL | L1RealPower | |
| 1 | 300107 | 2 | W L2 | REAL | L2RealPower | |
| 2 | 300109 | 2 | W L3 | REAL | L3RealPower | |
| 3 | 300111 | 2 | W Σ | REAL | TotalRealPower | |
| 4 | 300113 | 2 | VA L1 | REAL | L1ApparentPower | |
| 5 | 300115 | 2 | VA L2 | REAL | L2ApparentPower | |
| 6 | 300117 | 2 | VA L3 | REAL | L3ApparentPower | |
| 7 | 300119 | 2 | VA Σ | REAL | TotalApparentPwr | |
| 8 | 300121 | 2 | VAR L1 | REAL | L1ReactivePower | |
| 9 | 300123 | 2 | VAR L2 | REAL | L2ReactivePower | |
| 10 | 300125 | 2 | VAR L3 | REAL | L3ReactivePower | |
| 11 | 300127 | 2 | VAR Σ | REAL | TotalReactivePwr | |
| 12 | 300129 | 2 | PF L1 | REAL | L1PowerFactor | Negative values correspond to lead (C), positive values correspond to lag (L) |
| 13 | 300131 | 2 | PF L2 | REAL | L2PowerFactor | |
| 14 | 300133 | 2 | PF L3 | REAL | L3PowerFactor | |
| 15 | 300135 | 2 | PF Σ | REAL | TotalPowerFactor | |
| 16 | 300137 | 2 | Hz | REAL | Frequency | |
| 17 | 300139 | 2 | Voltage phase sequence | REAL | PhaseSequence | 1 = L1-L2-L3 voltage rotation -1 = Not L1-L2-L3 voltage rotation |

Maximum Metering Values (voltage and current)

Table 16 - Table Properties

| | |
|-----------------------|-----------|
| CIP Assembly Instance | 103 |
| No. of Elements | 12 |
| Length in Words | 24 |
| Data Type | REAL |
| Data Access | Read Only |

Table 17 - Maximum Metering Values (voltage and current) Data Table

| Element | Modbus Address | Length (words) | Description / Units | Data Format | Tag Name | Notes |
|---------|----------------|----------------|---------------------|-------------|------------------|-------|
| 0 | 300337 | 2 | Max V L1-N | REAL | MaxL1toNVoltage | |
| 1 | 300339 | 2 | Max V L2-N | REAL | MaxL2toNVoltage | |
| 2 | 300341 | 2 | Max V L3-N | REAL | MaxL3toNVoltage | |
| 3 | 300343 | 2 | Max V L-N Σ | REAL | MaxAvgLNVoltage | |
| 4 | 300345 | 2 | Max V L1-L2 | REAL | MaxL1toL2Voltage | |
| 5 | 300347 | 2 | Max V L2-L3 | REAL | MaxL2toL3Voltage | |
| 6 | 300349 | 2 | Max V L3-L1 | REAL | MaxL3toL1Voltage | |
| 7 | 300351 | 2 | Max V L-L Σ | REAL | MaxAvgLLVoltage | |
| 8 | 300353 | 2 | Max A L1 | REAL | MaxL1Current | |
| 9 | 300355 | 2 | Max A L2 | REAL | MaxL2Current | |
| 10 | 300357 | 2 | Max A L3 | REAL | MaxL3Current | |
| 11 | 300359 | 2 | Max A N | REAL | MaxNeCurrentCalc | |

Maximum Metering Values (power, PF, frequency)

Table 18 - Table Properties

| | |
|-----------------------|-----------|
| CIP Assembly Instance | 104 |
| No. of Elements | 17 |
| Length in Words | 34 |
| Data Type | REAL |
| Data Access | Read Only |

Table 19 - Maximum Metering Values (power, PF, frequency) Data Table

| Element | Modbus Address | Length (words) | Description / Units | Data Format | Tag Name | Notes |
|---------|----------------|----------------|---------------------|-------------|------------------|--|
| 0 | 300361 | 2 | Max W L1 | REAL | MaxL1RealPower | |
| 1 | 300363 | 2 | Max W L2 | REAL | MaxL2RealPower | |
| 2 | 300365 | 2 | Max W L3 | REAL | MaxL3RealPower | |
| 3 | 300367 | 2 | Max W Σ 3 | REAL | MaxTotalRealPwr | |
| 4 | 300369 | 2 | Max VA L1 | REAL | MaxL1ApparentPwr | |
| 5 | 300371 | 2 | Max VA L2 | REAL | MaxL2ApparentPwr | |
| 6 | 300373 | 2 | Max VA L3 | REAL | MaxL3ApparentPwr | |
| 7 | 300375 | 2 | Max VA Σ | REAL | MaxTotalVA | |
| 8 | 300377 | 2 | Max VAR L1 | REAL | MaxL1ReactivePwr | Negative values correspond to lead (C), positive values correspond to lag (L) |
| 9 | 300379 | 2 | Max VAR L2 | REAL | MaxL2ReactivePwr | |
| 10 | 300381 | 2 | Max VAR L3 | REAL | MaxL3ReactivePwr | |
| 11 | 300383 | 2 | Max VAR Σ | REAL | MaxTotalVAR | |
| 12 | 300385 | 2 | Max PF L1 | REAL | MaxL1PowerFactor | The Max PF displayed corresponds to the PF value with the largest phase angle. |
| 13 | 300387 | 2 | Max PF L2 | REAL | MaxL2PowerFactor | |
| 14 | 300389 | 2 | Max PF L3 | REAL | MaxL3PowerFactor | |
| 15 | 300391 | 2 | Max PF Σ | REAL | MaxTotalPF | |
| 16 | 300393 | 2 | Max Hz | REAL | MaxFrequency | |

DMD Metering Values (voltage and current)

Table 20 - Table Properties

| | |
|-----------------------|-----------|
| CIP Assembly Instance | 105 |
| No. of Elements | 12 |
| Length in Words | 24 |
| Data Type | REAL |
| Data Access | Read Only |

Table 21 - DMD Metering Values (voltage and current) Data Table

| Element | Modbus Address | Length (words) | Description / Units | Data Format | Tag Name | Notes |
|---------|----------------|----------------|---------------------|-------------|------------------|-------|
| 0 | 300849 | 2 | DMD V L1-N | REAL | DmdL1toNVoltage | |
| 1 | 300851 | 2 | DMD V L2-N | REAL | DmdL2toNVoltage | |
| 2 | 300853 | 2 | DMD V L3-N | REAL | DmdL3toNVoltage | |
| 3 | 300855 | 2 | DMD V L-N Σ | REAL | DmdAvgLNVoltage | |
| 4 | 300857 | 2 | DMD V L1-L2 | REAL | DmdL1toL2Voltage | |
| 5 | 300859 | 2 | DMD V L2-L3 | REAL | DmdL2toL3Voltage | |
| 6 | 300861 | 2 | DMD V L3-L1 | REAL | DmdL3toL1Voltage | |
| 7 | 300863 | 2 | DMD V L-L Σ | REAL | DmdAvgLLVoltage | |
| 8 | 300865 | 2 | DMD A L1 | REAL | DmdL1Current | |
| 9 | 300867 | 2 | DMD A L2 | REAL | DmdL2Current | |
| 10 | 300869 | 2 | DMD A L3 | REAL | DmdL3Current | |
| 11 | 300871 | 2 | DMD A N | REAL | DmdNeCurrentCalc | |

DMD Metering Values (power, PF, frequency)

Table 22 - Table Properties

| | |
|-----------------------|-----------|
| CIP Assembly Instance | 106 |
| No. of Elements | 17 |
| Length in Words | 34 |
| Data Type | REAL |
| Data Access | Read Only |

Table 23 - DMD Metering Values (power, PF, frequency) Data Table

| Element | Modbus Address | Length (words) | Description / Units | Data Format | Tag Name | Notes |
|---------|----------------|----------------|---------------------|-------------|------------------|---|
| 0 | 300873 | 2 | DMD W L1 | REAL | Dmdl1RealPower | |
| 1 | 300875 | 2 | DMD W L2 | REAL | Dmdl2RealPower | |
| 2 | 300877 | 2 | DMD W L3 | REAL | Dmdl3RealPower | |
| 3 | 300879 | 2 | DMD W Σ | REAL | DmdTotalRealPwr | |
| 4 | 300881 | 2 | DMD VA L1 | REAL | Dmdl1ApparentPwr | |
| 5 | 300883 | 2 | DMD VA L2 | REAL | Dmdl2ApparentPwr | |
| 6 | 300885 | 2 | DMD VA L3 | REAL | Dmdl3ApparentPwr | |
| 7 | 300887 | 2 | DMD VA Σ | REAL | DmdTotalVA | |
| 8 | 300889 | 2 | DMD VAR L1 | REAL | Dmdl1ReactivePwr | Negative values correspond to lead (C), positive values correspond to lag (L) |
| 9 | 300891 | 2 | DMD VAR L2 | REAL | Dmdl2ReactivePwr | |
| 10 | 300893 | 2 | DMD VAR L3 | REAL | Dmdl3ReactivePwr | |
| 11 | 300895 | 2 | DMD VAR Σ | REAL | DmdTotalVAR | |
| 12 | 300897 | 2 | DMD PF L1 | REAL | Dmdl1PowerFactor | |
| 13 | 300899 | 2 | DMD PF L2 | REAL | Dmdl2PowerFactor | |
| 14 | 300901 | 2 | DMD PF L3 | REAL | Dmdl3PowerFactor | |
| 15 | 300903 | 2 | DMD PF Σ | REAL | DmdTotalPF | |
| 16 | 300905 | 2 | DMD Hz | REAL | DmdFrequency | |

Total and Partial Energy Meters - EtherNet/IP Data Table

Table 24 - Table Properties

| | |
|-----------------------|-----------|
| CIP Assembly Instance | 107 |
| No. of Elements | 18 |
| Length in Words | 36 |
| Data Type | REAL |
| Data Access | Read Only |

Table 25 - Total and Partial Energy Meters - EtherNet/IP Data Table

| Element | Length (words) | Description / Units | Data Format | Tag Name | Notes |
|---------|----------------|---------------------|-------------|-----------------|---------------------------|
| 0 | 2 | Total kWh+ | REAL | kWhConsumed | Range 0.0 ... 999,999.999 |
| 1 | 2 | Total GWh+ | REAL | GWhConsumed | Range 0 ... 9,999,999 |
| 2 | 2 | Total kVARh+ | REAL | kVARhConsumed | Range 0.0 ... 999,999.999 |
| 3 | 2 | Total GVARh+ | REAL | GVARhConsumed | Range 0 ... 9,999,999 |
| 4 | 2 | Total kWh- | REAL | kWhGenerated | Range 0.0 ... 999,999.999 |
| 5 | 2 | Total GWh- | REAL | GWhGenerated | Range 0 ... 9,999,999 |
| 6 | 2 | Total kVARh- | REAL | kVARhGenerated | Range 0.0 ... 999,999.999 |
| 7 | 2 | Total GVARh- | REAL | GVARhGenerated | Range 0 ... 9,999,999 |
| 8 | 2 | Partial kWh+ | REAL | PartialKWhCon | Range 0.0 ... 999,999.999 |
| 9 | 2 | Partial GWh+ | REAL | PartialGWhCon | Range 0 ... 9,999,999 |
| 10 | 2 | Partial kVARh+ | REAL | PartialKVARhCon | Range 0.0 ... 999,999.999 |
| 11 | 2 | Partial GVARh+ | REAL | PartialGVARhCon | Range 0 ... 9,999,999 |
| 12 | 2 | Partial kWh- | REAL | PartialKWhGen | Range 0.0 ... 999,999.999 |
| 13 | 2 | Partial GWh- | REAL | PartialGWhGen | Range 0 ... 9,999,999 |
| 14 | 2 | Partial kVARh- | REAL | PartialKVARhGen | Range 0.0 ... 999,999.999 |
| 15 | 2 | Partial GVARh- | REAL | PartialGVARhGen | Range 0 ... 9,999,999 |
| 16 | 2 | Hours counter | REAL | HrsCounter | |
| 17 | 2 | Minutes counter | REAL | MinCounter | Range 0 ... 59 |

Table 26 - Energy Metering Values Modbus - Read-only

| Modbus Address | Length (words) | Description / Units | Data Format | Notes |
|----------------|----------------|---------------------|-------------|--|
| 301281 | 4 | Total kWh+ | ULINT | Values in Wh or varh |
| 301285 | 4 | Total kVARh+ | ULINT | |
| 301289 | 4 | Total kWh- | ULINT | |
| 301293 | 4 | Total kVARh- | ULINT | |
| 301297 | 4 | Partial kWh+ | ULINT | |
| 301301 | 4 | Partial kVARh+ | ULINT | |
| 301305 | 4 | Partial kWh- | ULINT | |
| 301309 | 4 | Partial kVARh- | ULINT | |
| 301313 | 4 | Hours counter | ULINT | Hours value: Integer part got from the division of the counter by 100-Minutes value: rest of the previous computation (decimal part) |

Table 27 - Configuration - Base Unit: Read and Write

| Modbus Address | Length (words) | Description / Units | Data Format | Notes |
|----------------|----------------|------------------------------------|---------------------------|---|
| 304097 | 1 | Password | UINT | Minimum valid value: Od Maximum valid value: 9999d |
| 304098 | 1 | Electrical system selection | UINT | Value = 0: 1P (1-phase 2-wire) Value = 1: 2P (2-phase 3-wire) Value = 2: 3P (3-phase 3-wire) Value = 3: 3P2 (3-phase 2-wire one current and 1-phase (L1) to neutral voltage measurement) Value = 4: 3P1 (3-phase 4-wire one current and 3-phase to neutral voltage measurements) Value = 5: 3PN (default =3PN) |
| 304099 | 1 | Reserved | UINT | |
| 304101 | 1 | Backlight mode | UINT | The timing backlight is programmable from 0...255 minutes (0 = always ON) |
| 304107 | 1 | DMD - Calculation | UINT | Selection of the DMD calculation mode Value=0: Fixed Value=1: Slide - only for $W\sum$ and $VA\sum$ |
| 304108 | 1 | DMD - Time interval | UINT | Value=0: 1 min Value=1: 5 min Value=2: 10 min Value=3: 15 min Value=4: 20 min Value=5: 30 min Value=6: 60 min |
| 304109 | 1 | DMD - Synchronization | UINT | Synchronization selection mode Value=0: OFF Value=1: Clock |
| 304121 | 2 | CT - Current transformer ratio | REAL | 1.0...9999.0 |
| 304123 | 2 | VT(PT) - Voltage transformer ratio | REAL | 1.0...9999.0 |
| 304127 | 2 | Filter Span parameter | REAL | Value min = 0.0 Value max = 100.0 (Disabled = 0.0) |
| 304129 | 2 | Filter Coefficient | REAL | Value min = 1.0 Value max = 256.0 |
| 304177 | 16 | Virtual Alarm AL1 (LED 1) | Customized | See the Table 28 |
| 304193 | 16 | Virtual Alarm AL2 (LED 2) | Base Alarm data structure | |
| 304209 | 16 | Virtual Alarm AL3 (LED 3) | | |
| 304225 | 16 | Virtual Alarm AL4 (LED 4) | | |

Table 28 - Configuration - Alarms

| Modbus Address | Length (words) | Description / Units | Data Format | Notes |
|------------------|----------------|---|-------------|---|
| Block address +0 | 1 | Alarm N - Enabling | UINT | Value=1: alarm N enabled Value=0: alarm N disabled All other values are considered as value=0 |
| Block address +1 | 1 | Alarm N - Variable type to be linked to | UINT | See the Connected Variable List (Table 36) |
| Block address +2 | 1 | Alarm N - Delay ON activation (s) | UINT | Value min=0 Value max=3600 If the set value exceeds the allowed range, the instrument automatically sets the value to 0 |
| Block address +3 | 2 | Alarm N – Set point 1 | REAL | Value min = -9999M Value max = 9999M If the set value exceeds the allowed range, the instrument automatically sets the value to 0.000 |
| Block address +5 | 2 | Alarm N – Set point 2 | REAL | Value min = -9999M Value max = 9999M If the set value exceeds the allowed range, the instrument automatically sets the value to 0.000 |
| Block address +7 | 9 | Reserved | | |

Table 29 - Configuration - RS-485/RS-232 Communication

| Modbus Address | Length (words) | Description / Units | Data Format | Notes |
|----------------|----------------|---|-------------|--|
| 304356 | 1 | Clock format | UINT | 0=24h/12h 1=AM-PM |
| 304357 | 1 | Clock daylight-saving | UINT | Value=0: NO Value=1: YES |
| 304358 | 1 | Clock calendar: Year ⁽¹⁾ | UINT | 2009...2099 |
| 304359 | 1 | Clock calendar: Month ⁽¹⁾ | UINT | 1...12 |
| 304360 | 1 | Clock calendar: Day ⁽¹⁾ | UINT | 1...31 |
| 304361 | 1 | Clock: Hour ⁽¹⁾ | UINT | 0...23 |
| 304362 | 1 | Clock: Minutes ⁽¹⁾ | UINT | 0...59 |
| 304363 | 1 | Clock: Seconds ⁽¹⁾ | UINT | 0...59 |
| 304364 | 1 | Daylight-saving: month in which to increase the hour (+1H) | UINT | 1...12 |
| 304365 | 1 | Daylight-saving: Sunday in which to increase the hour (+1H) | UINT | 0...4 (0= last Sunday of the month) |
| 304366 | 1 | Daylight-saving: hour in which to increase the hour (+1H) | UINT | 0...23 (24h format only) |
| 304367 | 1 | Daylight-saving: month in which to decrease the hour (-1H) | UINT | 1...12 |
| 304368 | 1 | Daylight-saving: Sunday in which to decrease the hour (-1H) | UINT | 0...4 (0= last Sunday of the month) |
| 304369 | 1 | Daylight-saving: hour in which to decrease the hour (-1H) | UINT | 0...23 (24h format only) |
| 304401 | 1 | RS-485 instrument address selection ⁽²⁾ | UINT | Value min = 1 Value max = 247 If the set value exceeds the allowed range, the instrument automatically sets the value to 1 |
| 304402 | 1 | RS-485 baud rate selection ⁽²⁾ | UINT | Value=0: 9600 Value=1: 19200 Value=2: 38400 Value=3: 115200 All other values are considered as value=0 |
| 304403 | 1 | RS-485 parity selection ⁽²⁾ | UINT | Value=0: No parity Value=1: Odd parity Value=2: Even parity All other values are considered as value=0 |

(1) The values are updated only after sending the 'update clock' command.

(2) The values are updated only after sending the 'update serial communication setting' command or switching off and on the instrument.

Table 30 - Configuration - Analog Outputs: Read and Write

| Modbus Address | Length (words) | Description / Units | Data Format | Notes |
|----------------|----------------|--|-------------|------------------------------|
| 304609 | 16 | Analog output A0: parameters configuration | CUSTOM | See Table 31 |
| 304625 | 16 | Analog output A1: parameters configuration | CUSTOM | |

Table 31 - Analog Output Configuration Parameters

| Modbus Address | Length (words) | Description / Units | Data Format | Notes |
|------------------|----------------|--|-------------|--|
| Block address +0 | 1 | Type of the variable that is linked to the N analog output | UINT | |
| Block address +1 | 2 | Minimum electric value of the N analog output | REAL | Value min = 0 Value max = 9,999,000 |
| Block address +3 | 2 | Maximum electric value of the N analog output | REAL | |
| Block address +5 | 2 | Minimum output value of the N analog output | REAL | Value min = 0.0 Value max = 100.0 |
| Block address +7 | 2 | Maximum output value of the N analog output | REAL | |
| Block address +9 | 7 | Reserved | | |

Table 32 - Configuration - Digital Relay Outputs: Read and Write

| Modbus Address | Length (words) | Description / Units | Data Format | Notes |
|-----------------------|-----------------------|---|--------------------|--|
| 304865 | 1 | Digital output channel 1: enabling | UINT | 0=Remote 1=Alarm 2=Pulse |
| 304866 | 1 | Digital output channel 1: output working mode | UINT | 0=NO 1=NC (only if selected 'Alarm' type) |
| 304867 | 1 | Digital output channel 1: linked alarm | UINT | 0=AL1 1=AL2 2=AL3 3=AL4 (only if selected 'Alarm' type) |
| 304868 | 1 | Channel 1: linked counter-variable | UINT | 0=Total kWh+ 1=Total kVARh+ 2=Total kWh- 3=Total kVARh- 4=Partial kWh+ 5=Partial kVARh+ 6=Partial kWh- 7=Partial kVARh- |
| 304869 | 2 | Digital output channel 1: pulse | REAL | Pulse weight (kWh/pulse or kVARh/pulse) Value min = 0.001 Value max = 9999.9 |
| 304871 | 1 | Digital output channel 2: enabling | UINT | 0=Remote 1=Alarm 2=Pulse |
| 304872 | 1 | Digital output channel 2: output working mode | UINT | 0=NO 1=NC (only if selected 'Alarm' type) |
| 304873 | 1 | Digital output channel 2: linked alarm | UINT | 0=AL1 1=AL2 2=AL3 3=AL4 (only if selected 'Alarm' type) |
| 304874 | 1 | Channel 2: linked counter-variable | UINT | 0=Total kWh+ 1=Total kVARh+ 2=Total kWh- 3=Total kVARh- 4=Partial kWh+ 5=Partial kVARh+ 6=Partial kWh- 7=Partial kVARh- |
| 304875 | 2 | Digital output channel 2: pulse | REAL | Pulse weight (kWh/pulse or kVARh/pulse) Value min = 0.001 Value max = 9999.0 |

Table 33 - Commands: Write-only

| Modbus Address | Length (words) | Description / Units | Data Format | Notes |
|-----------------------|-----------------------|---|--------------------|---|
| 312369 | 1 | Get clock values | UINT | Value=1 - command executed; Value≠1 - no effect |
| 312370 | 1 | Set clock values | UINT | Value=1 - date and time set |
| 312373 | 1 | Enable optional pulse (digital) outputs | UINT | Value=1 - module enabled; Value=0 - module disabled |
| 312375 | 1 | Enable optional serial communication | UINT | Value=1 - module enabled; Value=0 - module disabled |
| 312545 | 1 | Reset all pulse (digital) outputs (digital output 1 or 2) | UINT | Value=1 - command executed; Value≠1 - no effect |
| 312546 | 1 | Set pulse (digital) output 1 | UINT | Value=0 - reset output; Value=1 - set output; Other values - no effect |
| 312547 | 1 | Set pulse (digital) output 2 | UINT | Value=0 - reset output; Value=1 - set output; Other values - no effect |
| 312548 | 1 | Set all pulse (digital) outputs (digital output 1 or 2) | UINT | Value=1 - command executed; Value≠1 - no effect |
| 312801 | 1 | Reset V L1-N | UINT 16 | Bit0 = 1: Reset Max Value Bit1 = 1: Reset DMD value Bits 2 . . . 15: Reserved |
| 312802 | 1 | Reset V L2-N | UINT 16 | |
| 312803 | 1 | Reset V L3-N | UINT 16 | |
| 312804 | 1 | Reset V L-N Σ | UINT 16 | |
| 312805 | 1 | Reset V L1-L2 | UINT 16 | |
| 312806 | 1 | Reset V L2-L3 | UINT 16 | |
| 312807 | 1 | Reset V L3-L1 | UINT 16 | |
| 312808 | 1 | Reset V L-L Σ | UINT 16 | |
| 312809 | 1 | Reset A L1 | UINT 16 | |
| 312810 | 1 | Reset A L2 | UINT 16 | |
| 312811 | 1 | Reset A L3 | UINT 16 | |
| 312812 | 1 | Reset A N | UINT 16 | |

Table 33 - Commands: Write-only

| Modbus Address | Length (words) | Description / Units | Data Format | Notes |
|-----------------------|-----------------------|----------------------------|--------------------|----------------------------|
| 312814 | 1 | Reset W L1 | UINT 16 | |
| 312815 | 1 | Reset W L2 | UINT 16 | |
| 312816 | 1 | Reset W L3 | UINT 16 | |
| 312817 | 1 | Reset W Σ | UINT 16 | |
| 312818 | 1 | Reset VA L1 | UINT 16 | |
| 312819 | 1 | Reset VA L2 | UINT 16 | |
| 312820 | 1 | Reset VA L3 | UINT 16 | |
| 312821 | 1 | Reset VA Σ | UINT 16 | |
| 312822 | 1 | Reset VAR L1 | UINT 16 | |
| 312823 | 1 | Reset VAR L2 | UINT 16 | |
| 312824 | 1 | Reset VAR L3 | UINT 16 | |
| 312825 | 1 | Reset VAR Σ | UINT 16 | |
| 312826 | 1 | Reset PF L1 | UINT 16 | |
| 312827 | 1 | Reset PF L2 | UINT 16 | |
| 312828 | 1 | Reset PF L3 | UINT 16 | |
| 312829 | 1 | Reset PF Σ | UINT 16 | |
| 312830 | 1 | Reset Hz | UINT 16 | |
| 313569 | 1 | Reset Total kWh+ | UINT | Value=1 - command executed |
| 313570 | 1 | Reset Total kVARh+ | UINT | Value=1 - command executed |
| 313571 | 1 | Reset Total kWh- | UINT | Value=1 - command executed |
| 313572 | 1 | Reset Total kVARh- | UINT | Value=1 - command executed |
| 313573 | 1 | Reset Partial kWh+ | UINT 16 | Value=1 - command executed |
| 313574 | 1 | Reset Partial kVARh+ | UINT 16 | Value=1 - command executed |
| 313575 | 1 | Reset Partial kWh- | UINT 16 | Value=1 - command executed |
| 313576 | 1 | Reset Partial kVARh- | UINT 16 | Value=1 - command executed |
| 313577 | 1 | Reset Run Hours | UINT 16 | Value=1 - command executed |

Alarm and Output Status

Table 34 - Table Properties

| | |
|-----------------------|-----------|
| CIP Assembly Instance | 108 |
| No. of Elements | 2 |
| Length in Words | 2 |
| Data Type | INT |
| Data Access | Read Only |

Table 35 - Alarm and Output Status: read-only Mode Data Table

| Element | Modbus Address | Length (words) | Description / Units | Data Format | Tag Name | Notes |
|-------------------------|----------------|----------------|--------------------------|-------------|--------------|--|
| 0 | 316385 | 1 | Virtual alarm | UINT | VirtualAlarm | Bit value: 0 = OFF Bit value: 1 = ON Bit position: 0: Virtual alarm 1 1: Virtual alarm 2 2: Virtual alarm 3 3: Virtual alarm 4 |
| 1 | 316386 | 1 | Output (port) | UINT | OutputPort | Bit value 0 = OFF Bit value 1 = ON (Important: only if the port is not linked to the counter) Bit position (LSB concept): 0: Port1 1: Port2 |
| 2 (see Important) | 316387 | 1 | HW modules configuration | UINT | | Bit value: 0 = module not present 1 = module present Bit position 0: Relay output 1: Reserved 2: RS-485/RS-232 port 3: Ethernet Modbus 4: Reserved 5: Analog output 6: Reserved 7: Reserved 8: EtherNet/IP 9...15: Reserved |

IMPORTANT A Get_Attribute_Single command returns only elements 0 and 1 of this table. The information in element 2 is accessible in the Identity Object, Class 0x01.

List of Connectable Variables

The variables that are listed in [Table 36](#) can be connected to the Alarms and Analog outputs. The energy variables listed in [Table 37](#) can be connected to the Pulse (digital relay) Outputs.

(X) = available; (O) = not available (variable not available on the display);
 (#) Not available (the relevant page is not displayed); (1) Max value with data storage

Table 36 - Variables for Alarms and Analog Output

| No | Variable | 1-ph. Sys (1P) | 2-ph. Sys (2P) | 3-ph. 3/4-wire Balanced Sys (3P,1) | 3-ph. 2-wire Balanced Sys (3P,2) | 3-ph. 3-wire Unbal. Sys (3P) | 3-ph. 4-wire Unbal. Sys (3P,n) | Notes |
|----|------------|----------------|----------------|--|--|---------------------------------|--------------------------------------|------------------------|
| 0 | VL1-N | X | X | X | X | # | X | (1) |
| 1 | VL2-N | O | X | X | X | # | X | (1) |
| 2 | VL3-N | O | O | X | X | # | X | (1) |
| 3 | VL-N sys | O | X | X | X | # | X | sys= system= $\sum(1)$ |
| 4 | VL1-2 | # | X | X | X | X | X | (1) |
| 5 | VL2-3 | # | O | X | X | X | X | (1) |
| 6 | VL3-1 | # | O | X | X | X | X | (1) |
| 7 | VL-L sys | O | X | X | X | X | X | sys= system= $\sum(1)$ |
| 8 | AL1 | X | X | X | X | X | X | (1) |
| 9 | AL2 | O | X | X | X | X | X | (1) |
| 10 | AL3 | O | O | X | X | X | X | (1) |
| 11 | AN | | | | | | | |
| 12 | WL1 | X | X | X | X | # | X | (1) |
| 13 | WL2 | O | X | X | X | # | X | (1) |
| 14 | WL3 | O | O | X | X | # | X | (1) |
| 15 | WT Total | X | X | X | X | X | X | sys= system= $\sum(1)$ |
| 16 | VAL1 | X | X | X | X | # | X | (1) |
| 17 | VAL2 | O | X | X | X | # | X | (1) |
| 18 | VAL3 | O | O | X | X | # | X | (1) |
| 19 | VATotal | X | X | X | X | X | X | sys= system= $\sum(1)$ |
| 20 | VARL1 | X | X | X | X | # | X | (1) |
| 21 | VARL2 | O | X | X | X | # | X | (1) |
| 22 | VARL3 | O | O | X | X | # | X | (1) |
| 23 | VARTotal | X | X | X | X | X | X | sys= system= $\sum(1)$ |
| 24 | PFL1 | X | X | X | X | # | X | (1) |
| 25 | PFL2 | O | X | X | X | # | X | (1) |
| 26 | PFL3 | O | O | X | X | # | X | (1) |
| 27 | PF sys | X | X | X | X | X | X | sys= system= $\sum(1)$ |
| 28 | Hz | X | X | X | X | X | X | (1) |
| 29 | Phase seq. | O | X | X | X | X | X | |


Table 37 - Variables for Pulse (digital) Output

| No | Variable ⁽¹⁾ | 1-ph. Sys (1P) | 2-ph. Sys (2P) | 3-ph. 3/4-wire Balanced Sys (3P.1) | 3-ph. 2-wire Balanced Sys (3P.2) | 3-ph. 3-wire Unbal. Sys (3P) | 3-ph. 4-wire Unbal. Sys (3P.n) |
|----|-------------------------|----------------|----------------|------------------------------------|----------------------------------|------------------------------|--------------------------------|
| 0 | Total kWh (+) | X | X | X | X | X | X |
| 1 | Total kVARh (+) | X | X | X | X | # | X |
| 2 | Total kWh (-) | X | X | X | X | X | X |
| 3 | Total kVARh (-) | X | X | X | X | # | X |
| 4 | Partial kWh (+) | X | X | X | X | X | X |
| 5 | Partial kVARh (+) | X | X | X | X | # | X |
| 6 | Partial kWh (-) | X | X | X | X | X | X |
| 7 | Partial kVARh (-) | X | X | X | X | # | X |

(1) A (+) indicates consumed and a (-) indicates generated.

Figure 27 - Accuracy

kWh, Accuracy (RDG) Depending on the Current

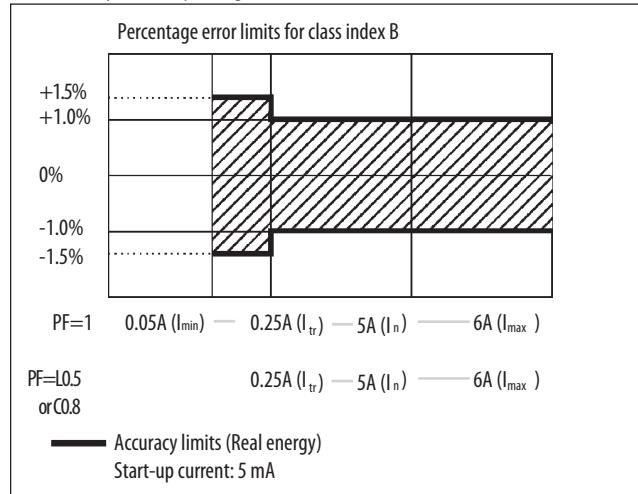

kVARh, Accuracy (RDG) Depending on the Current

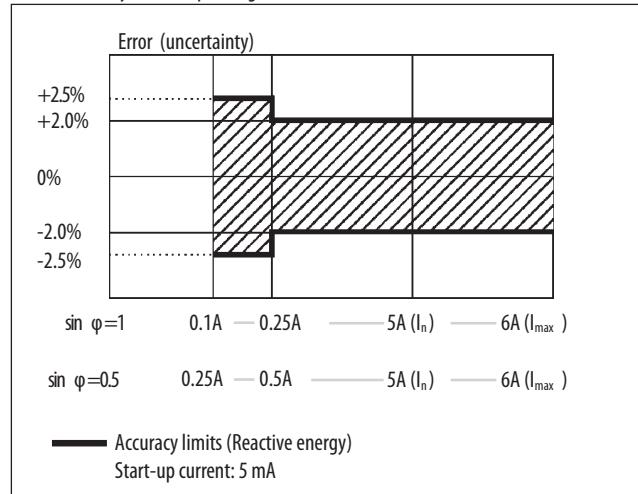


Figure 28 - Calculation Formulas

Phase variables

Instantaneous effective voltage

$$V_{1N} = \sqrt{\frac{1}{n} \cdot \sum_i^n (V_{1N})_i^2}$$

Instantaneous real power

$$W_1 = \frac{1}{n} \cdot \sum_i^n (V_{1N})_i \cdot (A_1)_i$$

Instantaneous power factor

$$\cos\varphi_1 = \frac{W_1}{VA_1}$$

Instantaneous effective current

$$A_1 = \sqrt{\frac{1}{n} \cdot \sum_i^n (A_1)_i^2}$$

Instantaneous apparent power

$$VA_1 = V_{1N} \cdot A_1$$

Instantaneous reactive power

$$\text{var}_1 = \sqrt{(VA_1)^2 - (W_1)^2}$$

System variables

Equivalent three-phase voltage

$$V_\Sigma = \frac{V_1 + V_2 + V_3}{3} \cdot \sqrt{3}$$

Three-phase reactive power

$$\text{var}_\Sigma = (\text{var}_1 + \text{var}_2 + \text{var}_3)$$

Three-phase real power

$$W_\Sigma = W_1 + W_2 + W_3$$

Three-phase apparent power

$$VA_\Sigma = \sqrt{W_\Sigma^2 + \text{var}_\Sigma^2}$$

Three-phase power factor

$$\cos\varphi_\Sigma = \frac{W_\Sigma}{VA_\Sigma} \quad (\text{TPF})$$

Energy metering

$$k \text{ var } hi = \int_{t_1}^{t_2} Q_i(t) dt \cong \Delta t \sum_{n1}^{n2} Q_{nj}$$

$$kWhi = \int_{t_1}^{t_2} P_i(t) dt \cong \Delta t \sum_{n1}^{n2} P_{nj}$$

Where:

i = considered phase (L1, L2 or L3)
 P = real power; Q = reactive power;
 t₁, t₂ = starting and ending time points
 of consumption recording; n = time
 unit; Δ t = time interval between two
 successive power consumptions;
 n₁, n₂ = starting and ending discrete
 time points of consumption recording

Technical Specifications

Table 38 - Input Specifications

| Attribute | Value |
|--|--|
| Rated inputs | System type: 1, 2, or 3-phase |
| Current type | Galvanic insulation with built-in CTs |
| Current range (by CT) | 5 A nom (6 A max) |
| Voltage (by direct connection or VT/PT) | V1: 120/208V LL; V2: 400/600V LL |
| Accuracy (Display and RS-485) (at 25 °C ± 5 °C, R.H. ≤ 60%, 48...62 Hz) | Current, nom (I_{nom}): 5 A Voltage, nom (V_{nom}): V1: 120V AC LN, 208V AC LL; V2: 400V AC LN, 600V AC LL |
| V1 model | I_{nom} : 5 A, I_{max} : 6 A Line-neutral RMS: 40...144V AC Line-Line RMS: 70...250V AC |
| V2 model | I_{nom} : 5 A, I_{max} : 6 A Line-neutral RMS: 160...480V AC Line-line RMS: 277...830V AC |
| Current all models | From 0.01...0.25 A: ±(1.0% of reading (RDG) + 2 digits) From 0.25...6 A: ±(0.5% RDG +2 digits) |
| Line-neutral voltage | In the range V_{nom} : ±(0.5% RDG +1 digit) |
| Line-line voltage | In the range V_{nom} : ±(1.0% RDG +1 digit) |
| Frequency | ±0.1 Hz (45...65 Hz) |
| Real and apparent power | From 0.05... 0.25 A, PF 1: ±(2% RDG +1 digit) From 0.25...6A, PF 0.5L, PF1, PF 0.8C: ±(1.0% RDG+1 digit) |
| Power factor (PF) | ±[0.001+0.5% (1.000 - 'PF RDG')] |
| Reactive power | From 0.5... 6 A, $\sin\phi$ 0.5L/C: ±(2.0% RDG +1 digit) From 0.25... 0.5 A, $\sin\phi$ 0.5L/C: ±(2.5% RDG +1 digit) From 0.25...6 A, $\sin\phi$ 1.0: ±(2.0% RDG+1 digit) From 0.1... 0.25 A, $\sin\phi$ 1: ±(2.5% RDG+1 digit) TIP: $\sin\phi$ = VAR/VA |
| Real energy | Class 1 according to EN62053-21, ANSI C12.1 Class B according to EN50470-3 |
| Reactive energy | Class 2 according to EN62053-23, ANSI C12.1 |
| Start up current | 5 mA |
| Energy additional errors | According to EN62053-21 ANSI C12.1, Influence quantities Class B according to EN50470-3, EN62053-23 |
| Temperature drift | ≤ 200 ppm/°C |
| Sampling rate | 3840 samples/second at 60 Hz, 3200 samples/second at 50 Hz |
| Measurements | See List of Connectable Variables on page 74 |
| Method | True RMS measurements of distorted wave forms |
| Coupling type | With CTs |
| Crest factor | ≤3 (15 A max peak) |

Table 38 - Input Specifications (Continued)

| Attribute | Value |
|--------------------------|---|
| Current overloads | |
| Continuous | 6 A, at 50/60 Hz |
| For 500 ms | 120 A, at 50/60 Hz |
| Voltage overloads | |
| Continuous | $1.2 \times V_{\text{nom}}$ (where V_{nom} is the nominal voltage of the module) |
| For 500 ms | $2 \times V_{\text{nom}}$ (where V_{nom} is the nominal voltage of the module) |
| Input impedance | |
| 400VL-L (V2) | > 1.6 MΩ |
| 208VL-L (V1) | > 1.6 MΩ |
| 5(6)A | < 0.2VA |
| Frequency | 40...440 Hz |

Table 39 - Pulse (digital) Output Specifications (P option)

| Attribute | Value |
|----------------------------------|--|
| Physical outputs | 2 |
| Purpose | For either alarm output or digital output |
| Type | Relay, SPDT type: <ul style="list-style-type: none"> • AC 1 - 5 A at 250V AC • AC 15 - 1 A at 250V AC • DC 12 - 5 A at 24V DC • DC 13 - 1.5 A at 24V DC |
| Configuration | Use the front keypad |
| Function | The outputs can work as alarm outputs but also as digital outputs, communication controlled outputs, or in any other combination |
| Alarms | Up alarm and down alarm that is linked to the virtual alarms, for other details, see Virtual alarms in Table 44 |
| Response time, min | ≤200 ms, filters excluded. Set-point on-time delay: '0 s' |
| Pulse | |
| Signal retransmission | Total: +kWh, -kWh, +kVARh, -kVARh. Partial: +kWh, -kWh, +kVARh, -kVARh |
| Pulse type | The listed variables can be connected to any output |
| Pulse weight | Programmable from 0.001...9999 kWh or kVARh per pulse |
| Pulse duration | 100 ms ≤ ON-state < 120 ms; OFF-state ≥ 120 ms; According to EN62053-31 |
| Communication controlled outputs | The activation of the outputs is managed through the serial communication port |
| Insulation | See Table 47 Isolation Between Inputs and Outputs (1 minute) |

Table 40 - Analog Output Specifications (A option)

| Attribute | Value |
|--|--|
| Number of outputs | 2 |
| Accuracy (at $25^{\circ}\text{C} \pm 5^{\circ}\text{C}$, R.H. $\leq 60\%$) | $\pm 0.2\%$ of full scale |
| Range | 0...20 mA |
| Configuration | By using the front keypad |
| Signal retransmission | The signal output can be connected to any instantaneous variable. See List of Connectable Variables on page 74 |
| Scaling factor | Programmable within the whole range of retransmission; it allows the retransmission management of all values from 0...20 mA DC |
| Response time | ≤ 400 ms typical (filter excluded) |
| Ripple | $\leq 1\%$ (according to IEC 60688-1, EN 60688-1) |
| Total temperature drift | ≤ 500 ppm/ $^{\circ}\text{C}$ |
| Load | $\leq 600 \Omega$ |
| Insulation | See Table 47 Isolation Between Inputs and Outputs (1 minute) |

Table 41 - Serial RS-485/RS-232 Communication Specifications (485 option)

| Attribute | Value |
|---|--|
| RS-485/RS-422 port | |
| Type | Multidrop, bidirectional (static and dynamic variables) |
| Connections 2-wire Max distance 1000 m, termination directly on the module | |
| Addresses | 247, selectable by using the front key-pad or through the software |
| Protocol | Modbus RTU |
| Data (bidirectional) | |
| Dynamic (reading only) | System and phase variables: see the Modbus register maps in Appendix A |
| Static (reading and writing only) | All configuration parameters; see the Modbus register maps in Appendix A |
| Data format | One start bit, eight data bit, no/even/odd parity, 1 stop bit |
| Communication rate | Selectable: 9.6, 19.2, 38.4, 115.2 Kbps |
| Driver input capability | 1/5 unit load. Max 160 transceivers on the same bus |
| Insulation | See Table 47 Isolation Between Inputs and Outputs (1 minute) |
| RS-232 port | |
| Type | Bidirectional (static and dynamic variables) |
| Connections | Three wires. Max distance 15 m |
| Protocol | Modbus RTU |

Table 41 - Serial RS-485/RS-232 Communication Specifications (485 option) (Continued)

| Attribute | Value |
|-----------------------------------|---|
| Data (bidirectional) | |
| Dynamic (reading only) | System and phase variables; see the Modbus register tables in Appendix A |
| Static (reading and writing only) | All configuration parameters; see the Modbus register tables in Appendix A |
| Data format | One start bit, eight data bit, no/even/odd parity, 1 stop bit |
| Communication rate | Selectable: 9.6, 19.2, 38.4, 115.2 Kbps |
| Note | With the rotary switch (on the back of the basic unit) in lock position, modification of programming parameters and reset command with serial communication are not allowed. In this case, just the data reading is allowed |
| Insulation | See Table 47 Isolation Between Inputs and Outputs (1 minute) |

Table 42 - Energy Meters

| Attribute | Value |
|------------------------|---|
| Meters | |
| Total | 4 (9+1 digit) |
| Partial | 4 (9+1 digit) |
| Pulse output | Connectable to total and/or partial meters |
| Energy meter recording | Storage of total and partial energy meters. Energy meter storage format (EEPROM) Min. -9,999,999,999.9 kWh/kVARh Max. 9,999,999,999.9 kWh/kVARh |
| Energy meters | |
| Total energy meters | +kWh, +kVARh, -kWh, -kVARh |
| Partial energy meters | +kWh, +kVARh, -kWh, -kVARh |

Table 43 - Display, Status Indicators, and Commands

| Attribute | Value |
|----------------------------------|---|
| Display refresh time | ≤ 100 ms |
| Display | Four Rows of display each with a max of four digits, 1 Row of display with a max of 10 digits |
| Type | LCD, single color backlight |
| Digit dimensions | Four digits: h 9.5 mm; 10 digits: h 6.0 mm |
| Instantaneous variables read-out | Four digits |
| Energy variables read-out | Imported Total/Partial: 9+1 digit or 10 digits; Exported Total/Partial: 9+1 digit or 10 digits (with '-' sign) |
| Run hours counter | 8+2 digits (99,999,999 hours and 59 minutes max) |
| Overload status | EEEE indication when the value being measured is exceeding the 'Continuous inputs overload' (max measurement capacity) |
| Max and min indication | Max instantaneous variables: 9999; energies: 999,999,999.9 or 9,999,999,999 Min instantaneous variables: 0.000; energies 0.0 |

Table 43 - Display, Status Indicators, and Commands (Continued)

| Attribute | Value | | | | | | | | | | | | | | |
|---|--|-----------|--------------|--|-------|--|------|--|-----|--|---|---|----|--|-----|
| Front-position Status Indicators | | | | | | | | | | | | | | | |
| Virtual alarms | Four red status indicators available in case of virtual alarm (AL1-AL2- AL3-AL4). The real alarm is just the activation of the proper static or relay output if the proper module is available | | | | | | | | | | | | | | |
| kWh consumption (red LED pulsating status indicator) | <p>Depending on the configured CT ratio and PT ratio, the kWh status indicator flashes to indicate the amount of kWh consumed as shown:</p> <table border="1"> <thead> <tr> <th>Condition</th><th>kWh Consumed</th></tr> </thead> <tbody> <tr> <td>$(CT \text{ ratio} * PT \text{ ratio}) \leq 7$</td><td>0.001</td></tr> <tr> <td>$7.1 \geq (CT \text{ ratio} * PT \text{ ratio}) \leq 70.0$</td><td>0.01</td></tr> <tr> <td>$70.1 \geq (CT \text{ ratio} * PT \text{ ratio}) \leq 700.0$</td><td>0.1</td></tr> <tr> <td>$700.1 \geq (CT \text{ ratio} * PT \text{ ratio}) \leq 7000$</td><td>1</td></tr> <tr> <td>$7001 \geq (CT \text{ ratio} * PT \text{ ratio}) \leq 70.00k$</td><td>10</td></tr> <tr> <td>$(CT \text{ ratio} * PT \text{ ratio}) > 70.01k$</td><td>100</td></tr> </tbody> </table> <p>For example, if the configured CT ratio is 60 and the PT ratio is 1, then $60*1 = 60$, which falls into the condition between 7.1 and 70.0. In this example, the kWh LED status indicator flashes every 0.01 kWh. This feature is on all PowerMonitor 500 units and does not require the digital pulse outputs. Max frequency: 16 Hz, according to EN62052-11.</p> | Condition | kWh Consumed | $(CT \text{ ratio} * PT \text{ ratio}) \leq 7$ | 0.001 | $7.1 \geq (CT \text{ ratio} * PT \text{ ratio}) \leq 70.0$ | 0.01 | $70.1 \geq (CT \text{ ratio} * PT \text{ ratio}) \leq 700.0$ | 0.1 | $700.1 \geq (CT \text{ ratio} * PT \text{ ratio}) \leq 7000$ | 1 | $7001 \geq (CT \text{ ratio} * PT \text{ ratio}) \leq 70.00k$ | 10 | $(CT \text{ ratio} * PT \text{ ratio}) > 70.01k$ | 100 |
| Condition | kWh Consumed | | | | | | | | | | | | | | |
| $(CT \text{ ratio} * PT \text{ ratio}) \leq 7$ | 0.001 | | | | | | | | | | | | | | |
| $7.1 \geq (CT \text{ ratio} * PT \text{ ratio}) \leq 70.0$ | 0.01 | | | | | | | | | | | | | | |
| $70.1 \geq (CT \text{ ratio} * PT \text{ ratio}) \leq 700.0$ | 0.1 | | | | | | | | | | | | | | |
| $700.1 \geq (CT \text{ ratio} * PT \text{ ratio}) \leq 7000$ | 1 | | | | | | | | | | | | | | |
| $7001 \geq (CT \text{ ratio} * PT \text{ ratio}) \leq 70.00k$ | 10 | | | | | | | | | | | | | | |
| $(CT \text{ ratio} * PT \text{ ratio}) > 70.01k$ | 100 | | | | | | | | | | | | | | |
| Rear-position Status Indicators | | | | | | | | | | | | | | | |
| On the base | Green as power-on | | | | | | | | | | | | | | |
| On communication modules | Two status indicators: one for TX (green) and one for RX (amber) Flashing green and amber: indicates proper communication wiring On -485 units, Green status indicator off and amber status indicator on: can indicate improper wiring (the wiring for A- and B+ is reversed) | | | | | | | | | | | | | | |
| Keypad | For variable selection, programming of the instrument working parameters, 'dmd', 'max', total energy, and partial energy Reset | | | | | | | | | | | | | | |

Table 44 - Main Functions

| Attribute | Value |
|-----------------------------|---|
| Password | Numeric code of max four digits; two protection levels of the programming data |
| 1st level | Password '0', no protection |
| 2nd level | Password from 1...9999, all data are protected |
| System selection | |
| System 3P.n unbalanced load | 3-phase (4-wire Wye) |
| System 3P unbalanced load | 3-phase (3-wire) Delta Three currents and three line-to-line voltage measurements For ARON connection, two currents (with special wiring on screw terminals) and three line-to-line voltage measurements. |
| System 3P.1 balanced load | 3-phase (3-wire), one current and three line-to-line measurements. 3-phase (4-wire), one current and three line-to-neutral voltage measurements. |
| System 3P.2 balanced load | 3-phase (2-wire), one current and one line-to-neutral (L1) voltage measurement |
| System 2P | 2-phase (3-wire) Split-phase |
| System 1P | 1-phase (2-wire) Single phase |
| Transformer ratio | |
| VT (PT) | 1.0...999.9 / 1000...9999 |
| CT | 1.0...999.9 / 1000...9999 (up to 50 kA in case of CT with 5 A secondary current) |

Table 44 - Main Functions (Continued)

| Attribute | Value |
|--------------------------|---|
| Filter | |
| Operating range | Selectable from 0...100% of the input display scale |
| Filtering coefficient | Selectable from 1...256 |
| Filter action | Measurements, analog signal retransmission, serial communication (fundamental variables: V, A, W, and their derived ones) |
| Displaying | |
| Number of variables | Up to five variables per page. See Front Panel Features on page 9 . Seven different set of variables available according to the application being selected. See Display Features on page 11 . |
| Backlight | The backlight time is programmable from 0 (always on) to 255 minutes |
| Virtual alarms | |
| Working condition | Basic unit (indication only) or with (P) optional digital output modules |
| No. of alarms | Up to 4 |
| Working mode | Up alarm and down alarm |
| Controlled variables | The alarms can be connected to any instantaneous variable. See List of Connectable Variables on page 74 |
| Set-point adjustment | From 0...100% of the display scale |
| Hysteresis From | 0 to full scale |
| On-time delay | 0...9999 s |
| Response time, min | ≤ 200 ms, filters excluded. Set-point on-time delay: '0 s' |
| Reset | By using the front keypad. It is possible to reset the following data: <ul style="list-style-type: none"> • All max and dmd values • Total energy (kWh, kVARh) • Partial energy (kWh, kVARh) |
| Clock | |
| Functions | Universal clock and calendar |
| Time format | Hour: minutes: seconds with selectable 24 hours or AM/PM format |
| Date format | Day-month-year with selectable DD-MM-YY or MM-DD-YY format |
| Battery life | Ten years |
| Easy connection function | For all display selections, both energy and power measurements are independent from the current direction. The displayed energy is always 'imported' |

Table 45 - General Specifications

| Attribute | Value |
|---|--|
| Temperature, operating | -25...40 °C (-13...104 °F) (R.H. from 0...90% noncondensing at 40 °C) according to EN62053-21, EN50470-1 and EN62053-23 |
| Temperature, storage | -30...70 °C (-22...158 °F) (R.H. < 90% noncondensing @ 40 °C) according to EN62053-21, EN50470-1 and EN62053-23 |
| Installation category | Cat. III (IEC60664, EN60664) |
| Insulation | See Table 47 Isolation Between Inputs and Outputs (1 minute) |
| Dielectric strength | 4 kV AC rms for 1 minute |
| Noise rejection CMRR | 100 dB, 48...62 Hz |
| EMC | According to EN62052-11 |
| Electrostatic discharge | 15 kV air discharge |
| Immunity to radiated electromagnetic fields | Test with current: 10V/m from 80...2000 MHz Test without any current: 30V/m from 80...2000 MHz |
| Burst | On current and voltage measuring inputs circuit: 4 kV |
| Immunity to conducted disturbances | 10V/m from 150 KHz...80 MHz |
| Surge | On current and voltage measuring inputs circuit: 4 kV; on 'L' auxiliary power supply input: 1 kV |
| Radio frequency suppression | According to CISPR 22 |
| Standard compliance | |
| Safety | IEC60664, IEC61010-1 EN60664, EN61010-1 |
| Metrology | EN62052-11, EN62053-21, EN62053-23, EN50470-3 |
| Pulse output | DIN43864, IEC62053-31 |
| Approvals | CE, cULus (E56639) |
| Connections | Screw-type |
| Cable cross-section area | Max 2.5 mm ² (14 AWG) Screw tightening torque: 0.4 N·m min/0.8 N·m max Suggested screw tightening torque: 0.5 N·m |
| Housing DIN | |
| Dimensions (WxHxD) | Module holder: 96 x 96 x 50 mm Digital and analog output modules: 89.5 x 63 x 16 mm Serial and Ethernet Communication modules: 89.5 x 63 x 20 mm |
| Depth behind panel, max | 81.7 mm |
| Material | ABS, self-extinguishing: UL 94 V-0 |
| Mounting | Panel mounting |
| Pollution degree | 2 |
| Protection degree, front ⁽¹⁾ | IP65, UL Type 4x indoor (NEMA4x indoor), UL Type 12 (NEMA12), for use on flat surface of a Type 4X Indoor enclosure; for use on flat surface of a Type 12 enclosure. |
| Protection degree, screw terminals | IP20 |
| Weight, approx | 400 g (0.88 lb) (packing included) |

(1) Use with 60 °C or 70 °C copper conductor. Maximum surrounding air temperature 40 °C. Install the device in a pollution degree 2 environment. Open Type Device. The terminals L1, L2, and L3 are acquired by a circuit where devices or system, including filters or air gaps, are used to control overvoltages at the maximum rated impulse withstand voltage peak of 6.0 kV. Devices or system is evaluated by using the requirements in the Standard for Transient Voltage Surge Suppressors, UL 1449. Tighten terminals to 0.79 N·m (7 lb-in). The sum of the internal power consumption of the assembled modules is not be more than 5.3 W.

Table 46 - Power Supply Specification

| Attribute | Value |
|------------------------|---|
| Auxiliary power supply | Nominal: 120/240V AC (50/60 Hz) or 120/240V DC Range: 100...240V AC (48...62 Hz) |
| Power consumption | 6VA |

Table 47 - Isolation Between Inputs and Outputs (1 minute)

| | Measuring Inputs | Relay Outputs | Communication Port | Analog Outputs | Auxiliary Power Supply |
|--------------------|------------------|---------------|--------------------|----------------|------------------------|
| Measuring Inputs | - | 4 kV | 4 kV | 4 kV | 4 kV |
| Relay outputs | 4 kV | 2 kV | 4 kV | 4 kV | 4 kV |
| Communication port | 4 kV | 4 kV | - | 4 kV | 4 kV |
| Analog Outputs | 4 kV | 4 kV | 4 kV | 0 kV | 4 kV |
| Aux. power supply | 4 kV | 4 kV | 4 kV | 4 kV | - |

TIP The channel isolation of the current inputs is 100V AC maximum and therefore require external current transformers.

PowerMonitor 500 EtherNet/IP Device Profile

This section describes the specific CIP Objects, Instances, Attributes, and Services that are supported by the PowerMonitor™ 500 system. This information is for anyone wishing to integrate the PowerMonitor 500 system into existing or planned shop floor networks.

General

For this device profile, we use a PowerMonitor 500 unit and an EtherNet/IP communication module to provide power and energy metering data via an EtherNet/IP network. The data is accessed as instances of the device Assembly Object.

This profile documents objects that are proprietary, or in some way that is altered from their generic behavior. Standard CIP objects that are generic in their interface are documented in the EtherNet/IP specification.

Object Model and Interface

The PowerMonitor 500 system is represented by the following Object Model.

| Object Class | Class Code | Instance Numbers | Number of Connections |
|--------------|------------|------------------|-----------------------|
| Identity | 0x0001 | 1 | 0 |
| Assembly | 0x0004 | 100d...108d | 18 |

Identity Object - CLASS CODE 0x0001

The Identity Object is used to provide identification information about the device. Each node supports at least one instance of the identity object. The Identity Object is used by applications to determine which nodes are on the network. The Identity Object supports Class Attributes (Instance 0) and Instance 1.

See Section 5-2 of the CIP Common Specification for full details of this object.

Identity Object Class Attributes (Instance 0)

| Attr ID | Access | Name | Data Type | Default Value |
|---------|--------|---------------------------------------|-----------|---------------|
| 0x01 | Get | Revision | UINT | 1 |
| 0x02 | Get | Max Instance | UINT | 1 |
| 0x03 | Get | Number of Instances ⁽¹⁾ | UINT | 1 |
| 0x06 | Get | Maximum ID Number Class Attributes | UINT | 7 |
| 0x07 | Get | Maximum ID Number Instance Attributes | UINT | 7 |

(1) Attribute ID 0x03 is not returned for service type Get Attribute All.

Instance 1 (PowerMonitor 500 device and Communication module)

Instance 1 represents the PowerMonitor 500 device with its EtherNet/IP module. Instance 1 of the Identity Object is the one that is browsed by RSLinx® software, relevant to the complete device, that is, the PowerMonitor 500 device and Communication module.

Instance 1 of the Identity Object reports the following instance-specific attribute values.

Identity Object Instance 1 Attributes

| Attribute ID | Access | Name | Data Type | Value |
|--------------|--------|----------------|--------------|---|
| 0x01 | Get | Vendor ID | UINT | 1 (Rockwell Automation) |
| 0x02 | Get | Device Type | UINT | 0x92 (146d) |
| 0x03 | Get | Product Code | UINT | See Product Code Values table |
| 0x04 | Get | Revision | Struct of: | Dynamic (varies with the communication firmware revision) |
| | | Major Revision | USINT | |
| | | Minor Revision | USINT | |
| 0x05 | Get | Status | WORD | Dynamic |
| 0x06 | Get | Serial Number | UDINT | 940000000...950000000 |
| 0x07 | Get | Product Name | SHORT_STRING | PowerMonitor 500 |

Product Code Values

| Part Number | Name | Product Code | Description |
|--------------------|------------------------|---------------------|--|
| 1420-V1-ENT | 146 - PowerMonitor 500 | 4 | PowerMonitor 500 (240V AC, No I/O) Catalog Number 1420-V1-ENT |
| 1420-V1P-ENT | 146 - PowerMonitor 500 | 5 | PowerMonitor 500 (240V AC, Digital I/O) Catalog Number 1420-V1P-ENT |
| 1420-V1A-ENT | 146 - PowerMonitor 500 | 6 | PowerMonitor 500 (240V AC, Analog I/O) Catalog Number 1420-V1A-ENT |
| 1420-V2-ENT | 146 - PowerMonitor 500 | 7 | PowerMonitor 500 (600V AC, No I/O) Catalog Number 1420-V2-ENT |
| 1420-V2P-ENT | 146 - PowerMonitor 500 | 8 | PowerMonitor 500 (600V AC, Digital I/O) Catalog Number 1420-V2P-ENT |
| 1420-V2A-ENT | 146 - PowerMonitor 500 | 9 | PowerMonitor 500 (600V AC, Analog I/O) Catalog Number 1420-V2A-ENT |


Identity Object Services

| Service Code | Class/Instance Usage | Service Name |
|---------------------|-----------------------------|----------------------|
| 0x01 | Class/Instance | Get_Attributes_All |
| 0x0E | Class/Instance | Get_Attribute_Single |

Get Attribute All Service

The Get Attribute All service returns a concatenation of all class or instance attributes.

The following example shows how to configure your message instruction configuration for the Get Attribute All Service type for the Logix Designer application. In this example, we read the class attributes (Instance 0) of the Identity Object.

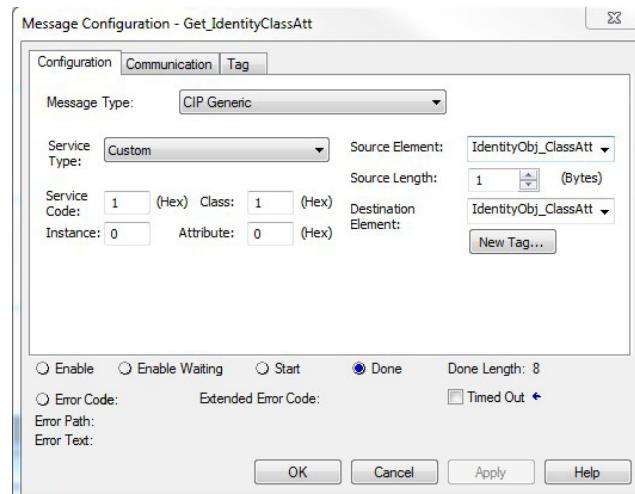

| Parameter | Choice | Notes |
|---------------------|-------------|---|
| Message Type | CIP Generic | |
| Service Type | Custom | |
| Service Code | 1 (hex) | 1 = Get Attribute All e = Get Attribute Single |
| Instance | 0 | 0 = Identity Object Class Attributes 1 = Identity Object Instance 1 Attributes |
| Class | 1 (hex) | 1 = Identity Object |
| Attribute | 0 (hex) | This parameter is irrelevant for Get Attribute All service, but a value must be entered in this parameter for the Customer service type. |
| Source Element | See Notes | This element is irrelevant for the Get Attribute All service, however it must be completed for the Custom service type. In this example, the Source Element and the Destination Element are set to the same array. |
| Source Length | See Notes | This parameter is irrelevant for the Get Attribute All service but must be completed. The value can be less than or equal to the Source Element byte size to avoid error. |
| Destination Element | See Notes | This element is the first element of the controller tag that stores the data being read. The tag is an array of the applicable data type the same length as the Identity Instance. In this example, the tag is an array of five INT elements. |


Get Attribute Single Service

The Get Attribute Single service returns the single attribute that is specified by the parameter Attribute ID.

Request Parameters

| Parameter | Data Type | Description |
|--------------|-----------|--|
| Attribute ID | UINT | Identifies the attribute to be read/returned |

The following example shows how to create your message instruction configuration for the Get Attribute Single Service type for the Logix Designer application. In this example, we read the Instance 1 attributes of the Identity Object.

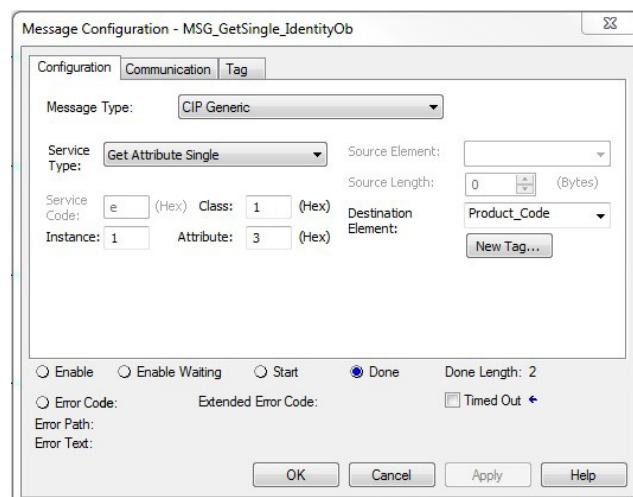

| Parameter | Choice | Notes |
|---------------------|----------------------|---|
| Message Type | CIP Generic | |
| Service Type | Get Attribute Single | |
| Service Code | e (hex) | e = Get Attribute Single |
| Instance | 1 | 0 = Identity Object Class Attributes 1 = Identity Object Instance 1 Attributes |
| Class | 1 (hex) | 1 = Identity Object |
| Attribute | 3 (hex) | This parameter is the attribute ID of the specific attribute to be read. In this example, 3 = Product Code. |
| Source Element | N/A | Not applicable to a Read |
| Source Length | N/A | Not applicable to a Read |
| Destination Element | See Notes | This element is the first element of the controller tag that stores the data being read. The tag is an array of the applicable data type the same length as the Attribute. In this example, the tag is an array of one INT element. |

Assembly Object - CLASS CODE 0x0004

The Assembly Object collects attributes from multiple objects, allowing data to or from each object to be sent or received over a connection. Assembly Objects are used to produce and/or consume data to/from the network. An instance of the Assembly Object can both produce and consume data from the network.

Static assemblies are factory determined and cannot be modified. Members cannot be added or deleted. The implementation of the Assembly Object are static. See Section 5-5 of the CIP Common Specification for full details of this object.

Assembly Object Class Attributes

| Attr ID | Access | Name | Data Type | Default Value |
|---------|--------|---------------------------------------|---------------------------------|---------------------|
| 0x01 | Get | Revision | UINT | 2 |
| 0x02 | Get | Max Instance | UINT | 108d |
| 0x03 | Get | Number of Instances | UINT | 9 |
| 0x04 | Get | Optional Attributes List | STRUCT of UINT ARRAY of UINT | 0x0001, {0x0004} |
| 0x06 | Get | Maximum ID Number Class Attributes | UINT | 7 |
| 0x07 | Get | Maximum ID Number Instance Attributes | UINT | 4 |

Assembly Object Instance Attributes

| Attr ID | Access | Name | Data Type | Default Value |
|---------|--------|------|---------------------------------------|--|
| 0x03 | Get | Data | Instance Dependent ⁽¹⁾ | All member data that is packed into one array. |
| 0x04 | Get | Size | Size (in bytes) of the Data attribute | Instance Dependent ⁽¹⁾ |

(1) See [Chapter 4](#) for more information.

Assembly Object Instances

The communication module Assembly Object supports nine instances (instances 100d to 108d). The Data attributes of these instances can be accessed via Class 1 scheduled connections and via Class 3 or UCMM unscheduled connections.

See [Appendix A, PowerMonitor 500 EtherNet/IP Device Profile](#) for more information on the content of the Assembly Instances.

| Assembly Instance | Size (No. of elements) | Data Type | Data Table Description |
|--------------------------|-------------------------------|------------------|--------------------------------|
| 100 | 20 | UINT | Product Information |
| 101 | 12 | REAL | Real-time Voltage and Current |
| 102 | 18 | REAL | Real-time Power, PF, Frequency |
| 103 | 12 | REAL | Max Voltage and Current |
| 104 | 17 | REAL | Max Power, PF, Frequency |
| 105 | 12 | REAL | Demand Voltage and Current |
| 106 | 17 | REAL | Demand Power, PF, Frequency |
| 107 | 18 | REAL | Energy Meters |
| 108 | 2 | UINT | Alarm and Output Status |


Assembly Object Services

| Service Code | Class/Instance Usage | Service Name |
|---------------------|-----------------------------|----------------------|
| 0x0E | Class/Instance | Get Attribute Single |

Get Attribute Single Service

The Get Attribute Single service returns the single attribute that is specified by the parameter Attribute ID.

The following example shows how to create your message instruction configuration for the Get Attribute Single Service type for the Logix Designer application. In this example, we read the Instance 102 attributes of the Assembly Object.

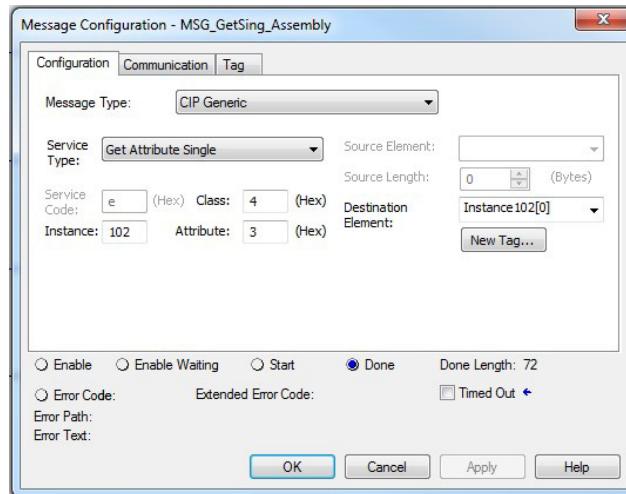

| Parameter | Choice | Notes |
|---------------------|----------------------|--|
| Message Type | CIP Generic | |
| Service Type | Get Attribute Single | |
| Service Code | e (hex) | e = Get Attribute Single |
| Instance | 102 | This parameter is the Assembly Instance of the specific data table to be read. In this example, 102 = Real-time Power, PF, Frequency |
| Class | 4 (hex) | 4 = Assembly Object |
| Attribute | 3 (hex) | 3 = Data 4 = Size of data |
| Source Element | N/A | Not applicable to a Read |
| Source Length | N/A | Not applicable to a Read |
| Destination Element | See Notes | This element is the first element of the controller tag that stores the data being read. The tag is an array of the applicable data type the same length as the Attribute. In this example, the tag is an array of 18 REAL elements. |

Connections

The Assembly Object supports both scheduled (Class 1) and unscheduled connections (Class 3 and UCMM). Both connections are used to access instances 100d to 108d of the Assembly Object:

- UDP - Nine Class 1 connections each to the nine Assembly Instances 100 to 108 at 100 ms RPI ran stable
- TCP - Nine Class 3 connections each to the nine Assembly Instances 100 to 108 at 200 ms RPI ran stable
- Both - UDP and TCP can run simultaneously

Heartbeat Instances

With the Assembly Instances shown earlier, the communication module also recognizes two heartbeat instances. A heartbeat instance is a virtual output instance that is specified by devices wishing to establish Input Only and Listen Only Class 1 I/O connections to the communication module. Data cannot be read from or written to a heartbeat instance. The heartbeat instance is merely a programming construct that serves to keep the connection active.

The communication module heartbeat instances are Instance 98 for the Input Only connection and Instance 99 for the Listen Only connection.

Behavior

The purpose of the Assembly Object is to act as a network interface to the PowerMonitor 500 unit data. That data is accessed by various means: Class 1 or Class 3 connections and also with UCMM messages.

Technical Notes

This section lists additional technical information about Ethernet network communication.

Parameters

For the EtherNet/IP communication module, set the following parameters by using Programming mode through the base module front panel:

- IP address
- Subnet
- Gateway
- Modbus TCP/IP port
- Address Conflict Detect (ACD)

Modbus TCP/IP

The communication module supports Modbus TCP/IP. The protocol is the same as the PowerMonitor 500 unit with RS-485 (Modbus RTU). See [Chapter 4](#) for protocol details. In this product, only one Modbus TCP/IP connection (one socket) is allowed.

The EtherNet/IP and Modbus TCP/IP do not run concurrently. If Modbus TCP/IP communication occurs, EtherNet/IP communication stops temporarily but recovers in a minute or two.

IMPORTANT We recommend that you use Modbus TCP/IP to configure or write to the PowerMonitor 500 unit and that you use Ethernet/IP to read the PowerMonitor 500 unit.

ACD

If an address conflict is detected from the communication module, then the base module displays 'ACD Found'. In that case, it is necessary to check the network configuration, resolve the problem, and then cycle control power to the power monitor to re-establish communication.

TCP/IP Port

Default EtherNet/IP ports include the following:

- UDP (implicit message): 2222 (0x08AE)
- TCP (explicit message): 44818 (0xAF12)

You can reassign the default Modbus TCP/IP port: 502 (0x01F6).

Unit Configuration - Base Firmware Revision 11 and Earlier


Configure with the Display

The PowerMonitor™ 500 unit provides menu-based configuration (programming) by using its front panel display. The programming menus let you select parameters to edit, select digits within parameters, and increase or decrease the value of each digit.

Place the unit in Programming mode by pressing Program/select (8) for about 2 seconds. The front panel displays the PASSWORD? menu page 0 in Editing mode. Enter the correct password by using the Up and Down arrows (the default password is 0) and press Program/select. The front panel then displays the CHANGE PAS menu page 10.

See the programming flowchart that begins on [page 98](#) for a view of the organization of programming menus and submenus. Each page is identified with a number, which is displayed in the top right corner. Menu page numbers end in zero, while submenu pages end in 1 through 9. For example, the Change Password page is menu 10. Likewise, the Dmd page is menu 80, and the demand interval Time page is menu 82.

While you are programming the power monitor, the display items and control buttons function one way when you are navigating between menu or submenu pages, and another way when you are editing a menu page.

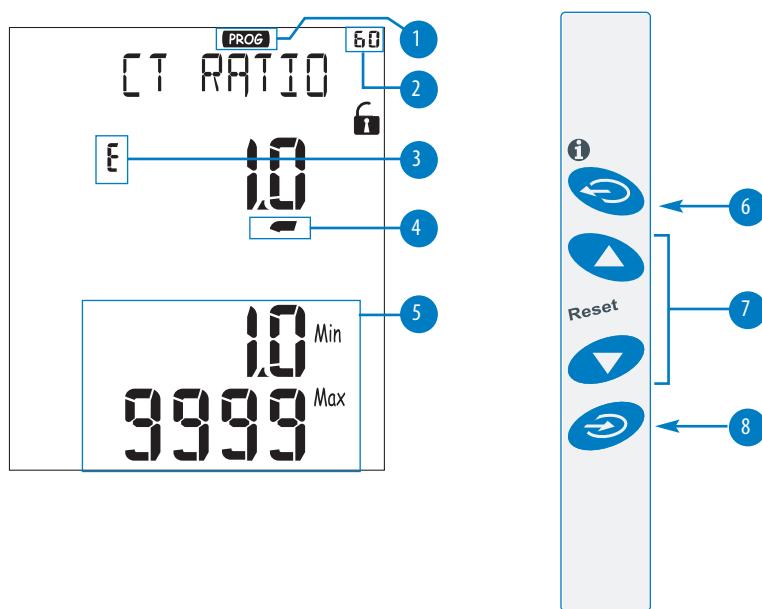Figure 29 - Front Panel Display**Table 48 - Front Panel Display Descriptions**


| Display Item | Description | Navigating Menus | Editing a Menu |
|--------------|----------------------------|--|--|
| 1 | Programming mode indicator | Indicates programming mode. | |
| 2 | Programming menu page | Identifies the current programming menu page. See the programming flowchart that begins on page 98 . | |
| 3 | Editing mode indicator | Does not appear. | Indicates the parameter being edited. |
| 4 | Cursor | Does not appear. | Appears beneath the digit currently being edited. |
| 5 | Permitted range | Displays the permitted range of values for the selected parameter. | |
| 6 | Exit button | <ul style="list-style-type: none"> When in a menu page, exits Programming mode without saving changes. Program/select button confirms exit. When in a submenu page, exits to menu page. | <ul style="list-style-type: none"> Moves the cursor one digit to the left. When the leftmost digit is selected, dP is indicated and you can change the decimal point and multiplier (see Edit Decimal Point and Multiplier on page 97). When held for at least 2 seconds, cancels the edit and restores the previous value of the selected parameter. |
| 7 | Up button | Selects the next higher-numbered menu or submenu page. | <ul style="list-style-type: none"> Increments the value of the digit indicated by the cursor. When dP is indicated, increments the decimal point and multiplier. |
| | Down button | Selects the next lower-numbered menu of submenu page. | <ul style="list-style-type: none"> Decrements the value of the digit indicated by the cursor. When dP is indicated, decrements the decimal point and multiplier. |
| 8 | Program/select button | <ul style="list-style-type: none"> Press and hold for 2 seconds to enter the Program mode. Selects a menu page for editing. When in a menu page with submenus, displays the first submenu page. After pressing the Exit button, confirms exit from Programming mode without saving changes. From End menu page 260, saves new configuration and exits Programming mode. | Stores the new value of the selected parameter, but does not save the new configuration to the power monitor. |

IMPORTANT To save programming changes, navigate to the End menu page 260 and press Program/select. To exit the Programming mode without saving any changes, press Exit and confirm by pressing Program/select. If no buttons have been pressed for 2 minutes, the power monitor exits Programming mode without saving any changes.

TIP You can make programming changes by using the PowerMonitor 500 software.


Edit Decimal Point and Multiplier

When the cursor is beneath the last digit on the left, pressing Exit (6) lets you change the decimal point and the multiplier (9) (k or M). The blinking 'dP' (decimal point) text (10) indicates this capability.

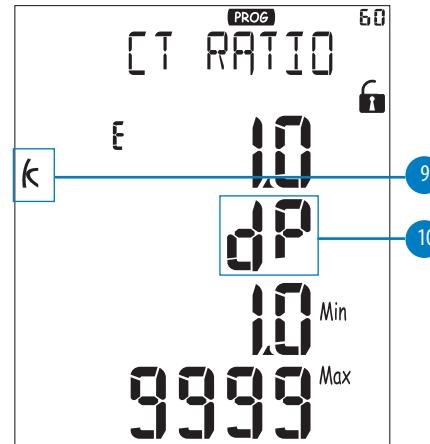

To modify the decimal point position and the multiplier, use the Up and Down arrow (7) to select the desired value.

Configuration Flowchart

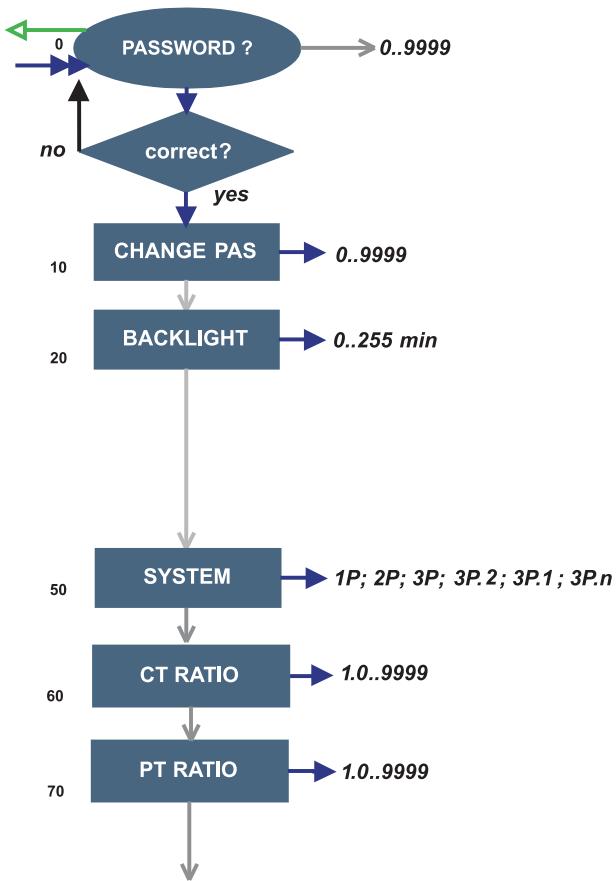

The following flowchart shows the configuration menus and submenus that are accessed through the display. To navigate through the menu pages, use the up and down arrows. To enter Edit mode or to access a submenu, press the Program/select button. The menu pages available depend on your module type.

- 0 PASSWORD?: enter password by using up and down arrows to change the digit. Use the Exit button to move the cursor between digits. Press the Program/select button to confirm password. The default password is 0.

- 10 CHANGE PAS: this function lets you modify the PASS value with a new value (from 0...9999).


- 20 BACKLIGHT: adjusts backlight time from 0...255 minutes (0 = always on).

- 50 SYSTEM: this function lets you select the type of electrical system.

See pages [19](#)...[22](#) for descriptions and wiring diagrams that correspond to the system type designations, such as, 3P and 3P.n.

- 60 CT RATIO: this function lets you select the value of the CT ratio (primary/secondary ratio of the current transformer being used). Example: if the CT primary (current transformer) has a current of 300 A and the secondary a current of 5 A, the CT ratio corresponds to 60 (300 divided by 5).

- 70 PT RATIO: this function lets you select the value of the PT (VT) ratio (primary/secondary ratio of the potential/voltage transformer being used). Example: if the primary of the connected PT is 20 kV and the secondary is 100V, then the PT ratio corresponds to 200 (20,000 divided by 100). If the voltage level is such that PTs are not required and are not in place, configure the PT ratio to 1.0.

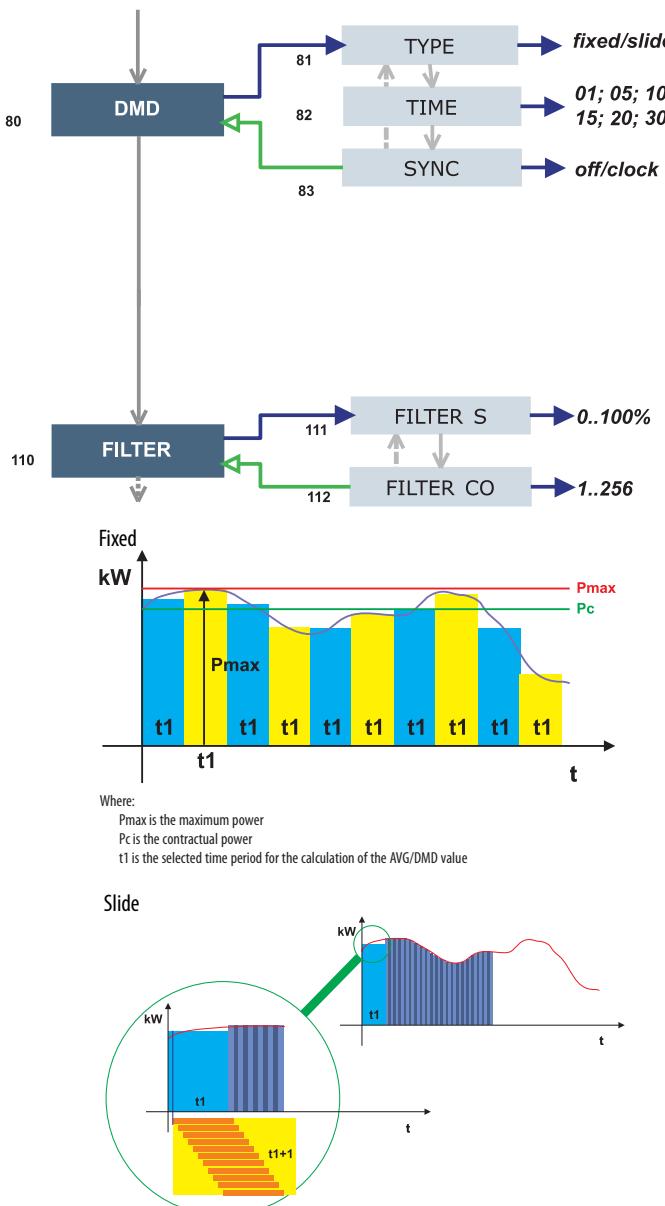

- 80 DMD: This function lets you select the calculation method of the DMD/AVG value of the selected variable.

- 81 TYPE: select the type of Calculation mode to be used for the DMD/Avg calculation.

FIXED: The instrument calculates the Avg/DMD value of the measured variable over the selected interval, updates the Avg/DMD value at the end of the interval, then resets and starts a new calculation.

SLIDE: When first configured, the instrument calculates the Avg/DMD value and updates its value at the beginning after the first selected interval. After the first interval, the instrument calculates the Avg/DMD value every minute. After the calculation, the instrument generates a window whose width is the selected interval and that moves forward every minute.

- 82 TIME: select the time interval for the DMD/Avg calculation. Default is 15 minutes.

- 83 SYNC: select the Synchronization mode. That mode is the method that controls the calculation method of the average/demand according to the selected time.


- 110 FILTER: The digital filter makes it possible to stabilize the display of fluctuating measurements.

See [Digital Filtering Operation on page 35](#).


- 111 FILTER S: set the operating range (span) of the digital filter. The value is expressed as a % (filter to 0.0 means filter excluded).

- 112 FILTER CO: set the filtering coefficient of the instantaneous measures. By increasing the value, also the stability and the settling time of the measures are increased.

IMPORTANT: Some specific menus display only if the relevant modules are installed.

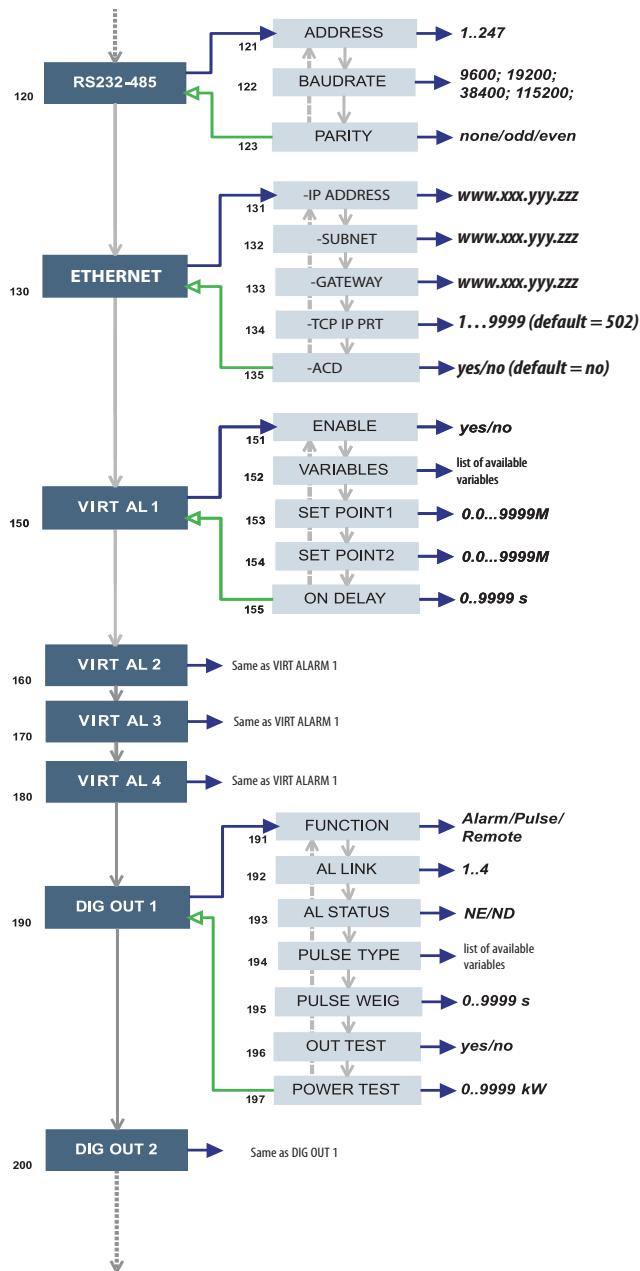

- 120 RS232-485: User settings for the RS-232 and RS-485 serial communication ports.
- 130 ETHERNET: User settings for the Ethernet communication port.
- 150 VIRT AL 1: This virtual alarm function lets you set the alarm parameters.
 - 151 ENABLE: enable (YES) or disable (NO) the alarm.
 - 152 VARIABLES: set the variable to be linked to the alarm.
 - 153 SET 1: set the on alarm set point of the variable.
 - 154 SET 2: set the off alarm set point of the variable.
 - 155 ON DELAY: set a delay on activation of the alarm.
- 190 DIG OUT 1: This function lets you link a virtual alarm to the digital relay output and to its working parameters.
 - 191 FUNCTION:
 - Alarm - the digital output is enabled when the associated alarm status occurs.
 - Pulse - the measured energy is retransmitted by the digital output with pulses.
 - Remote - the digital output can be controlled through a command that is sent through the serial communication port.
 - 192 AL LINK: select the virtual alarm that it has to be associated.
 - 193 AL STATUS: ‘ND’ (normally de-energized relay) or ‘NE’ (normally energized relay).
 - 195 PULSE WEIG: selects the pulse weight (kWh per pulse).
 - 196 OUT TEST: Tests the digital output. YES enables the test, No disables the test.
 - 197 POWER TEST: sets a simulated power value (kW) to test the energy pulse output. The function remains active until you exit the programming menu.

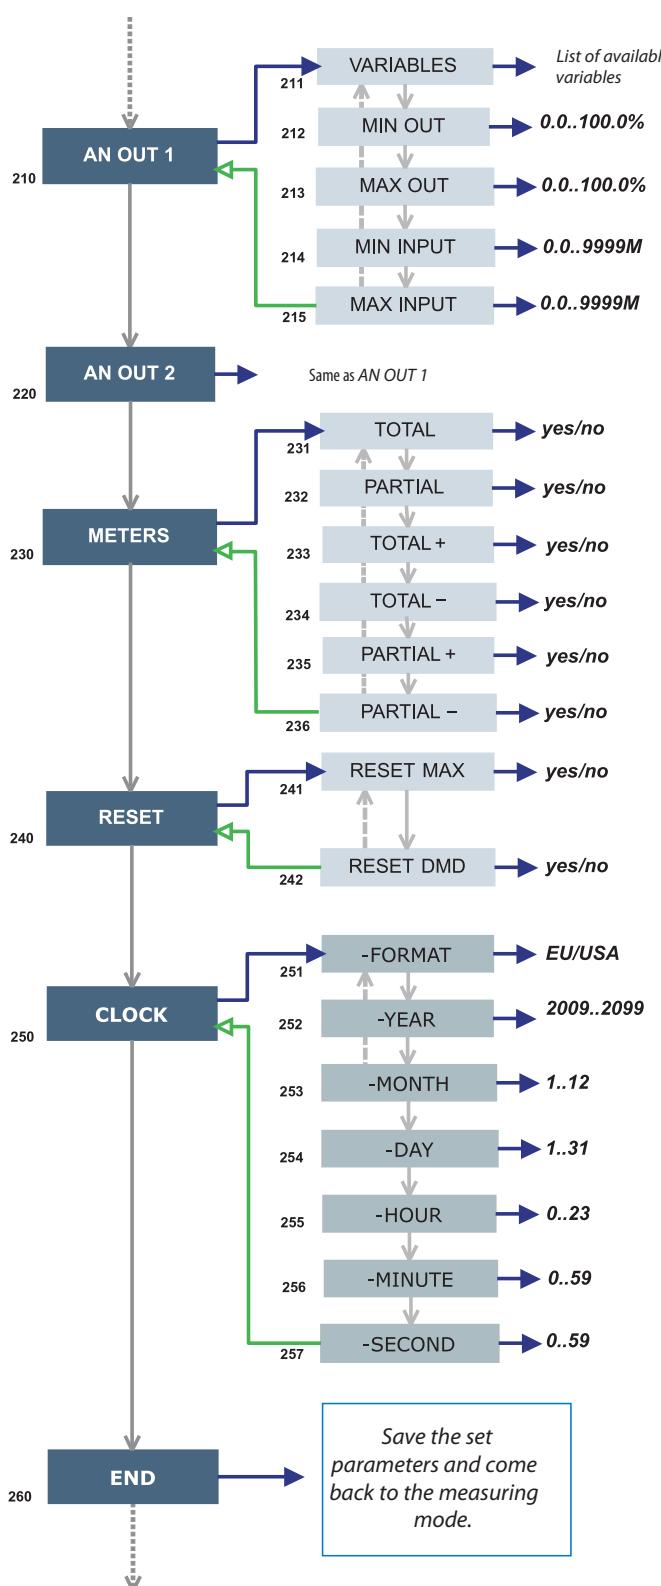

- 210 AN OUT 1: User programming of the analog outputs (0...20 mA).
 - 211 VARIABLES: selects the variable to be retransmitted with the analog output.
 - 212 MIN OUTPUT: sets the value that is expressed as % of the output range (0...20 mA) that corresponds to the minimum measured value.
 - 213 MAX OUTPUT: selects the value that is expressed as % of the output range (0...20 mA) that corresponds to the maximum measured value.
 - 214 MIN INPUT: minimum value of the variable input range, corresponds to the 'MIN OUTPUT' value of the analog output.
 - 215 MAX INPUT: maximum value of the variable input range corresponds to the 'MAX OUTPUT' value of the analog output.
- 230 METERS: reset the ENERGY METERS. Choose among the following:
 - 231 TOTAL, 222 PARTIAL: resets all energy meters, total and partial.
 - 233 TOTAL +: resets the total meters of imported energy.
 - 234 TOTAL -: resets the total meters of exported energy.
 - 235 PARTIAL +: resets the partial meters of imported energy.
 - 236 PARTIAL -: resets the partial meters of exported energy.
- 240 RESET: Resets the MAX or dmd stored values.
- 250 CLOCK:
 - 251 FORMAT: UE, sets the European time format as 24h (00:00) or sets the time format as 12h (12:00 AM/PM).
 - 252 YEAR: sets the current year.
 - 253 MONTH: sets the current month.
 - 254 DAY: sets the current day.
 - 255 HOUR: sets the current hour.
 - 256 MINUTE: sets the current minute.
 - 257 SECOND: sets the current second.
- 260 END:
 - To save programming changes, press Program/select.
 - To exit the Programming mode without saving any changes, press Exit and confirm by pressing Program/select.
 - If no buttons are pressed for two minutes, the unit exits Programming mode without saving changes.

Notes:

- Numeric**
- 485 option** 79
- A**
- A option** 79
about PowerMonitor 500 7
access information page 13
accuracy 8, 75
additional button function 10
Add-on profile 46
 available connection 48
address
 Modbus 55
 physical 55
alarm configuration 39
alarm icon 11
analog output 21
 configuration 38, 69
analog output specification 79
available connection 48
- B**
- billing** 7
button 9
 additional function 10
 description 26, 96
- C**
- calculation formula** 76
catalog number explanation 6
change
 decimal point 27, 97
 multiplier 27, 97
CIP generic 44
class 1 51
command specification 80
command 71
communication
 EtherNet/IP 8
 Modbus 8, 54
 port 7
 RS-232 8, 54
 RS-485 8, 54
communication command 43
configurable alarm 8
configuration 25, 95
 alarm 39
 analog output 38
 analog output communication 69
 relay output communication 70
 RS-232 communication 68
 RS-485 communication 68
configuration alarm 68
configuration base unit 67
- D**
- configuration flow chart** 28 ... 32, 98 ... 101
control 7
cost allocation 7
current transformer wiring 17
- E**
- data table** 57
data type supported 55
decimal point change 27, 97
default setting
 gateway address 33
 IP address 33
 subnet mask 33
diagram,wiring 17
digital filter programming example 35 ... 37
digital filtering operation 35
digital output specification 78
digital output wiring 21
dimension 8, 15
 optional module 15
dimension drawing 15
display 8, 11
 alarm icon 11
 feature 11
 icon 11
display description 26, 96
display specification 80

F**factory installed option** module 15
 wiring 21**FactoryTalk EnergyMetrix** 7**feature** 7**filter C0** 35**filter S** 35**formula** 76**front panel** button 9, 26, 96
 indicator 9**function** 7**G****gateway address** 33**general specification** 83**geometric representation** 58**ground connection** 55**I****icon** alarm 11
 display 11**IEC vs NEMA diagram** 17**implicit messaging** 51**indication** 11**indicator** 9**information access** 13**input specification** 77**installation** 15, 16**IP address** 33**IP65** 7, 8**isolation between input and output** 84**L****line amplifier** 55**list of variable** 74 ... 75**load profiling** 7**M****main function specification** 81**menu page number** 25, 95**message setup** 44, 51**Modbus** address 55
 command 71
 communication 54
 configure alarm 68
 configure base unit 67
 data type supported 55
 energy metering value 67
 functions supported 54
 real-time metering demand 64, 65
 real-time metering value 60, 61, 62, 63
 register format 56
 register map 59
 status 73
 TCP/IP 54**monitoring** 7**multiplier change** 27, 97**O****optional module**

dimension 15

P**P option specification** 78**panel cut-out** 15**password** 25, 95**physical address** 55**port** EtherNet/IP 7
 RS-485/RS-232 7**power and power factor**

geometric representation 58

power supply 8**power supply wiring** 21**power system**

monitoring 7

power system control 7**PowerMonitor 500** about 7
 configuration 25, 95
 cut-out 15
 dimension 15
 feature 7
 function 7
 installation 15
 panel installation 16
 wiring terminal 16**product compatibility and download center**

46

product information 59**programming mode** 25, 95

25, 95

protection IP65 7, 8
 NEMA 12 8
 NEMA 4X 8**pulse output** 41**pulse output specification** 78

R

real-time metering demand 64, 65
real-time metering value 60, 61, 62, 63
register format 56
register map 59
relay output
 configuration 70
RS-232 54
 configuration 68
 wiring 22
RS-485 54
 configuration 68
 wiring 22

S

save change 27, 97
serial communication specification 79
shielded cable 55
single-phase 8
software
 FactoryTalk EnergyMetrix 7
specification
 485 option 79
 A option 79
 analog output 79
 command 80
 digital output 78
 display 80
 energy meter 80
 general 83
 input 77
 isolation between input and output 84
 main function 81
 P option 78
 power supply 84
 pulse output 78
 relay output 78
 RS-485 and RS-232 79
 serial communication 79
 status indicator 80
status 73
status indicator specification 80
sub-billing 7
subnet mask 33

T

three-phase 8
trigger digital output
 39
 alarm 40
 pulse 40
 remote 41

V

variable 74 . . . 75
voltage range 8

W

wiring
 analog output 21
 digital output 21
 Ethernet 23
 RS-232 22
 RS-485 22
wiring diagram 17
wiring terminal 16

Notes:

Rockwell Automation Support

Use the following resources to access support information.

| | | |
|---|---|---|
| Technical Support Center | Knowledgebase Articles, How-to Videos, FAQs, Chat, User Forums, and Product Notification Updates. | https://rockwellautomation.custhelp.com/ |
| Local Technical Support Phone Numbers | Locate the phone number for your country. | http://www.rockwellautomation.com/global/support/get-support-now.page |
| Direct Dial Codes | Find the Direct Dial Code for your product. Use the code to route your call directly to a technical support engineer. | http://www.rockwellautomation.com/global/support/direct-dial.page |
| Literature Library | Installation Instructions, Manuals, Brochures, and Technical Data. | http://www.rockwellautomation.com/global/literature-library/overview.page |
| Product Compatibility and Download Center (PCDC) | Get help determining how products interact, check features and capabilities, and find associated firmware. | http://www.rockwellautomation.com/global/support/pcdc.page |

Documentation Feedback

Your comments will help us serve your documentation needs better. If you have any suggestions on how to improve this document, complete the How Are We Doing? form at http://literature.rockwellautomation.com/idc/groups/literature/documents/du/ra-du002_en-e.pdf.

Rockwell Automation maintains current product environmental information on its website at <http://www.rockwellautomation.com/rockwellautomation/about-us/sustainability-ethics/product-environmental-compliance.page>.

Allen-Bradley, CompactLogix, ControlLogix, FactoryTalk EnergyMetrix, PowerMonitor, Rockwell Automation, Rockwell Software, RSLink, RSLogix, RSNetWorx, and Studio 5000 Logix Designer are trademarks of Rockwell Automation, Inc.

Trademarks not belonging to Rockwell Automation are property of their respective companies.

Rockwell Otomasyon Ticaret A.Ş., Kar Plaza İş Merkezi E Blok Kat:6 34752 İçerenköy, İstanbul, Tel: +90 (216) 5698400

www.rockwellautomation.com

Power, Control and Information Solutions Headquarters

Americas: Rockwell Automation, 1201 South Second Street, Milwaukee, WI 53204-2496 USA, Tel: (1) 414.382.2000, Fax: (1) 414.382.4444

Europe/Middle East/Africa: Rockwell Automation NV, Pegasus Park, De Kleetlaan 12a, 1831 Diegem, Belgium, Tel: (32) 2 663 0600, Fax: (32) 2 663 0640

Asia Pacific: Rockwell Automation, Level 14, Core F, Cyberport 3, 100 Cyberport Road, Hong Kong, Tel: (852) 2887 4788, Fax: (852) 2508 1846

Publication 1420-UM001G-EN-P - April 2018

Supersedes Publication 1420-UM001F-EN-P - January 2017

Copyright © 2018 Rockwell Automation, Inc. All rights reserved. Printed in the U.S.A.