

Replacement Parts

This chapter contains the following information:

- a table of MicroLogix 1500 replacement parts
- procedure for replacing the lithium battery
- illustrations of the MicroLogix 1500 replacement doors and terminal blocks

MicroLogix 1500 Replacement Kits

The table below provides a list of replacement parts and their catalog number.

Description	Catalog Number
Lithium Battery (See page B-2.)	1747-BA
ESD Barrier	1764-RPL-TRM1
Base Terminal Doors (See page B-6.)	1764-RPL-TDR1
Processor Access Door (See page B-6.)	1764-RPL-CDR1
Door Combination Kit, includes ESD Barrier, Terminal Door, Access Door, Base Comms Door (See page B-6.), and Trim Pots/Mode Switch Cover Door (See page B-6.)	1764-RPL-DR
17-Point Terminal Block (for inputs on 1764-24AWA and -24BWA bases) (See page B-5.)	1764-RPL-TB1
21-Point Terminal Block (for inputs of 1764-28BXB and outputs for all base units)(See page B-5.)	1764-RPL-TB2

Lithium Battery (1747-BA)

IMPORTANT

When the processor's Battery Low indicator is lit, install a backup battery immediately. After the indicator turns on, the battery lasts for at least:

- 14 days for the 1764-LSP
- 7 days for the 1764-LRP

Installing

Follow the procedure below to ensure proper replacement battery installation.

IMPORTANT

Do not remove the permanent battery when installing replacement battery.

1. Insert battery into replacement battery pocket with wires facing up.
2. Insert replacement battery wire connector into connector port.
3. Secure battery wires under wire latch (as shown below).

