



---

1454-9F DB-9 Female to 5 Pos Screw Terminal  
Adapter (Serial protocol modules only)

ProSoft Solutions CD

---

**Note:** The DB-9 Female to 5 Pos Screw Terminal Adapter is not required on Ethernet modules and is therefore not included in the carton with these types of modules.

### Quantum / Unity Hardware

This guide assumes that you are familiar with the installation and setup of the Quantum / Unity hardware. The following should be installed, configured and powered up before proceeding:

- Quantum or Unity Processor
- Quantum rack
- Quantum power supply
- Quantum Modbus Plus Network Option Module (NOM Module) (optional)
- Quantum to PC programming hardware
- NOM Ethernet or Serial connection to PC

### PC and PC Software

- Windows-based PC with at least one COM port  
Quantum programming software installed on machine or
- Concept™ PLC Programming Software version 2.6  
or  
ProWORX PLC Programming Software  
or  
UnityPro XL PLC Programming Software
- HyperTerminal (used in this guide) This is a communication program that is included with Microsoft Windows. You can normally find it in **Start → Programs → Accessories → Communications**.

**Note:** ProTalk modules are compatible with common Quantum / Unity programming packages, including Concept and UnityPro XL. For all other programming packages, please contact technical support.