












# Motor Protection Circuit Breakers and Motor Circuit Protectors

## Accessories

Description		For Use With	Cat. No.
	<b>ECO Connecting Module — 12 A</b> <ul style="list-style-type: none"><li>For DOL and reversing starters</li><li>Eco-starters mount on single DIN Rail (140M on DIN Rail)</li><li>Electrical and mechanical interconnection of 140M and 100-K contactors</li></ul>	140M-C to 100-K	140M-C-PEK12
	<b>ECO Connecting Modules — 25 A</b> <ul style="list-style-type: none"><li>Eco-starters mount on single DIN Rail (140M on DIN Rail)</li><li>Electrical and mechanical interconnection of 140M MPCB and 100-C (with AC coils or 24V DC electronic coils) contactors</li></ul>	140M-C to 100-C09...C23	140M-C-PEC23
		140M-D to 100-C09...C23	140M-D-PEC23
	<b>ECO Connecting Modules — 25 A</b> <ul style="list-style-type: none"><li>Eco-starters mount on single DIN Rail (100-C on DIN Rail)</li><li>Electrical and mechanical interconnection of 140M MPCB and 100-C (with AC or DC coils)</li></ul>	140M-C, 140M-D to 100-C09...C23	140M-C-PEC23A
		140M-C to 100-C09...C23	140M-C-PNC23
	<b>Connecting Modules — 25 and 45 A</b> <ul style="list-style-type: none"><li>Contactor and MPCB <b>MUST BE</b> mounted separately on (2) DIN Rails</li><li>Electrical and mechanical interconnection of 140M and 100-C (with AC coils)</li></ul>	140M-D to 100-C09...C23	140M-D-PNC23
		140M-D to 100-C30...C37	140M-D-PNC37
		140M-F to 100-C30...C37	140M-F-PNC37
		140M-F to 100-C43	140M-F-PNC43
	<b>Coil Modules — 25 A and 45 A</b> <ul style="list-style-type: none"><li>For use with Bulletin 103T/107T 3-component starters</li></ul>	140M-C, -D to 100-C09...C23	140M-C-PSC23
		140M-D, -F to 100-C30...C43	140M-F-PSC43
	<b>Spacing Adapter</b> <ul style="list-style-type: none"><li>Required for self-protected combination motor controller (Type E) applications of Bul. 140M-C, -D, and -F MPCBs. Not for use with bus bars.</li></ul>	140M-C, -D	140M-C-TE1
		140M-F	140M-F-TE
	<b>Feeder Block for Compact Busbar</b> <ul style="list-style-type: none"><li>Supply of compact busbars</li><li>Increases terminal capacity</li></ul>	140M-C	140M-C-WBE
		140M-F	140M-F-WBE
	<b>Feeder Terminal for Compact Busbar</b> <ul style="list-style-type: none"><li>For supply of compact busbars</li><li>Top feed — overlaps compact busbar</li><li>Meets IEC spacing requirements</li></ul>	140M-C, -D	140M-C-WTN
	<b>Feeder Terminal for Compact Busbar</b> <ul style="list-style-type: none"><li>For supply of compact busbars</li><li>Top feed — overlaps compact busbar</li><li>Meets UL Type E spacing requirements</li></ul>	140M-C, -D	140M-C-WTEN
		140M-F	140M-F-WTE
	<b>Three-Phase Compact Busbar for 32 A Motor Protection Circuit Breakers — 64 A Max. Continuous Current</b> <ul style="list-style-type: none"><li>45 mm spacing</li><li>For use with front-mounted auxiliary contact</li></ul>	2 connections	140M-C-W452N
		3 connections	140M-C-W453N
		4 connections	140M-C-W454N
		5 connections	140M-C-W455N
	<b>Three-Phase Compact Busbar for 32 A Motor Protection Circuit Breakers — 64 A Max. Continuous Current</b> <ul style="list-style-type: none"><li>54 mm spacing</li><li>For use with side-mounted auxiliary contact</li></ul>	2 connections	140M-C-W542N
		3 connections	140M-C-W543N
		4 connections	140M-C-W544N
		5 connections	140M-C-W545N
	<b>Three-Phase Compact Busbar for 45 A Motor Protection Circuit Breakers — 115 A Max. Continuous Current</b> <ul style="list-style-type: none"><li>54 mm spacing</li><li>For use with front-mounted auxiliary contact</li></ul>	2 connections	140M-F-W542
		3 connections	140M-F-W543
		4 connections	140M-F-W544
		5 connections	140M-F-W545
	<b>Three-Phase Compact Busbar for 45 A Motor Protection Circuit Breakers — 115 A Max. Continuous Current</b> <ul style="list-style-type: none"><li>63 mm spacing</li><li>For use with side-mounted auxiliary contact</li></ul>	2 connections	140M-F-W632
		3 connections	140M-F-W633
		4 connections	140M-F-W634
		5 connections	140M-F-W635
	<b>Terminal Cover</b> <ul style="list-style-type: none"><li>For covering of unused compact bus bar terminals</li><li>IP2X finger protection</li></ul>	140M-C, 140M-D	140M-C-WSN
		140M-F	140M-F-WS
	<b>Top Hat Rail Adapter — 10 mm</b> <ul style="list-style-type: none"><li>Adjusts the depth of the 140M-C to the 140M-D</li><li>Allows the use of compact busbars across both frame sizes</li><li>Must be ordered in multiples of 10</li></ul>	140M-C	140-KBH2

Notes: 1. See Bulletin 140U for Internal and External Accessories for Bulletin 140M-H, J, L and N frames.

2. Bulletin 140M-I frame Accessories such as auxiliaries, alarms, undervoltage and shunt trips are only available as factory installed modifications. See page 2-37.


**Allen-Bradley**

www.ab.com/catalogs Preferred availability cat. nos. are **bold**.

Publication A117-CA001A-EN-P