

The first chassis and its components are now installed. **Chassis power must remain off.**

Install the Second Chassis

Once the first chassis and its components are installed, you can install the second chassis of the redundant chassis pair.

See [Install the Redundancy Module on page 45](#) to install the second chassis.

IMPORTANT The components that are used in the first and second chassis must match exactly for the system to synchronize.

Connect the Redundancy Modules

Once the **first and second chassis and their components are installed**, you connect the redundancy modules via the 1756-RMCx fiber-optic communication cable. The cable is not included with the redundancy module. Before installation, order this fiber-optic communication cable separately.

Redundancy cables available from Rockwell Automation include the following.

Table 3 - Fiber-optic Cable Length

Fiber Cable Cat. No.	Length
1756-RMC1	1 m (3.28 ft)
1756-RMC3	3 m (9.84 ft)
1756-RMC10	10 m (32.81 ft)