


## 1494U Visible-Blade Disconnect Switch

Bulletin Number 1494U

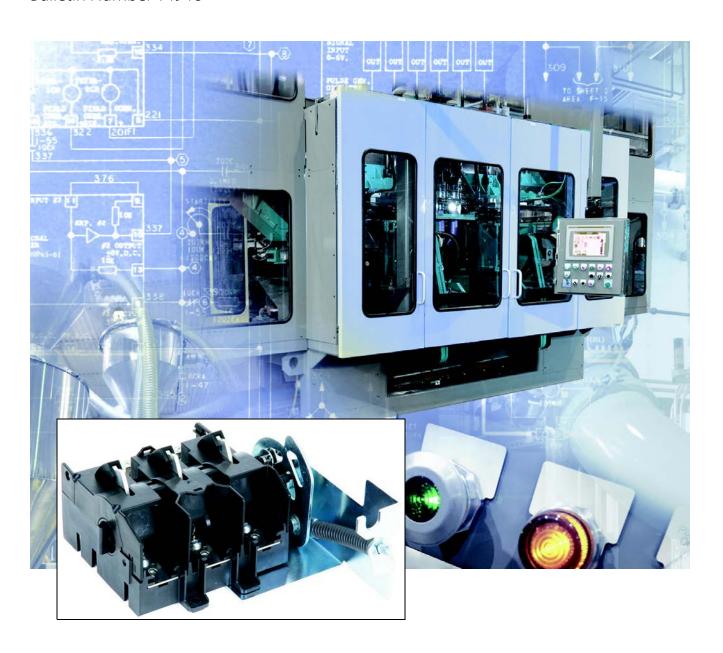







## What's Inside

Contents	Page
1494U Disconnect Switch Components	<u>3</u>
1494U Disconnect Switch Accessories	4
1494U Disconnect Switch Kits	<u>5</u>

# **Summary of Changes**

This publication contains new and updated information as indicated in the following table.

Topic	Page
Added footnote about aluminum lugs provided with disconnect switch	3
Added electrical interlock	4
Added per package information for lugs	4
Added wire information to line terminal adapters	4

## **1494U Disconnect Switch Components**

#### Disconnect Switches •

Continuous Current Rating [A]	Maximum Hp - UL and CSA Applications 3-Phase, 60 Hz			1-Pha	1-Phase, AC DC @ Maximum		Maximum kW -	IEC Applications ( 3-Phase, 50 Hz	Category AC 23)	Switch with Right-Hand Mechanism		
600V AC 600V DC	115V	200208V	230V	460V	575V	115V	230V	600V	220240V	380440V	500600V	Cat. No.
30	3	7.5	7.5	15	20	2	3	15	5.5	11	15	1494U-D30
60	7.5	15	15	30	50	3	10	30	11	22	37	1494U-D60
100	_	25	30	60	75	_	_	50	22	45	55	1494U-D100

Aluminum lugs are installed on the line side of each disconnect switch. Additional aluminum lugs are included with each disconnect switch that are to be field-installed on the load side of the switch or on the fuse block.

### **Connecting Rods**

Approximate dimensions are not intended for manufacturing purposes.

Disconnect Switch Size	Enclosure Working	Cat. No.	
[A]	Minimum	Maximum	
30, 60, 100	6-3/4 (172)	19 (483)	1494U-R1

Enclosure working depth is measured from the top of the flange to the disconnect switch mounting surface. NOTE: For enclosure depths greater than 19 in. but less than 23 in., select Cat. No. 1494V-RA4.

#### Cable Mechanism

Disconnect Switch Size [A]	Cable Length [ft (m)]	Right-Hand Cable Mechanism Cat. No.
	3 (0.91)	1494U-C313
30, 60, 100	4 (1.22)	1494U-C314
30,00,100	5 (1.52)	1494U-C315
	6 (1.83)	1494U-C316

### **Operating Handles**

Handle Type	Description	Mounting	Disconnect Switch Size [A}	Cat. No.
Type 1, 3R, 4, 4X, 12	Nonmetallic			1494U-HP1
Type 1, 3R, 4, 12	Painted Metal	Right or Left Flange	30, 60, 100	1494U-HM1
Type 4, 4X	Stainless Steel			1494U-HS1

#### **Fuse Clip Kits**

Fuse Class	Fuse Clip	Cat. No.	
	250V	600V	
	30	_	1494U-FC302J
Н/Ј	60	30	1494U-FC30J
11/3	_	60	1494U-FC60J
	100	100	1494U-FC100J
	30	_	1494U-FC302R
R	60	30	1494U-FC30R
II.	_	60	1494U-FC60R
	100	100	1494U-FC100R

#### **Trailer Fuse Block Kits**

Disconnect Switch Size [A]	Cat. No.
30	1494U-F30
60	1494U-F60
100	1494U-F100

<sup>•</sup> Ratings are based on using two poles in series to break one line of the DC supply voltage and the remaining pole breaking the second DC supply line.

## **1494U Disconnect Switch Accessories**

## **Auxiliary Contacts**

Description	Cat. No.
1 N.O., 10 A rated, A600, Q600, standard contact	1494U-N0
1 N.C., 10 A rated, A600, Q600, standard contact	1494U-NC
1 N.O. low voltage, 2.5 A rated, C300, R150, quad-connect contact	1494U-NOLV
1 N.C. low voltage, 2.5 A rated, C300, R150, quad-connect contact	1494U-NCLV
Electrical Interlock: 2 N.O., 10 A rated, 250V AC/DC	1494U-AE

#### **Protective Covers**

Disconnect	Fuse	Fuse Clip Rating [A]		Fuse Clip	Fuse Cover	
Switch Size [A}	Class	250V	600V	Cat. No.	Cat. No.	
30, 60, 100	Non- fusible	_	_	_		
30	H, J	30	_	1494U-F302J		
30	R	30	_	1494U-F302R	1494U-PC1	
30	H, J	_	30	1494U-FC30J		
60	H, J	_	60	1494U-FC60J		
100	H, J	_	100	1494U-FC100J		
30	R	_	30	1494U-FC30R	1494U-PC2	
60	R	_	60	1494U-FC60R	1474U-FCZ	
100	R		100	1494U-FC100R		

## Lug Connectors (3 per package)

Disconnect Switch Size [A]	Description	Wire Size	Cat. No.
3060	Aluminum, 1 port	(1) #142 AWG, copper-aluminum (2) #1410 AWG, copper (2) #1210 AWG, aluminum	1494U-LA36
100	Aluminum, 1 port	(2) #124 AWG, copper-aluminum (1) #141/0 AWG, copper (1) #121/0 AWG, aluminum	1494U-LA100
30100	Aluminum, 6 port	(1) #144 AWG, copper (1) #124 AWG, aluminum (2) #10 AWG, copper-aluminum	1494U-LM31
3060	Copper, 1 port	(1) #144 AWG, copper (2) #148 AWG, copper (4) #16 AWG, copper	1494U-LC36
100	Copper, 1 port	(1) #81/0 AWG, copper	1494U-LC100

#### Hardware Kits

Description	Cat. No.
For 30100 A Disconnect Switches- The kit includes (4) mounting screws and (1) line-side shield.	1494U-K31
For 30 100 A Fuse Blocks— The kit includes (2) mounting screws and (2) phase barriers.	1494U-PB31

## **Adapters**

Description	Cat. No.
Line Terminal Adapter (2 per package) – Terminals are connected to L1 and L2 to provide power even when the switch is de–energized. Wire Size: #148 AWG, copper	1494U-ALT31
Cross Bar Adapter – The adapter attaches to the 1494U switch so that it can retrofit in existing 1494V and 1494C switch installations.	1494U-AC

## **1494U Disconnect Switch Kits**

$$\frac{1494U}{a} - \frac{R}{b} = \frac{30}{c} - \frac{C3}{d}$$

а

Bulletin		
1494U	Disconnect switch, rod or cable operated •	

• Aluminum lug/line kits are provided with each disconnect switch.

C

Switch and Fuse Rating			
Code	Description		
Non-fusible (N)			
30	30 A switch		
60	60 A switch		
100	100 A switch		
Fusible (J or R)			
30	600V, 30 A switch, 30 A clips		
60	600V, 60 A switch, 60 A clips		
100	600V, 100 A switch, 100 A clips		

b

Fusing		
Code	Description	
N	Non-fusible	
J	Class J clips	
R	Class R clips	

d

Accessories			
Code	Description		
CR	Threaded rod (19 in. maximum)		
C3	Cable length — 3 ft		
C4	Cable length —— 4 ft		
C5	Cable length — 5 ft		
C6	Cable length — 6 ft		
М	Painted metal handle		
N	Non-metallic handle		
NO	(1) N.O. auxiliary contact — 10 A		
NC	(1) N.C. auxiliary contact — 10 A		
PC	Protective cover — for line and load		
S	Stainless steel handle		

## **Rockwell Automation Support**

Use the following resources to access support information.

Technical Support Center	Knowledgebase Articles, How-to Videos, FAQs, Chat, User Forums, and Product Notification Updates.	www.rockwellautomation.com/knowledgebase
Local Technical Support Phone Numbers	Locate the phone number for your country.	www.rockwellautomation.com/global/support/get-support- now.page
Direct Dial Codes	Find the Direct Dial Code for your product. Use the code to route your call directly to a technical support engineer.	www.rockwellautomation.com/global/support/direct- dial.page
Literature Library	Installation Instructions, Manuals, Brochures, and Technical Data.	www.rockwellautomation.com/literature
Product Compatibility and Download Center (PCDC)	Get help determining how products interact, check features and capabilities, and find associated firmware.	www.rockwellautomation.com/global/support/pcdc.page

#### **Documentation Feedback**

Your comments will help us serve your documentation needs better. If you have any suggestions on how to improve this document, complete the How Are We Doing? form at <a href="http://literature.rockwellautomation.com/idc/groups/literature/documents/du/ra-du002\_-en-e.pdf">http://literature.rockwellautomation.com/idc/groups/literature/documents/du/ra-du002\_-en-e.pdf</a>.

 $Rockwell \ Automation \ maintains \ current \ product \ environmental \ information \ on \ its \ website \ at \ \underline{http://www.rockwellautomation.com/rockwellautomation/about-us/sustainability-ethics/product-environmental-compliance.page.$ 

Allen-Bradley, Rockwell Software, Rockwell Automation, and LISTEN. THINK. SOLVE are trademarks of Rockwell Automation, Inc. Trademarks not belonging to Rockwell Automation are property of their respective companies.

#### www.rockwellautomation.com

#### Power, Control and Information Solutions Headquarters

Americas: Rockwell Automation, 1201 South Second Street, Milwaukee, WI 53204-2496 USA, Tel: (1) 414.382.2000, Fax: (1) 414.382.4444 Europe/Middle East/Africa: Rockwell Automation NV, Pegasus Park, De Kleetlaan 12a, 1831 Diegem, Belgium, Tel: (32) 2 663 0600, Fax: (32) 2 663 0640 Asia Pacific: Rockwell Automation, Level 14, Core F, Cyberport 3, 100 Cyberport Road, Hong Kong, Tel: (852) 2887 4788, Fax: (852) 2508 1846