

WAGO I/O System 750 XTR



750-362/0040-0000

FC Modbus TCP G4 XTR

**Fieldbus Coupler Modbus TCP; Generation 4,
Extreme**

© 2021 WAGO Kontakttechnik GmbH & Co. KG
All rights reserved.

WAGO Kontakttechnik GmbH & Co. KG

Hansastraße 27
D-32423 Minden

Phone: +49 (0) 571/8 87 – 0
Fax: +49 (0) 571/8 87 – 1 69

E-Mail: info@wago.com

Web: www.wago.com

Technical Support

Phone: +49 (0) 571/8 87 – 4 45 55
Fax: +49 (0) 571/8 87 – 84 45 55

E-Mail: support@wago.com

Every conceivable measure has been taken to ensure the accuracy and completeness of this documentation. However, as errors can never be fully excluded, we always appreciate any information or suggestions for improving the documentation.

E-Mail: documentation@wago.com

We wish to point out that the software and hardware terms as well as the trademarks of companies used and/or mentioned in the present manual are generally protected by trademark or patent.

WAGO is a registered trademark of WAGO Verwaltungsgesellschaft mbH.

Table of Contents

1	Notes about this Documentation	8
1.1	Validity of this Documentation.....	8
1.2	Copyright.....	8
1.3	Property rights.....	9
1.4	Symbols	10
1.5	Number Notation.....	12
1.6	Font Conventions.....	12
2	Important Notes	13
2.1	Legal Bases	13
2.1.1	Subject to Changes	13
2.1.2	Personnel Qualifications.....	13
2.1.3	Use of the 750 Series in Compliance with Underlying Provisions.....	13
2.1.4	Technical Condition of Specified Devices	14
2.1.4.1	Disposal.....	15
2.1.4.1.1	Electrical and Electronic Equipment	15
2.1.4.1.2	Packaging	16
2.2	Safety Advice (Precautions).....	17
2.3	Special Use Conditions for ETHERNET Devices	20
3	System Description	21
3.1	Labeling	22
3.1.1	Labeling Symbols.....	22
3.1.2	Manufacturing Number.....	23
3.1.3	Hardware Address (MAC-ID)	24
3.2	Update	25
3.3	Storage, Assembly and Transport	25
3.4	Power Supply.....	27
3.4.1	Overcurrent Protection	27
3.4.2	Isolation.....	28
3.4.3	System Supply	29
3.4.3.1	Connection	29
3.4.3.2	Dimensioning.....	30
3.4.4	Field Supply	33
3.4.4.1	Connection	33
3.4.4.2	Fusing via Power Supply Module	35
3.4.4.3	Fusing External.....	37
3.4.5	Power Supply for Mixed Operation.....	40
3.4.6	Supplementary Power Supply Regulations	41
3.4.7	Supply Example	43
3.4.8	Power Supply Units	45
3.5	Grounding	46
3.5.1	Grounding the DIN Rail	46
3.5.1.1	Framework Assembly	46
3.5.1.2	Insulated Assembly	46
3.5.2	Grounding Function.....	47
3.6	Shielding	48
3.6.1	General	48

3.6.2	Fieldbus Cables.....	49
3.6.3	Shielded Signal Lines.....	49
3.6.4	WAGO Shield Connecting System.....	49
4	Device Description	50
4.1	View	52
4.2	Connectors.....	54
4.2.1	Data Contacts/Local Bus.....	54
4.2.2	Power Jumper Contacts/Field Supply	54
4.2.3	CAGE CLAMP® Connectors.....	56
4.2.4	Device Supply	57
4.2.5	Fieldbus Connection.....	58
4.3	Display Elements	59
4.4	Operating Elements	60
4.4.1	Service Interface	60
4.4.2	Address Selection Switch.....	61
4.5	Technical Data.....	62
4.5.1	Device Data.....	62
4.5.2	System Data.....	62
4.5.3	Supply	63
4.5.4	Fieldbus Modbus TCP.....	63
4.5.5	Accessories	64
4.5.6	Connection Type	64
4.5.7	Mechanical Conditions	64
4.5.8	Climatic Environmental Conditions.....	65
4.5.9	Mechanical Strength.....	65
4.6	Approvals	67
4.7	Standards and Guidelines.....	68
5	Mounting	75
5.1	Mounting Position	75
5.1.1	Coordinates Model	75
5.1.2	Overview of Mounting Positions.....	75
5.2	Overall Configuration	77
5.3	Mounting onto Carrier Rail	78
5.3.1	Carrier Rail Properties.....	78
5.3.2	WAGO DIN Rails.....	79
5.4	Spacing	79
5.5	Mounting Sequence	80
5.6	Inserting and Removing Devices	81
5.6.1	Inserting the Fieldbus Coupler/Controller.....	81
5.6.2	Removing the Fieldbus Coupler/Controller	82
5.6.3	Inserting the I/O Module.....	82
5.6.4	Removing the I/O Module.....	83
6	Connect Devices.....	84
6.1	Data Contacts/Local Bus	84
6.2	Power Contacts/Field Supply.....	85
6.3	Connecting a Conductor to the CAGE CLAMP®	86
7	Function Description.....	87

7.1	Operating System	87
7.2	Process Data Architecture	88
7.2.1	Basic Structure	88
7.2.2	Process Data MODBUS TCP	89
7.3	Data Exchange	90
7.3.1	Memory Space	91
7.3.2	Addressing	91
7.3.2.1	Addressing of I/O Modules	92
7.3.3	Data Exchange between MODBUS/TCP Master and I/O Modules...	93
7.4	Logging	94
8	Commissioning.....	97
8.1	Connecting Client PC and Fieldbus Nodes.....	98
8.2	Determining the IP Address of the PC	98
8.3	Assigning the IP Address to the Fieldbus Node.....	99
8.3.1	Assigning IP Address via Address Selection Switch	99
8.3.2	Assigning IP Address via DHCP	101
8.3.2.1	Enable DHCP via "WAGO Ethernet Settings" (without existing IP address)"	103
8.3.2.2	Enable DHCP via WBM (with existing IP address).....	104
8.3.3	Assigning IP Address via "WAGO Ethernet Settings"	105
8.3.4	Assigning the IP Address via BootP	107
8.3.4.1	Reasons for Failed IP Address Assignment	109
8.4	Apply IP address permanently (option "static")	110
8.5	Testing the Function of the Fieldbus Node	111
8.6	Preparing the Flash File System	112
8.7	Synchronizing the System Time	114
8.8	Restoring Factory Settings.....	116
9	Configuring via the Web-Based Management System (WBM)	117
9.1	WBM User Groups.....	117
9.2	Open WBM	118
9.3	WBM Pages	119
9.4	Information	120
9.5	Administration	121
9.6	System Status.....	123
9.7	Clock.....	125
9.8	Miscellaneous	127
9.9	Storage Media.....	128
9.10	Update	128
9.11	Ethernet	129
9.12	Protocols	133
9.13	SNMP.....	134
9.13.1	SNMP v1/v2c	135
9.13.2	SNMP V3	136
9.14	SNTP	137
9.15	TCP/IP	138
9.16	Modbus	139
9.17	Modbus Mapping	141
9.18	I/O Config.....	144

10	Diagnostics	145
10.1	LED Signaling	145
10.1.1	Evaluating Fieldbus Status	146
10.1.2	Evaluating Node Status – I/O LED (Blink Code Table)	147
10.2	Fault Behavior	157
10.2.1	Fieldbus Failure	157
10.2.2	Local Bus Failure	157
11	Fieldbus Communication	159
11.1	Implemented Protocols	159
11.1.1	Communication Protocols	159
11.1.1.1	IP (Internet Protocol)	159
11.1.1.2	TCP (Transmission Control Protocol)	164
11.1.1.3	UDP (User Datagram Protocol)	164
11.1.2	Configuration and Diagnostics Protocols	165
11.1.2.1	BootP (Bootstrap Protocol)	165
11.1.2.2	DHCP (Dynamic Host Configuration Protocol)	166
11.1.2.3	HTTP (Hypertext Transfer Protocol)	168
11.1.2.4	DNS (Domain Name Systems)	168
11.1.2.5	SNTP-Client (Simple Network Time Protocol)	169
11.1.2.6	FTP-Server (File Transfer Protocol)	169
11.1.2.7	SNMP (Simple Network Management Protocol)	170
11.1.2.7.1	MIB II Description	171
11.1.2.7.2	Traps	172
11.1.3	Application Protocols	173
11.2	Modbus Functions	174
11.2.1	General	174
11.2.2	Use of the MODBUS Functions	177
11.2.3	Description of the MODBUS Functions	178
11.2.3.1	Function Code FC1 (Read Coils)	179
11.2.3.2	Function Code FC2 (Read Discrete Inputs)	181
11.2.3.3	Function Code FC3 (Read Multiple Registers)	183
11.2.3.4	Function Code FC4 (Read Input Registers)	184
11.2.3.5	Function Code FC5 (Write Coil)	185
11.2.3.6	Function Code FC6 (Write Single Register)	186
11.2.3.7	Function Code FC11 (Get Comm Event Counter)	187
11.2.3.8	Function Code FC15 (Write Multiple Coils)	188
11.2.3.9	Function Code FC16 (Write Multiple Registers)	190
11.2.3.10	Function Code FC22 (Mask Write Register)	191
11.2.3.11	Function Code FC23 (Read/Write Multiple Registers)	192
11.2.4	MODBUS Register Mapping	194
11.2.5	Modbus Registers	197
11.2.5.1	Accessing Register Values	198
11.2.5.2	Modbus-Watchdog	198
11.2.5.3	Modbus Watchdog Register	200
11.2.5.4	Diagnostic Registers	204
11.2.5.5	Configuration Registers	205
11.2.5.6	Constant Registers	207
11.2.5.7	Firmware Information Registers	209
12	I/O Modules	214

12.1	Overview	214
12.2	Process Data Architecture for Modbus TCP	215
12.2.1	Digital Input Modules	216
12.2.1.1	2-Channel Digital Input Modules	216
12.2.1.2	8-Channel Digital Input Modules	216
12.2.1.3	16-Channel Digital Input Modules	216
12.2.2	Digital Output Modules	217
12.2.2.1	2-Channel Digital Output Modules	217
12.2.2.2	2-Channel Digital Output Modules with Diagnostics and Input Data	217
12.2.2.3	4-Channel Digital Output Modules	217
12.2.2.4	4-Channel Digital Output Modules with Diagnostics and Input Data	218
12.2.2.5	8-Channel Digital Output Modules	218
12.2.2.6	8-Channel Digital Output Modules with Diagnostics and Input Data	218
12.2.2.7	16-Channel Digital Output Modules	219
12.2.3	Analog Input Modules	220
12.2.3.1	2-Channel Analog Input Modules	220
12.2.3.2	4-Channel Analog Input Modules	220
12.2.3.3	-3-Phase Power Measurement Module	221
12.2.4	Analog Output Modules	222
12.2.4.1	2 Channel Analog Output Modules	222
12.2.4.2	4 Channel Analog Output Modules	222
12.2.5	Specialty Modules	223
12.2.5.1	Serial Interfaces with Alternative Data Format	223
12.2.5.2	SSI Transmitter Interface I/O Modules	224
12.2.5.3	Distance and Angle Measurement	224
12.2.5.4	Counter Modules	224
12.2.5.5	CAN Gateway	226
12.2.6	System Modules	227
12.2.6.1	System Modules with Diagnostics	227
13	Application Examples	228
13.1	Test of Modbus protocol and fieldbus nodes	228
13.2	Visualization and Control using SCADA Software	228
14	Use in Hazardous Environments	231
14.1	Marking Configuration Examples	232
14.1.1	Marking for Europe According to ATEX and IECEx	232
14.1.2	Marking for the United States of America (NEC) and Canada (CEC)	236
14.2	Installation Regulations	239
14.2.1	Special Notes including Explosion Protection	239
14.2.2	Special Notes Regarding ANSI/ISA Ex	241
	List of Figures	242
	List of Tables	244

1 Notes about this Documentation



Note

Always retain this documentation!

This documentation is part of the product. Therefore, retain the documentation during the entire service life of the product. Pass on the documentation to any subsequent user. In addition, ensure that any supplement to this documentation is included, if necessary.

1.1 Validity of this Documentation

This documentation is only applicable to the “FC Modbus TCP G4 XTR” (750-362/0040-0000).

The device FC Modbus TCP G4 XTR 750-362/0040-0000 shall only be installed and operated according to the instructions in this manual and the system description for the WAGO I/O System 750 XTR.

NOTICE

Consider power layout of the WAGO I/O System 750 XTR!

In addition to these operating instructions, you will also need the system description “Design Notes XTR – Guidelines and Recommendations for Increasing Operational Safety”, which can be downloaded at www.wago.com. There, you can obtain important information including information on electrical isolation, system power and supply specifications.

1.2 Copyright

This Manual, including all figures and illustrations, is copyright-protected. Any further use of this Manual by third parties that violate pertinent copyright provisions is prohibited. Reproduction, translation, electronic and phototechnical filing/archiving (e.g., photocopying) as well as any amendments require the written consent of WAGO Kontakttechnik GmbH & Co. KG, Minden, Germany. Non-observance will involve the right to assert damage claims.

1.3 Property rights

Third-party trademarks are used in this documentation. This section contains the trademarks used. The “®” and “TM” symbols are omitted hereinafter.

- Adobe® and Acrobat® are registered trademarks of Adobe Systems Inc.
- AS-Interface® is a registered trademark of AS-International Association.
- BACnet® is a registered trademark of American Society of Heating, Refrigerating and Air Conditioning Engineers, Inc. (ASHRAE).
- *Bluetooth*® is a registered trademark of the Bluetooth SIG, Inc.
- CiA® and CANopen® are registered trademarks of CAN in AUTOMATION – International Users and Manufacturers Group e. V.
- DALI is a registered trademark of Digital Illumination Interface Alliance (DiiA).
- EtherCAT® is a registered trademark and patented technology of Beckhoff Automation GmbH.
- EtherNet/IP™ is a registered trademark of Open DeviceNet Vendor Association, Inc (ODVA).
- EnOcean® is a registered trademark of EnOcean GmbH.
- IO-Link is a registered trademark of PROFIBUS Nutzerorganisation e.V.
- KNX® is a registered trademark of KNX Association cvba.
- Linux® is a registered trademark of Linus Torvalds.
- LON® is a registered trademark of Echelon Corporation.
- Modbus® is a registered trademark of Schneider Electric, licensed to the Modbus Organization, Inc.
- PROFIBUS® is a registered trademark of Siemens AG.
- PROFINET® is a registered trademark of Siemens AG.
- QR Code is a registered trademark of DENSO WAVE INCORPORATED.
- Subversion® is a registered trademark of Apache Software Foundation.
- Windows® is a registered trademark of Microsoft Corporation.

1.4 Symbols



DANGER

Personal Injury!

Indicates a high-risk, imminently hazardous situation which, if not avoided, will result in death or serious injury.



DANGER

**Personal Injury Caused by Electric Current!**

Indicates a high-risk, imminently hazardous situation which, if not avoided, will result in death or serious injury.



WARNING

Personal Injury!

Indicates a moderate-risk, potentially hazardous situation which, if not avoided, could result in death or serious injury.



CAUTION

Personal Injury!

Indicates a low-risk, potentially hazardous situation which, if not avoided, may result in minor or moderate injury.

NOTICE

Damage to Property!

Indicates a potentially hazardous situation which, if not avoided, may result in damage to property.



NOTICE

Damage to Property Caused by Electrostatic Discharge (ESD)!

Indicates a potentially hazardous situation which, if not avoided, may result in damage to property.



Note

Important Note!

Indicates a potential malfunction which, if not avoided, however, will not result in damage to property.



Information

Additional Information:

Refers to additional information which is not an integral part of this documentation (e.g., the Internet).

1.5 Number Notation

Table 1: Number Notation

Number Code	Example	Note
Decimal	100	Normal notation
Hexadecimal	0x64	C notation
Binary	'100' '0110.0100'	In quotation marks, nibble separated with dots (.)

1.6 Font Conventions

Table 2: Font Conventions

Font Type	Indicates
<i>italic</i>	Names of paths and data files are marked in italic-type. e.g.: <i>C:\Program Files\WAGO Software</i>
Menu	Menu items are marked in bold letters. e.g.: Save
>	A greater-than sign between two names means the selection of a menu item from a menu. e.g.: File > New
Input	Designation of input or optional fields are marked in bold letters, e.g.: Start of measurement range
"Value"	Input or selective values are marked in inverted commas. e.g.: Enter the value "4 mA" under Start of measurement range .
[Button]	Pushbuttons in dialog boxes are marked with bold letters in square brackets. e.g.: [Input]
[Key]	Keys are marked with bold letters in square brackets. e.g.: [F5]

2 Important Notes

This section includes an overall summary of the most important safety requirements and notes that are mentioned in each individual section. To protect your health and prevent damage to devices as well, it is imperative to read and carefully follow the safety guidelines.

2.1 Legal Bases

2.1.1 Subject to Changes

WAGO Kontakttechnik GmbH & Co. KG reserves the right to provide for any alterations or modifications. WAGO Kontakttechnik GmbH & Co. KG owns all rights arising from the granting of patents or from the legal protection of utility patents. Third-party products are always mentioned without any reference to patent rights. Thus, the existence of such rights cannot be excluded.

2.1.2 Personnel Qualifications

All sequences implemented on WAGO I/O System 750 devices may only be carried out by electrical specialists with sufficient knowledge in automation. The specialists must be familiar with the current norms and guidelines for the devices and automated environments.

All changes to the coupler or controller should always be carried out by qualified personnel with sufficient skills in PLC programming.

2.1.3 Use of the 750 Series in Compliance with Underlying Provisions

Fieldbus couplers, controllers and I/O modules of the modular WAGO I/O System 750 receive digital and analog signals from sensors and transmit them to actuators or higher-level control systems. Using controllers, the signals can also be (pre-) processed.

This product fulfills the requirements of protection type IP20 and is designed for use in dry interior spaces. There is protection against finger injury and solid impurities up to 12.5 mm diameter is assured; protection against water damage is not ensured.

The product represents an open-type device. It may only be installed in enclosures (tool-secured enclosures or operating rooms) which fulfil the listed requirements specified in the safety instructions in chapter "Safety Advice (Precautions)". Use without additional protective measures in environments within which dust, corrosive fumes, gases or ionized radiation can occur is considered improper use.

The product is intended for installation in automation systems. It does not have its own integrated separator. A suitable separator must therefore be created on the plant side.

The operation of the product in residential areas without further measures is only permitted if the product complies with the emission limits (interference emissions) according to EN 61000-6-3.

Operating the product in home applications without further measures is only permitted if it meets the emission limits (emissions of interference) according to EN 61000-6-3. Please observe the installation regulations!

You will find the relevant information in the section "Device Description" > "Standards and Guidelines" in the manual for the used product.

Appropriate housing (per 2014/34/EU) is required when operating the WAGO I/O System 750 in hazardous environments. Please note that a prototype test certificate must be obtained that confirms the correct installation of the system in a housing or switch cabinet.

The implementation of safety functions such as EMERGENCY STOP or safety door monitoring must only be performed by the F I/O modules within the modular WAGO I/O System 750. Only these safe F I/O modules ensure functional safety in accordance with the latest international standards. WAGO's interference-free output modules can be controlled by the safety function.

2.1.4 Technical Condition of Specified Devices

The devices to be supplied ex works are equipped with hardware and software configurations, which meet the individual application requirements. These modules contain no parts that can be serviced or repaired by the user. The following actions will result in the exclusion of liability on the part of WAGO Kontakttechnik GmbH & Co. KG:

- Repairs,
- Changes to the hardware or software that are not described in the operating instructions,
- Improper use of the components.

Further details are given in the contractual agreements. Please send your request for modified and new hardware or software configurations directly to WAGO Kontakttechnik GmbH & Co. KG.

2.1.4.1 Disposal

2.1.4.1.1 Electrical and Electronic Equipment



Electrical and electronic equipment may not be disposed of with household waste. This also applies to products without this symbol.

Electrical and electronic equipment contain materials and substances that can be harmful to the environment and health. Electrical and electronic equipment must be disposed of properly after use.

WEEE 2012/19/EU applies throughout Europe. Directives and laws may vary nationally.



Environmentally friendly disposal benefits health and protects the environment from harmful substances in electrical and electronic equipment.

- Observe national and local regulations for the disposal of electrical and electronic equipment.
- Clear any data stored on the electrical and electronic equipment.
- Remove any added battery or memory card in the electrical and electronic equipment.
- Have the electrical and electronic equipment sent to your local collection point.

Improper disposal of electrical and electronic equipment can be harmful to the environment and human health.

2.1.4.1.2 Packaging

Packaging contains materials that can be reused.
PPWD 94/62/EU and 2004/12/EU packaging guidelines apply throughout Europe. Directives and laws may vary nationally.

Environmentally friendly disposal of the packaging protects the environment and allows sustainable and efficient use of resources.

- Observe national and local regulations for the disposal of packaging.
- Dispose of packaging of all types that allows a high level of recovery, reuse and recycling.

Improper disposal of packaging can be harmful to the environment and wastes valuable resources.

2.2 Safety Advice (Precautions)

For installing and operating purposes of the relevant device to your system the following safety precautions shall be observed:



DANGER

Do not work on devices while energized!

All power sources to the device shall be switched off prior to performing any installation, repair or maintenance work.



DANGER

Install device in only one suitable enclosure!

The device is an open system. Install the device in a suitable enclosure. This enclosure must:

- Guarantee that the max. permissible degree of pollution is not exceeded.
- Offer adequate protection against contact.
- Prevent fire from spreading outside of the enclosure.
- Offer adequate protection against UV irradiation.
- Guarantee mechanical stability
- Restrict access to authorized personnel and may only be opened with tools



DANGER

Ensure disconnect and overcurrent protection!

The device is intended for installation in automation technology systems. Disconnect protection is not integrated. Connected systems must be protected by a fuse.

Provide suitable disconnect and overcurrent protection on the system side!



DANGER

Ensure a standard connection!

To minimize any hazardous situations resulting in personal injury or to avoid failures in your system, the data and power supply lines shall be installed according to standards, with careful attention given to ensuring the correct terminal assignment. Always adhere to the EMC directives applicable to your application.

**WARNING****Power from SELV/PELV power supply only!**

All field signals and field supplies connected to this XTR fieldbus coupler/controller (750-362/0040-0000) must be powered from SELV/PELV power supply(s)!

**CAUTION****Inadequate wire cross sections can cause temperature increases!**

To avoid increasing thermal risks, only use conductor cross-sections sufficient for the required maximum load current. The conductor cross-sections specified in the technical data refer exclusively to the mechanical connection capacity of the clamping points.

**CAUTION****Do not touch hot surfaces!**

The surface of the housing can become hot during operation. If the device was operated at high ambient temperatures, allow it to cool off before touching it.

NOTICE**Ensure proper contact with the DIN-rail!**

Proper electrical contact between the DIN-rail and device is necessary to maintain the EMC characteristics and function of the device.

NOTICE**Replace defective or damaged devices!**

Replace defective or damaged device/module (e.g., in the event of deformed contacts).

NOTICE**Protect the components against materials having seeping and insulating properties!**

The components are not resistant to materials having seeping and insulating properties such as: aerosols, silicones and triglycerides (found in some hand creams). If you cannot exclude that such materials will appear in the component environment, then install the components in an enclosure being resistant to the above-mentioned materials. Clean tools and materials are imperative for handling devices/modules.

NOTICE

Clean only with permitted materials!

Clean housing and soiled contacts with propanol.

NOTICE

Do not use any contact spray!

Do not use any contact spray. The spray may impair contact area functionality in connection with contamination.

NOTICE

Do not reverse the polarity of connection lines!

Avoid reverse polarity of data and power supply lines, as this may damage the devices involved.

NOTICE



Avoid electrostatic discharge!

The devices are equipped with electronic components that may be destroyed by electrostatic discharge when touched. Please observe the safety precautions against electrostatic discharge per DIN EN 61340-5-1/-3. When handling the devices, please ensure that environmental factors (personnel, work space and packaging) are properly grounded.

NOTICE

Use only direct current (DC) for insulation testing!

Both the system voltage and field voltage side are capacitively coupled to the DIN-rail. If an I/O module is mounted on the DIN-rail, application of an AC voltage between the DIN-rail and at least one of these two potentials can lead to the destruction of the module.

Use only direct current (DC) for insulation testing. To avoid destroying the I/O module, you must discharge it completely before applying the test voltage again.

NOTICE

Do not use in telecommunication circuits!

Only use devices equipped with ETHERNET or RJ-45 connectors in LANs. Never connect these devices with telecommunication networks.

2.3 Special Use Conditions for ETHERNET Devices

If not otherwise specified, ETHERNET devices are intended for use on local networks. Please note the following when using ETHERNET devices in your system:

- Do not connect control components and control networks directly to an open network such as the Internet or an office network. WAGO recommends putting control components and control networks behind a firewall.
- In the control components (e.g., for WAGO I/-CHECK and CODESYS) close all ports and services not required by your application to minimize the risk of cyber attacks and to enhance cyber security. Only open ports and services during commissioning and/or configuration.
- Limit physical and electronic access to all automation components to authorized personnel only.
- Change the default passwords before first use! This will reduce the risk of unauthorized access to your system.
- Regularly change the passwords used! This will reduce the risk of unauthorized access to your system.
- If remote access to control components and control networks is required, use a Virtual Private Network (VPN).
- Regularly perform threat analyses. You can check whether the measures taken meet your security requirements.
- Use “defense-in-depth” mechanisms in your system's security configuration to restrict the access to and control of individual products and networks.

3 System Description

The 750 XTR Series is part of the WAGO I/O System 750.

The WAGO I/O System 750 is a modular, fieldbus-independent input/output system (I/O system). The configuration described here consists of a fieldbus coupler/controller (1) and the modular I/O modules (2) for any signal shapes that form the fieldbus node together. The end module (3) completes the node and is required for correct operation of the fieldbus node.

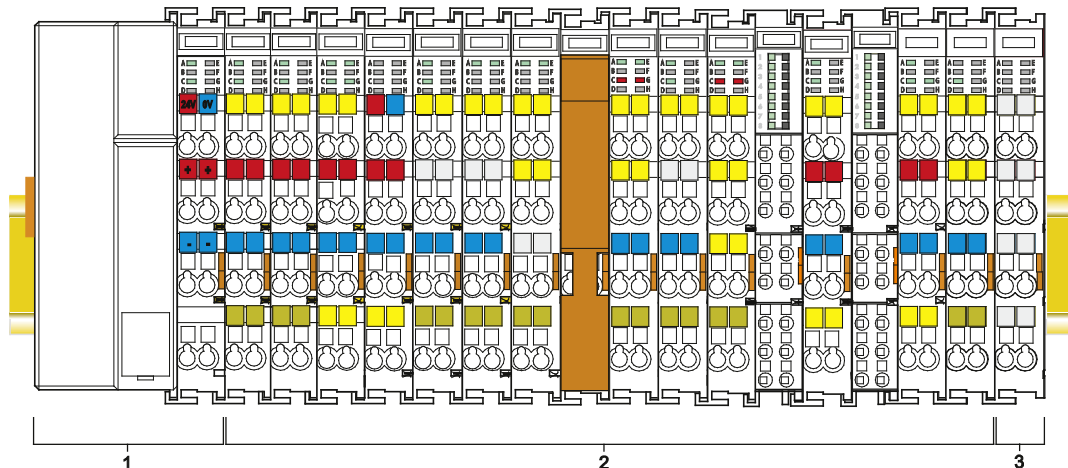


Figure 1: Fieldbus Node (Example)

Fieldbus couplers/controllers are available for different fieldbus systems.

The ECO coupler contains the fieldbus interface, electronics and a power supply for the system. The fieldbus interface forms the physical interface to the relevant fieldbus. The electronics process the data of the bus modules and make it available for the fieldbus communication.

I/O modules for diverse digital and analog I/O signals as well as special functions can be connected to the fieldbus coupler/controller. The communication between the fieldbus coupler/controller and the I/O modules is carried out via a local bus.

The components of the WAGO I/O System 750 have clear termination points, light emitting diodes for status display, plug-in mini WSB tags and group marker cards for labeling.

The 1, 2 or 3 wire technology supplemented by a ground wire connection allows for direct sensor or actuator wiring.

The distinctiveness of the 750 XTR Series lies in its area of application in extreme environmental conditions. It is extremely temperature-resistant, immune to interference, as well as insensitive to vibrations and impulse voltages. The components of the 750 XTR Series are easily recognizable by their dark-gray housing color.

3.1 Labeling

The front labeling includes:

- Device designation
- Name of the display elements, connections and control elements
- Serial number with hardware and firmware version











The side labeling includes:

- Manufacturer's identification
- Connector pin assignment
- Serial number
- Approval information

3.1.1 Labeling Symbols

Some general information and the respective product approvals are shown in the labeling as symbols.

Table 3: Labeling Symbols

Symbol	Meaning	Description
General Symbols		
 Hansastr. 27 D-32423 Minden	Manufacturer's identification	Manufacturer name and address
	Data matrix code	One-to-one product identification by means of UII (Unique Item Identifier)
	General warning label	Read this manual carefully for safe use and proper handling
	ESD danger sign	Avoid electrostatic discharge! → See chapter "Safety Advice (Precautions)"
	WEEE label	Note on disposal → See chapter „Disposal“
Symbols of Approvals (Examples)		
	Conformity marking	Approval information → See chapter "Approvals"
	Korean Certificate	
	Ex approvals	
	Ship approvals	
	TÜV symbol	

3.1.2 Manufacturing Number

The serial number indicates the delivery status directly after production. This number is part of the labeling on the side of each component.

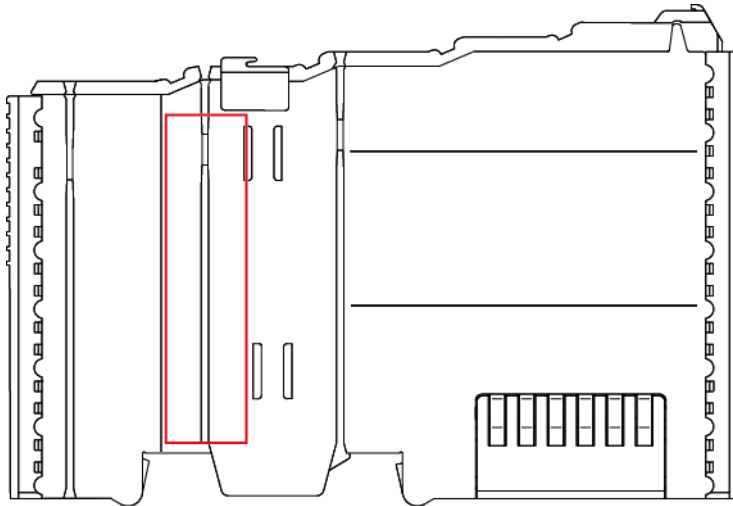


Figure 2: Marking Area for Serial Numbers

There are two serial numbers in two rows in the side marking. They are left of the release tab. The first 10 positions in the longer row of the serial numbers contain version and date identifications.

Example structure of the rows: 0114010101...

01	14	01	01	01	(additional positions)
WW	YY	FW --	HW	FL	-
Calendar week	Year	Firmware version	Hardware version	Firmware loader version	Internal information

The row order can vary depending on the production year, only the longer row is relevant. The back part of this and the shorter row contain internal administration information from the manufacturer.

In addition, the serial number is printed on the front on the cover cap of the service interface, so that it can also be read when installed.

3.1.3 Hardware Address (MAC-ID)

Each **FC Modbus TCP G4 XTR** has an internationally unambiguous physical address, referred to as the MAC-ID (Media Access Control Identity).

As part of the labeling on the right side of this component, the MAC ID is printed in the block diagram.

In addition, the MAC ID is located on the paper strip with two self-adhesive peel-off strips on its left side.

The MAC ID has a fixed length of 6 bytes (48 bits) which are presented hexadecimal. The first three bytes identify the manufacturer (e.g. 00:30 DE for WAGO). The second 3 bytes comprise the unique serial number of the hardware.

3.2 Update

For products that can be updated, the side inscription has a prepared matrix in which the current update data can be entered in columns.

Up to 2015, the matrix has rows to enter the “NO” work order number (or “BA” to CW 13/2004), “DS” update date, “SW” software index (optional), “HW” hardware index and “FWL” firmware loader index (optional).

NO			
DS			
SW			
HW			
FWL			

Figure 3: Update Matrix up to 2015

From 2016, the matrix has rows to enter the “FA” production or work order number and to enter the “PD” production date and “AZ” item number.

FA	XXXXXXXXXX	
PD	WWJJ	
AZ	FWHWFL	

Figure 4: Update Matrix from 2016

Table 4: Legend for Figure “Update Matrix from 2016”

	Description
FA	Production order number, 10-digit
PD	KW = calendar week YY = year
AZ	FW = firmware index HW = hardware index FL = firmware loader index

For factory updates to a head station, the current production or work order number is also printed on the cover cap of the service interface.

The original manufacturing information on the product housing remains unchanged.

3.3 Storage, Assembly and Transport

Whenever possible, the components are to be stored in their original packaging. Likewise, the original packaging provides optimal protection during transport.

When assembling or repacking the components, the contacts must not be soiled or damaged. The components must be stored and transported in appropriate containers/packaging. Thereby, the ESD information is to be regarded.

3.4 Power Supply

The system power supply and field power supply must be powered via SELV/PELV power supply units.

3.4.1 Overcurrent Protection



WARNING

Possible fire hazard due to insufficient overcurrent protection!

In the event of a fault, insufficient overcurrent protection can present a possible fire hazard. In the event of a fault, excessive current flow in the components can cause significant overheating. Therefore, you should always dimension the overcurrent protection according to the anticipated power usage.

The system and field voltage of the WAGO I/O System 750 XTR is supplied on the head stations and bus supply modules.

For components that work with extra low voltage, only SELV/PELV voltage sources should be used.

A single voltage source supplying multiple components must be designed according to the component with the strictest electrical safety requirements. For components which are only allowed to be supplied by SELV voltage sources, these requirements are listed in the technical data.

Most components in the WAGO I/O System 750 XTR have no internal overcurrent protection. Therefore, appropriate overcurrent protection must always be implemented externally for the power supply to these components, e.g. via fuses.

The maximum permissible current is listed in the technical data of the components used.

For this potential group, only the power supply module 750-612/040-000 is required for a 230 V field power supply.

NOTICE

System supply only with appropriate fuse protection!

Without overcurrent protection, the electronics can be damaged.

For 24 V system supply input voltage an external fuse, rated max. 2 A, slow acting, min. 30 VDC shall be used.

3.4.3 System Supply

3.4.3.1 Connection

The WAGO I/O System 750 requires a 24 V direct current system supply. The power supply is provided via the fieldbus coupler/controller and, if necessary, in addition via internal system supply modules “System Power Supply 24 VDC XTR (750-613/040-000)”. The power supply is reverse voltage protected.

NOTICE

Do not use an incorrect voltage/frequency!

The use of an incorrect supply voltage or frequency can cause severe damage to the components.

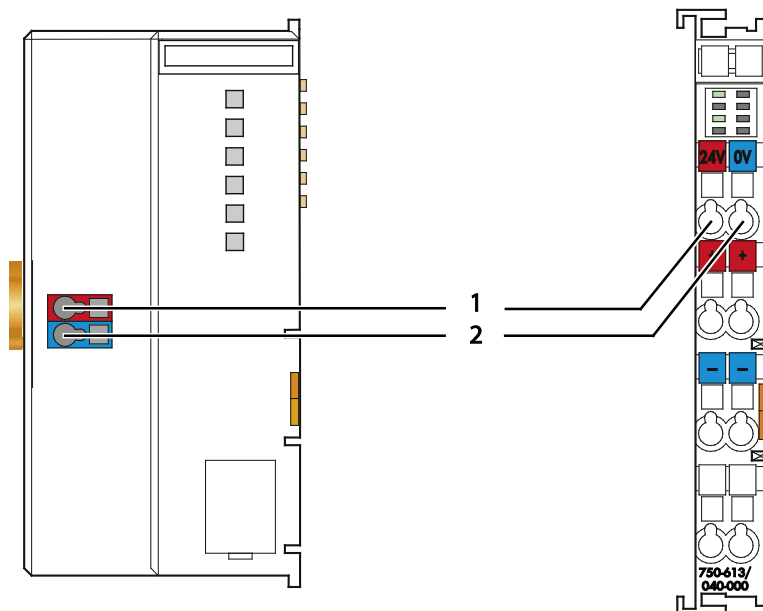


Figure 6: System supply (example)

Table 5: Legend for the “System supply” figure

Pos	Description
.	
1	System supply 24 VDC
2	System supply 0 V

The fed-in 24 VDC supplies all internal system components, e.g. fieldbus coupler/controller electronics, fieldbus interface and I/O modules via the local bus (5 VDC system voltage). The 5 VDC system voltage is galvanically connected to the 24 VDC supply voltage.

NOTICE**System supply only with appropriate fuse protection!**

Without overcurrent protection, the electronics can be damaged.

For 24 V system supply input voltage an external fuse, rated max. 2 A, slow acting, min. 30 VDC shall be used.

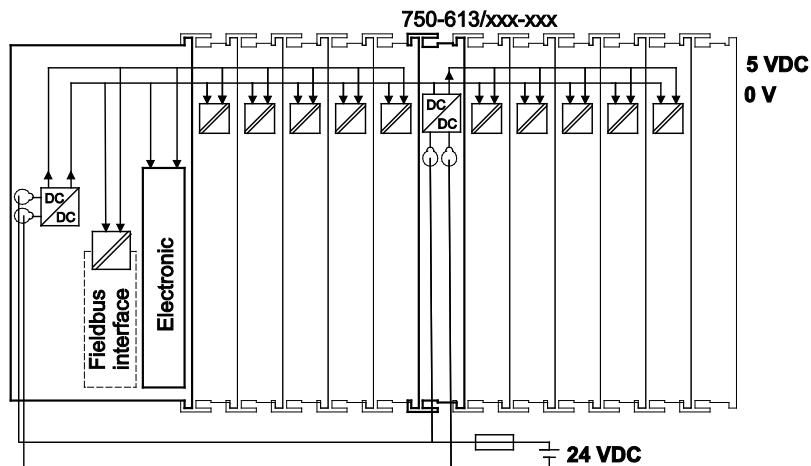


Figure 7: System Voltage (Example)

Note**Only reset the system simultaneously for all supply modules!**

Reset the system by switching the system supply simultaneously at all supply modules (fieldbus coupler/controller and potential supply module with bus power supply) off and on again.

3.4.3.2 Dimensioning**Note****Recommendation**

A stable power supply cannot always be assumed. Therefore, you should use regulated power supplies to ensure the quality of the supply voltage.

The supply capacity of the fieldbus coupler/controller or the internal system supply module can be taken from the technical data of the components.

Table 6: Alignment

Internal current consumption^{*)}	Current consumption via system voltage (5 V for electronics of I/O modules and fieldbus coupler/controller).
Total current for I/O modules^{*)}	Available current for the I/O modules. Provided by the bus power supply unit. See fieldbus coupler/controller and internal system supply module

^{*)} See current catalog, manuals, Internet

Example:**Calculating the current consumption on an example coupler**

Internal current consumption	300 mA at 5 V
Residual current for bus modules	700 mA at 5 V
Sum $I_{(5\text{ V})}$ total	1000 mA at 5 V

The internal current consumption is indicated in the technical data for each bus terminal. In order to determine the total requirement, add together the values of all I/O modules in the node.

Note

Please note the aggregate current for I/O modules. It may be necessary to supply potential!

When the sum of the internal current consumption for the I/O modules exceeds their aggregate current, you must use a supply module with bus power supply. Install it before the position where the permissible aggregate current would be exceeded.

Example:**Calculating the total current on the example coupler**

A node with an example coupler consists e. g. of the following I/O modules:
20 relay modules (750-517) and 10 digital input modules (750-405).

Internal current consumption	10 * 90 mA =	900 mA
	20 * 2 mA =	40 mA
Sum		940 mA

In this example, the example coupler can provide 700 mA for the I/O modules. This value is given in the associated data sheet ("Total current for I/O modules"). Consequently, an internal system supply module (750-613), e. g. in the middle of the node, should be added.

The maximum input current of the 24 V system supply is 500 mA. The exact electrical consumption ($I_{(V)}$) can be determined with the following formulas:

Fieldbus coupler or controller

$I_{(5\text{ V})\text{ total}}$ = Sum of all the internal current consumption of the connected bus modules + internal current consumption fieldbus coupler/controller

Internal system supply module

$I_{(5\text{ V})\text{ total}}$ = Sum of all the internal current consumption of the connected bus modules at internal system supply module

$$\text{Input current } I_{(24\text{ V})} = \frac{5\text{ V}}{24\text{ V}} * \frac{I_{(5\text{ V})\text{ total}}}{\eta}$$

η = Efficiency of the power supply at nominal load 24 V



Note

Activate all outputs when testing the current consumption!

If the electrical consumption of a power supply point for the 24 V system supply exceeds 500 mA, then the cause may be an improperly dimensioned node or a defect.

During the test, you must activate all outputs.

3.4.4 Field Supply

3.4.4.1 Connection

Sensors and actuators can be directly connected to the relevant channel of the I/O module in 1, 2, 3 or 4 conductor connection technology. The I/O module supplies power to the sensors and actuators. The input and output drivers of some I/O modules require the field side supply voltage.

The power supply modules provide field side power (24 VDC). In this case it is a passive power supply without protection equipment. Power supply modules are available for different potentials, e.g. 24 VDC, 230 VAC or others.

Power supply modules with or without diagnostic capability are available for the power supply of other field potentials (e.g. 24 VDC, 0 VAC/DC ... 230 VAC/DC, 120 VAC, 230 VAC). The power supply modules can also be used to set up various potential groups. The connections are connected in pairs to a power contact.

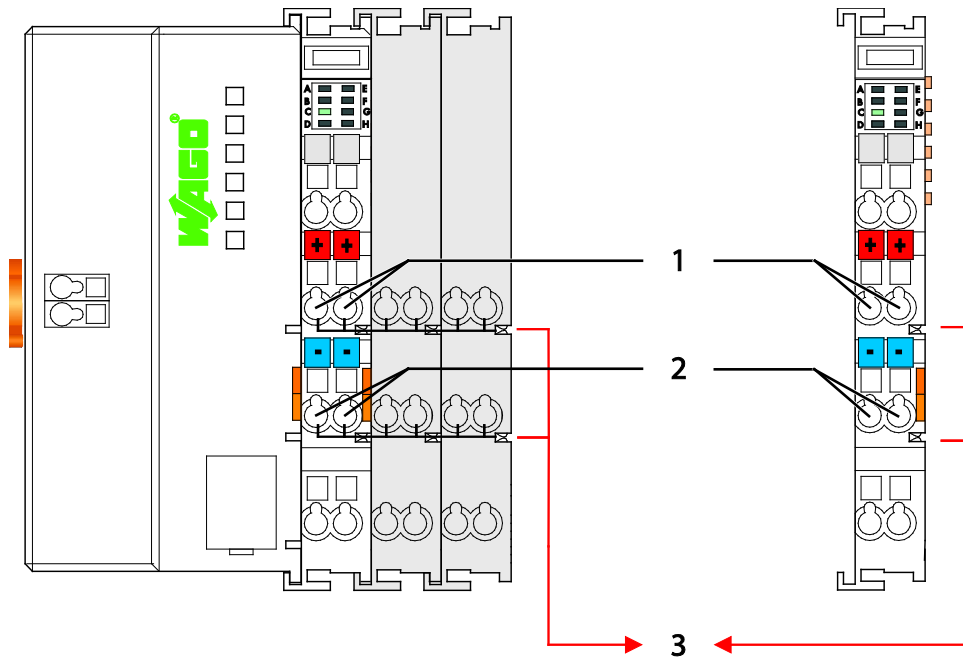


Figure 8: Field supply (sensor/actuator) (example)

Table 7: Legend for the “Field supply (sensor/actuator)” figure

Position	Beschreibung
1	Field supply 24 VDC
2	Field supply 0 V
3	Power jumper contacts (potential distribution to adjacent I/O modules)



Note

In exceptional instances, I/O modules can be directly connected to the field supply!

The 24 V field supply can be connected also directly to a bus module, if the connection points are not needed for the peripheral device supply. In this case, the connection points need the connection to the power jumper contacts.

The field-side power supply is automatically derived from the power jumper contacts when snapping an I/O module.

The current load of the power contacts must not exceed 10 A on a continual basis.

By inserting an additional power supply module, the field supply via the power contacts is disrupted. From there a new power supply occurs which may also contain a new voltage potential.

3.4.4.2 Fusing via Power Supply Module

Internal fusing of the field supply is possible for various field voltages via an appropriate power supply module.

Table 8: Power Supply Modules

Order No.	Field Voltage
750-601/040-000	Power Supply 24 VDC Fuse XTR
750-610/040-000	Power Supply 24 VDC Fuse Diagn XTR
750-606/040-000	Power Supply 24 VDC Diagn for Ex i XTR Modules

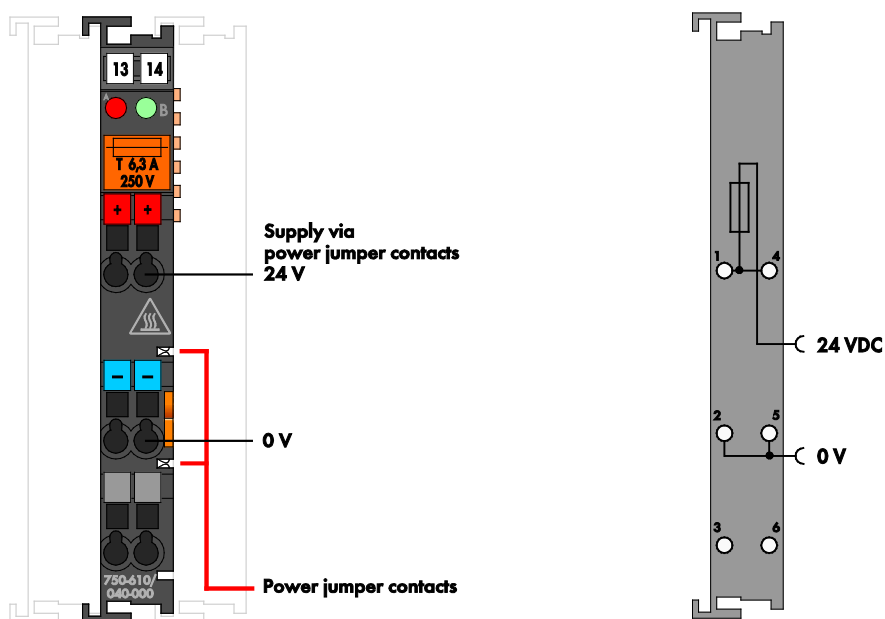


Figure 9: Supply Module with Fuse Carrier (Example 750-610/040-000)

Note



Observe the maximum power dissipation and, if required, UL requirements!
In the case of power supply modules with fuse holders, you must only use fuses with a maximum dissipation of 1.6 W (IEC 127).
For UL approved systems only use UL approved fuses.

In order to insert or change a fuse, the fuse holder may be pulled out. In order to do this, use a screwdriver for example, to reach into one of the slits (one on both sides) and pull out the holder.

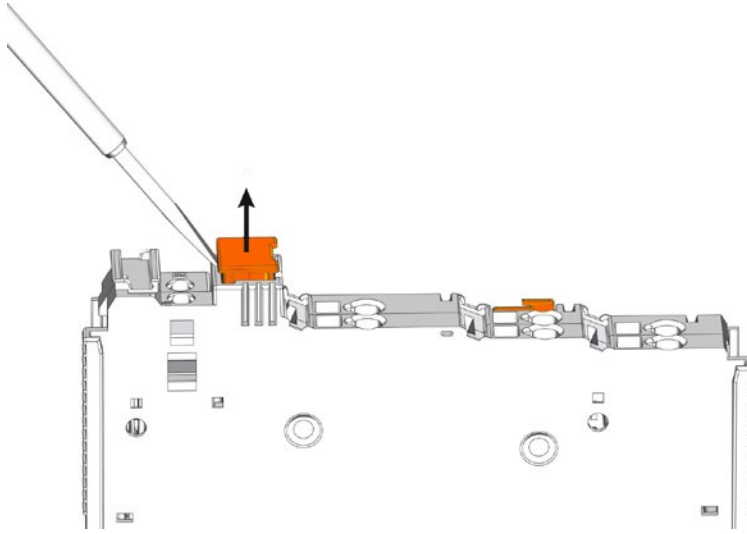


Figure 10: Removing the Fuse Carrier

Lifting the cover to the side opens the fuse carrier.

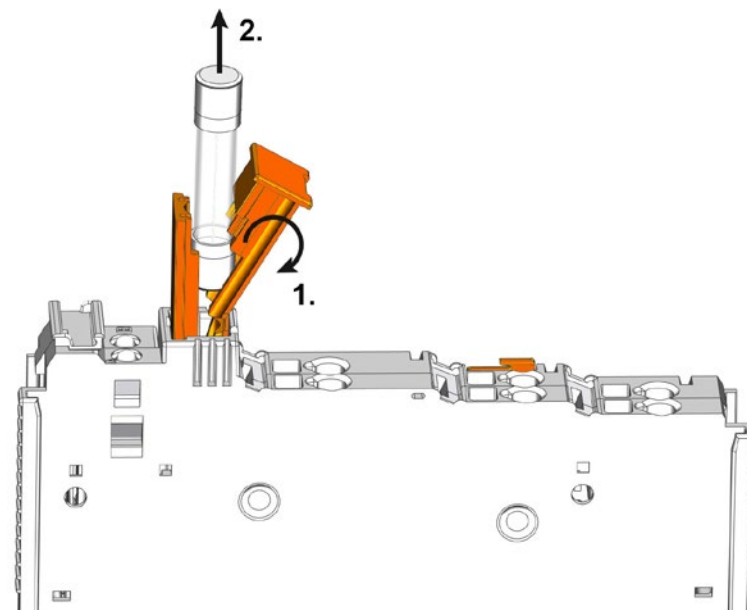


Figure 11: Opening the Fuse Carrier and Changing the Fuse

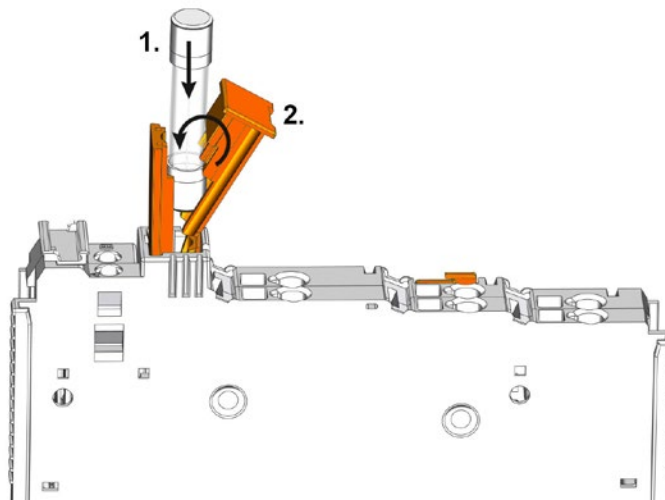


Figure 12: Changing the Fuse and Closing the Fuse Carrier

After changing the fuse, the fuse carrier is pushed back into its original position.

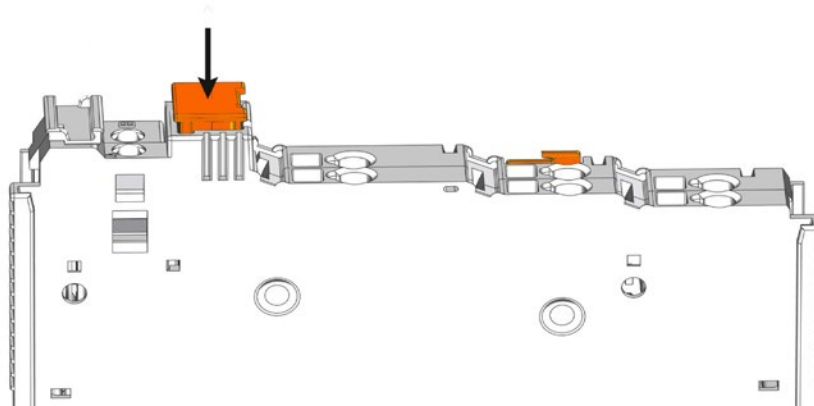


Figure 13: Push Back the Fuse Carrier

3.4.4.3 Fusing External

NOTICE

Field supply only with appropriate fuse protection!

Without overcurrent protection, the electronics can be damaged.

The 24 V input voltage for the field supply is provided with an external fuse with max. 10 A slow, min. 30 VDC, to be secured.

For the external fusing, the fuse modules of the WAGO series 282, 2006, 281 and 2002 are suitable for this purpose.

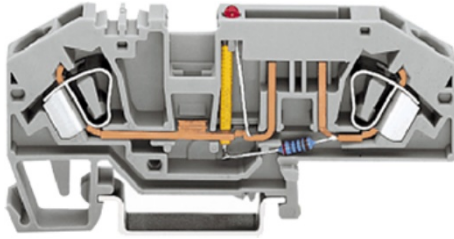


Figure 14: Fuse Modules for Automotive Fuses, Series 282

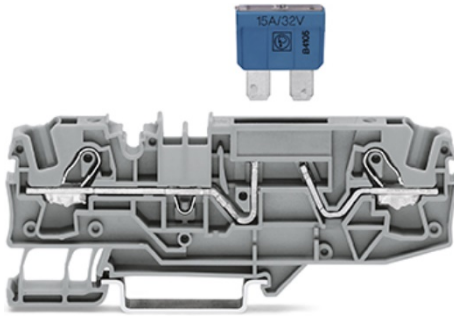


Figure 15: Fuse Modules for Automotive Fuses, Series 2006

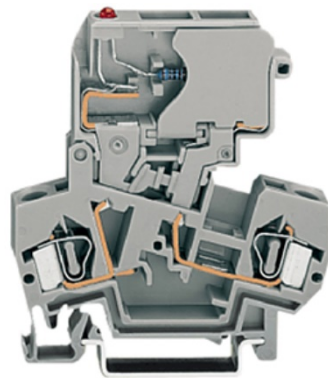


Figure 16: Fuse Modules with Pivotal Fuse Carrier, Series 281

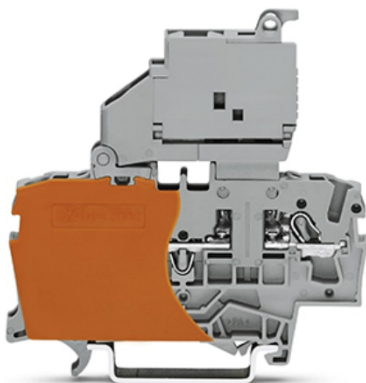


Figure 17: Fuse Modules with Pivotal Fuse Carrier, Series 2002

Note



Re-establish the ground connection when the connection to the power jumper contacts is disrupted!

Some I/O modules have no or very few power contacts (depending on the I/O function). Due to this, the passing through of the relevant potential is disrupted. If you require a field supply via power jumper contacts for subsequent I/O modules, then you have to use a power supply module.

Note the data sheets of the I/O modules.

Note



Use a spacer module when setting up a node with different potentials!

In the case of a node setup with different potentials, e.g. the alteration from 24 VDC to 230 VAC, you should use a spacer module. The optical separation of the potentials acts as a warning to heed caution in the case of wiring and maintenance works. Thus, you can prevent the results of wiring errors.

3.4.5 Power Supply for Mixed Operation

In a node, WAGO I/O System 750 XTR and WAGO I/O System 750 products can be used in mixed operation. The permitted environmental conditions of the node, e.g., the temperature range, then follow the components with the least ruggedness.

In mixed operation, it should also be noted that an XTR power supply must be connected before an XTR section and a standard supply module before a standard section.

Table 9: XTR Supply Modules for Powering XTR Sections

Item No.	Description	Description
750-601/040-000	Power Supply 24 VDC Fuse XTR	24 VDC power supply with fuse holder
750-602/040-000	Power Supply 24 VDC XTR	24 VDC power supply
750-606/040-000	Power Supply 24 VDC Diagn for Ex i XTR Modules	24 VDC power supply for Ex i XTR
750-610/040-000	Power Supply 24 VDC Fuse Diagn XTR	24 VDC power supply with fuse holder and diagnostics
750-612/040-000	Power Supply 0-230 VAC/VDC XTR	0-240 VAC/DC power supply
750-613/040-000	System Power Supply 24 VDC XTR	Internal system supply 24 VDC bus power supply
750-624/040-001	Field Supply Filter 24 VDC HI NC XTR	24 VDC field supply with filtering
750-626/040-000	Supply Filter 24 VDC HI XTR	System and field supply with filtering (24 V, 0 V), i.e., fieldbus coupler/controller and System Power Supply 24 VDC XTR (750-613/040-000)

NOTICE

XTR sections begin with XTR supply modules exclusively!

The power jumper contacts of XTR products use a contact material different than other WAGO I/O System 750 products.

Connecting power jumper contacts of XTR products to power jumper contacts of non-XTR products leads to irreversible deterioration in contact characteristics in the long run.

Therefore, start sections of XTR I/O modules with an XTR supply module.

Only connect XTR I/O modules after XTR supply modules, never otherwise.

3.4.6 Supplementary Power Supply Regulations

The WAGO-I/O-SYSTEM 750 XTR can also be used in shipbuilding applications and onshore/offshore installations (e.g., platforms, loading facilities), as well as in telecontrol applications. This is possible via certification under the standards of leading agencies such as Germanischer Lloyd and Lloyds Register.

For standard-compliant application in substation instrumentation and control, telecontrol systems, railway technology or shipbuilding certified operation, field-side power supply filter 750-624/040-00x or power supply filter 750-626/040-000 are generally to be used for XTR module groups.

Table 10: Filter modules for 24 V power supply

Item No.	Description	Description
750-626/040-000	Supply Filter 24 VDC HI XTR	Supply Filter; 24 VDC; higher isolation; extreme: System and field supply with filtering (24 V, 0 V), i.e., fieldbus coupler/controller and System Power Supply 24 VDC XTR (750-613/040-000)
750-624/040-000	Field Supply Filter 24 VDC HI XTR	Field Side Supply Filter (Surge); 24 VDC; higher isolation; extreme: 24 V field supply with filtering
750-624/040-001	Field Supply Filter 24 VDC HI NC XTR	Field Side Supply Filter (Surge); 24 VDC; higher isolation; without power jumper contacts; extreme: 24 V field supply with filtering

Therefore, the following power supply requirements must be observed:

The 24 V system power supply for the fieldbus coupler/controller must be filtered and protected against overvoltage. Therefore, the power must be supplied via power supply filter 750-626/040-000.

The electronic power supply must only be connected via a slow blow 2 A fuse.

The 24 V field power supply systems must be protected against overvoltage. Therefore, the power must be supplied via field-side power supply filter 750-624/040-00x or power supply filter 750-626/040-000.

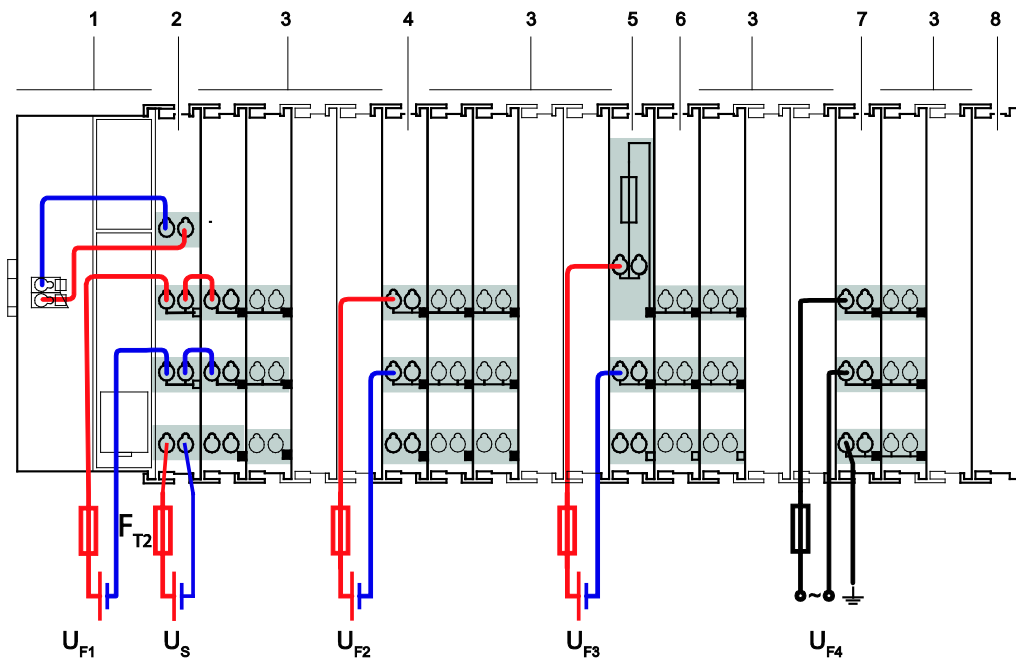


Figure 18: Power supply concept

Table 11: Legend for Figure "Power Supply Concept"

Pos.	Description
1	XTR Fieldbus coupler / controller
2	Supply filter; 24 VDC; higher isolation; extreme (750-626/040-000)
3	XTR I/O modules
4	Filter module for field-side power supply (surge); 24 VDC; higher isolation; without power jumper contacts; extreme (750-624/040-001)
5	Power supply; 24 VDC; fuse holder; extreme (750-601/040-000 oder 750-610/040-000)
6	Filter module for field-side power supply (surge); 24 VDC; higher isolation; extreme (750-624/040-000)
7	Supply module 230 V AC/DC; extreme (750-612/040-000)
8	XTR end module (750-600/040-000)
Potential groups	
U _{F1}	Field supply 1 (24 VDC)
U _S	System supply (24 VDC)
U _{F2}	Field supply 2 (24 VDC)
U _{F3}	Field supply 3 (24 VDC)
U _{F4}	Field supply 4 (230 VDC)

3.4.7 Supply Example



Note

The system supply and the field supply shall be separated!

You should separate the system supply and the field supply in order to ensure bus operation in the event of a short-circuit on the actuator side.

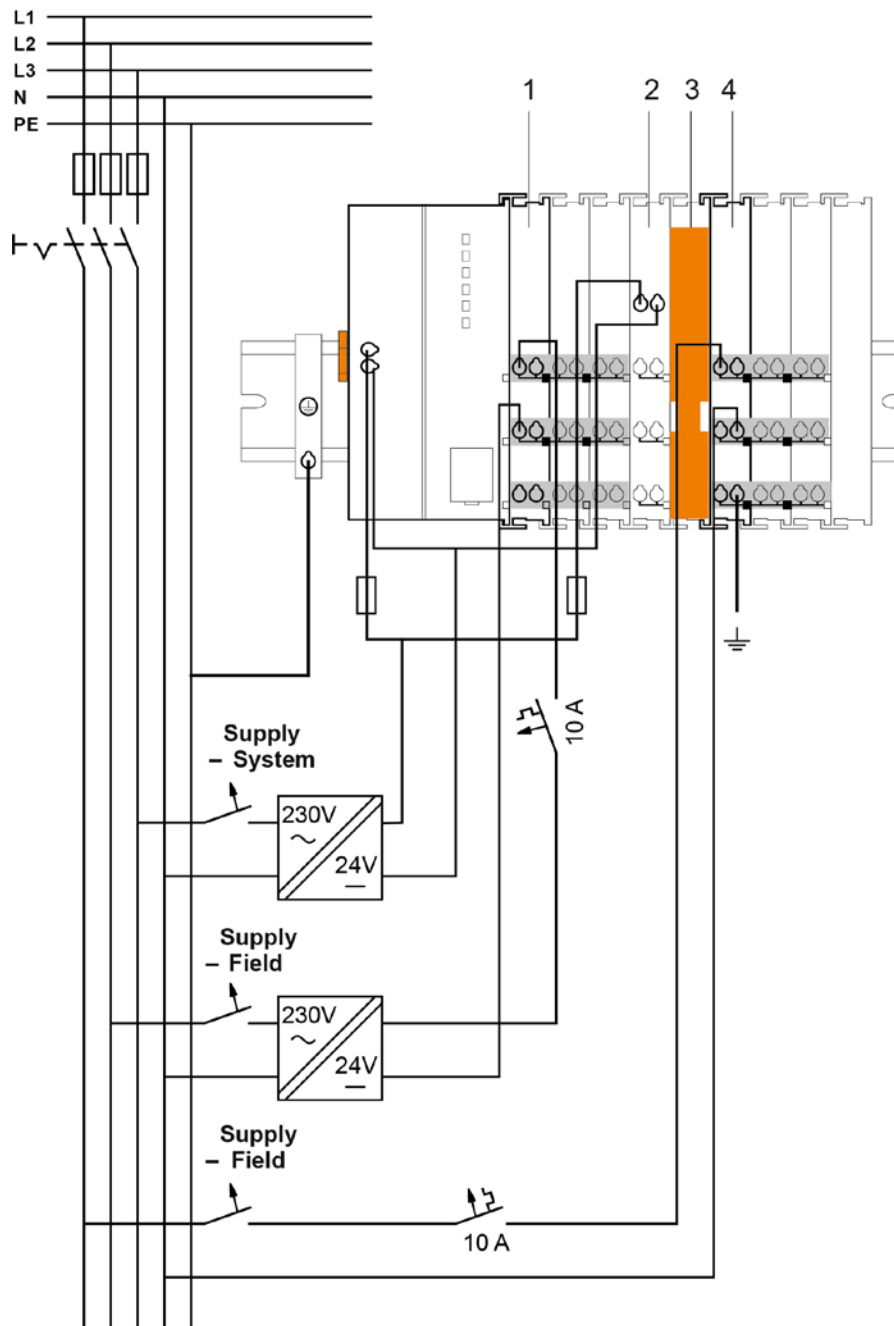


Figure 19: Supply example

Table 12: Legend for the “Supply example” figure

Pos	Description
.	
1	Power supply on the fieldbus coupler/controller via external system supply module
2	Supply module with bus power supply 24 V
3	Separation module recommended
4	Supply module 230 V

3.4.8 Power Supply Units

The WAGO I/O System 750 XTR requires 24 VDC voltage (system supply) for operation.

Note



Recommendation

A stable power supply cannot always be assumed everywhere. Therefore, you should use regulated power supplies to ensure the quality of the supply voltage.

Note



Buffer for system power supply!

The system power supply must be buffered to bridge power outages. As the power demand depends on the respective node configuration, buffering is not implemented internally.

To achieve power outages of 1 ms to 10 ms according to IEC61131-2, determine the buffering appropriate for your node configuration and structure it as an external circuit.

The power demand must be determined individually depending on the entry point of the field supply. All loads through field devices and I/O modules must be taken into account. The field supply also impacts the I/O modules because the input and output drivers of some I/O modules require the voltage of the field supply.

Note



System and field supply must be isolated!

The system supply and field supply must be isolated to ensure bus operation in the event of short circuits on the actuator side.

Information



Power supply units are available in the eShop.

You can find suitable power supply units, e. g. from the EPSITRON series, in the eShop on: www.wago.com

3.5 Grounding

3.5.1 Grounding the DIN Rail

3.5.1.1 Framework Assembly

When setting up the framework, the carrier rail must be screwed together with the electrically conducting cabinet or housing frame. The framework or the housing must be grounded. The electrical connection is established via the screw. Thus, the carrier rail is grounded.



DANGER

Ensure sufficient grounding is provided!

You must take care to ensure the flawless electrical connection between the carrier rail and the frame or housing in order to guarantee sufficient grounding.

3.5.1.2 Insulated Assembly

Insulated assembly has been achieved when there is constructively no direct ohmic contact between the cabinet frame or machine parts and the carrier rail. Here, the earth ground must be set up via an electrical conductor in accordance with valid national safety regulations.



Note

Recommendation

The optimal setup is a metallic assembly plate with grounding connection which is electrically conductive linked to the carrier rail.

The separate grounding of the carrier rail can be easily set up with the aid of the WAGO ground wire terminals.

Table 13: WAGO Ground Wire Terminals

Order No.	Description
283-609	1-conductor ground (earth) terminal block make an automatic contact to the carrier rail; conductor cross section: 0.2 mm ² ... 16 mm ² Note: Also order the end and intermediate plate (283-320).

3.5.2 Grounding Function

The grounding function increases the resistance against electro-magnetic interferences. Some components in the I/O system have a carrier rail contact that dissipates electro-magnetic interferences to the carrier rail.

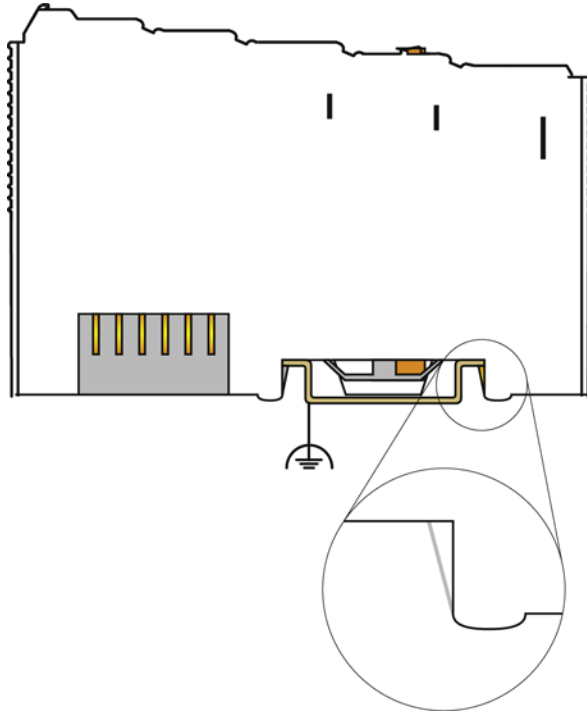


Figure 20: Carrier Rail Contact (Example)

The bottom CAGE CLAMP® connectors of the supply modules enable optional connection of a field-side functional ground. This potential is made available to the I/O module arranged on the right through the spring-loaded contact of the three power contacts. Some I/O modules are equipped with a knife-edge contact that taps this potential. This forms a potential group with regard to functional ground with the I/O module arranged on the left.

3.6 Shielding

3.6.1 General

Use of shielded cables reduces electromagnetic interference and thus increases signal quality. Measurement errors, data transmission errors and interference due to excessive voltage can be prevented.

Note

**Connect the cable shield to the ground potential!**

Integrated shielding is mandatory to meet the technical specifications in regards to measuring accuracy. Connect the cable shield and ground potential at the inlet to the cabinet or housing. This allows induced interference to dissipate and to be kept away from devices in the cabinet or housing.

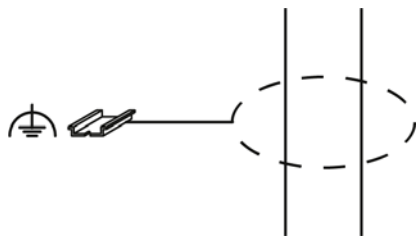


Figure 21: Cable Shield at Ground Potential

Note

**Improve shielding performance by placing the shield over a large area!**

Higher shielding performance is achieved via low-impedance connection between shield and ground. For this purpose, connect the shield over a large surface area, e.g., WAGO shield connecting system. This is especially recommended for large-scale systems where equalizing current or high impulse-type currents caused by atmospheric discharge may occur.

Note

**Keep data and signal lines away from sources of interference!**

Route data and signal lines separately from all high voltage cables and other sources of high electromagnetic emission (e.g., frequency converter or drives).

3.6.2 Fieldbus Cables

The shielding of fieldbus lines is described in the respective configuration guidelines and standards of the fieldbus system. Information on this can be provided by the corresponding fieldbus organization or specialist literature.

3.6.3 Shielded Signal Lines

Note



Use shielded signal lines!

Always use shielded signal lines for analog signals and I/O modules which are equipped with shield clamps. Only then you can ensure that the accuracy and interference immunity specified for the respective I/O module can be achieved even in the presence of interference acting on the signal cable.

3.6.4 WAGO Shield Connecting System

The series 790 WAGO shield connecting system consists of shield clamping saddles, busbars and various mounting carriers. These components can be used to achieve many different configurations.

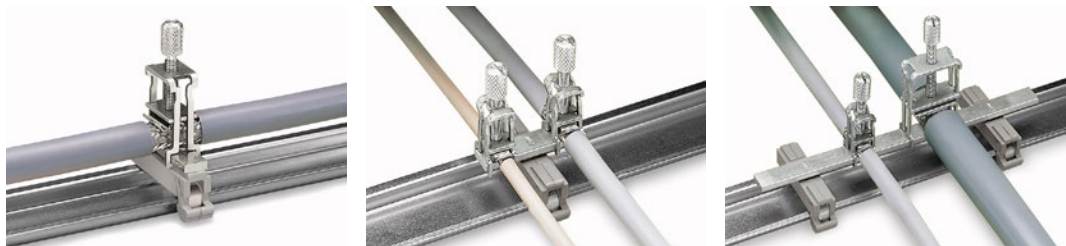


Figure 22: Examples of the WAGO Shield Connecting System

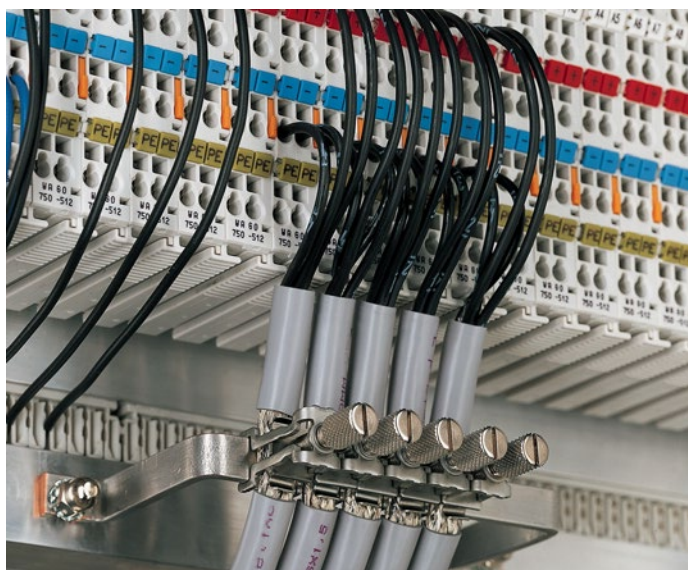


Figure 23: Application of the WAGO Shield Connecting System

4 Device Description

The 750-362/0040-0000 Fieldbus Coupler connects as the head station of the node assembly the WAGO-I/O-SYSTEM 750 or 753 to the ETHERNET fieldbus system.

This head station can be used for applications in machine and plant construction as well as in the process industry and building technology.

Equipped with two RJ-45 ports, which both work as 2-channel switches, the head station enables easy and cost-effective cabling such as linear bus topology for which no additional external switches or hubs are required.

With the DIP switch the last byte of the IP address, as well as the assignment of the IP address (DHCP, BootP, static setting) can be given.

In the head station, all input signals from the sensors are combined. After connecting the head station, the head station determines which I/O modules are on the node and creates a local process image from their data. Analog and specialty module data is sent via words and/or bytes; digital data is grouped bit-by-bit.

The local process image is divided into two data zones containing the data received and the data to be sent.

The data of the analog modules is mapped first into the process image. The modules are mapped in the order of their physical position after the head station.

The bits of the digital modules are combined into words and then mapped after the analog ones in the process image. If the number of digital I/Os is greater than 16 bits, the head station automatically begins a new word.

All sensor input signals are grouped in the coupler (slave) and transferred to the higher-order controller (master) via the fieldbus. Process data linking is performed in the higher-order controller. The higher-order controller puts out the resulting data to the actuators via the bus and the node.

The fieldbus connection consists of two RJ-45 ETHERNET ports, which are connected to the head station via an integrated ETHERNET switch. Both ETHERNET ports independently support the following functions:

- 10BASE-T and 100BASE-TX
- Full and Half duplex
- Autonegotiation
- Auto-MDI(X)

Durch die Unterstützung von Autonegotiation und Auto-MDI/MDI-X ist keine manuelle Konfiguration der Übertragungsrate notwendig und es können sowohl Patch- als auch Crossover-Kabel verwendet werden.

By supporting of auto-negotiation and auto-MDI/MDI-X, no manual configuration of the transmission rate is necessary and both patch and crossover cables can be used.

In order to send process data via ETHERNET, the head station supports a series of network protocols.

The Modbus TCP/UDP protocol is implemented for exchanging process data. For the management and diagnosis of the system, the HTTP and SNMP protocols are available.

For the data transfer via ETHERNET the FTP and SFTP are available.

For the automatic assignment of the IP address in the network, alternatively DHCP or BootP can be used.

An internal server is available for Web-based applications.

HTML pages stored in the head station allow access to information about the configuration, the status and the I/O data of the fieldbus node via Web browsers. It is also possible to store individual HTML pages using the implemented file system, store custom HTML pages.

4.1 View

The view below shows the different parts of the device:

- The fieldbus connection is within the lower range on the left side.
- Over the fieldbus connection is a power supply unit for the system supply.
- LEDs for bus communication, error messages and diagnostics are within the upper range on the right side.
- Down right the service interface is to be found.

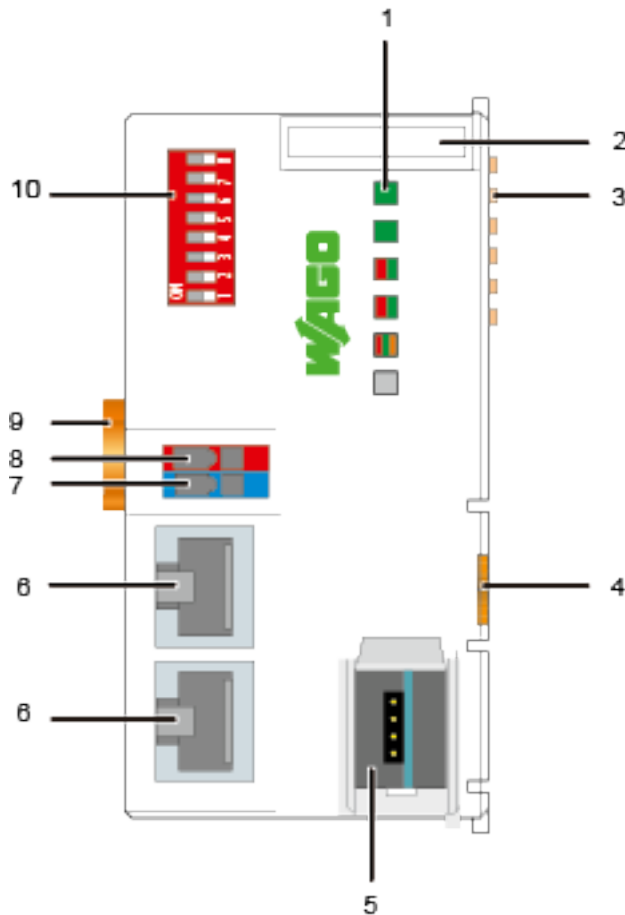


Figure 24: View FC Modbus TCP; G4

Table 14: Legend for Figure "View"

Pos.	Designation	Meaning	Details see Section
1	LINK ACT 1, 2, MS, NS, I/O	Status LEDs Fieldbus	„Device Description“ > „Display Elements“
2	---	Marking possibility on four miniature WSB markers	---
3	---	Data contacts	"Connect Devices" > "Data Contacts/Local Bus"
4	---	Unlocking lug	"Mounting" > "Inserting and Removing Devices"
5	---	Service interface (open flap)	"Device Description" > "Operating Elements"
6	X1, X2	Fieldbus connection 2 x RJ-45 as 2-Port ETHERNET Switch	„Device Description“ > „Connectors“
7	-	CAGE CLAMP® Connections System Supply 0 VDC	"System Description" > "Voltage Supply"
8	+	CAGE CLAMP® Connections System Supply 24 VDC	"System Description" > "Voltage Supply"
9	---	Locking Disc	„Mounting“ > „Plugging and Removal of the Device“
10	---	Address Selection Switch	"Device Description" > "Operating Elements"

4.2 Connectors

4.2.1 Data Contacts/Local Bus

Communication between the fieldbus coupler/controller and the I/O modules as well as the system supply of the I/O modules is carried out via the local bus. The contacting for the local bus consists of 6 data contacts, which are available as self-cleaning gold spring contacts.

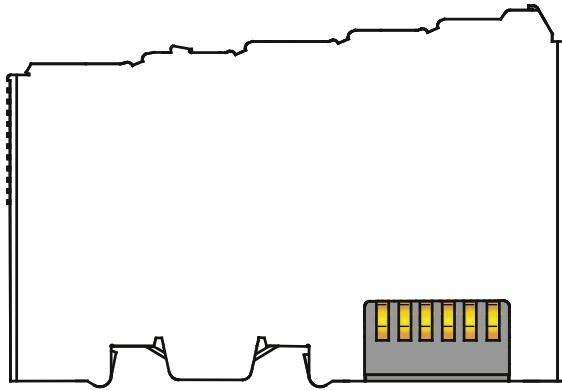


Figure 25: Data Contacts

NOTICE

Do not place the I/O modules on the gold spring contacts!

Do not place the I/O modules on the gold spring contacts in order to avoid soiling or scratching!

NOTICE



Pay attention to potential equalization from the environment!

The devices are equipped with electronic components that may be destroyed by electrostatic discharge. When handling the devices, please ensure that environmental factors (personnel, work space and packaging) are properly equalized. Do not touch any conducting parts, e.g., data contacts.

4.2.2 Power Jumper Contacts/Field Supply

The controller 750-362/0040-0000 is equipped with 2 self-cleaning power contacts for transferring of the field-side power supply to down-circuit I/O modules. These contacts are designed as spring contacts.

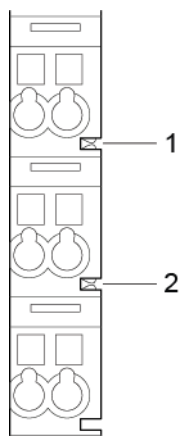


Figure 26: Power Jumper Contacts

Table 15: Legend for Figure "Power Jumper Contacts"

Contact	Type	Function
1	Spring contact	Potential feed-in (Uv) for field supply
2	Spring contact	Potential feed-in (0 V) for field supply

NOTICE

Do not exceed maximum values via power contacts!

The maximum current that can flow through the power jumper contacts is 10 A. The power jumper contacts can be damaged and the permissible operating temperature can be exceeded by higher current values.

When configuring the system, do not exceed the permissible maximum current value. If there is a higher power requirement, you must use an additional supply module to provide the field voltage.

4.2.3 CAGE CLAMP® Connectors

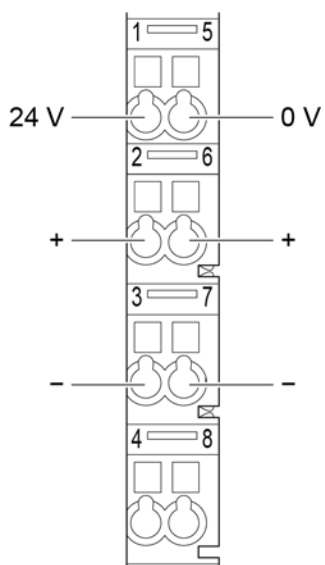


Figure 27: CAGE CLAMP® Connectors

Table 16: Legend for Figure “CAGE CLAMP® Connectors”

Contact	Designation	Description
1	24 V	System power supply voltage +24 V
2	+	Field-side power supply voltage U_V
3	-	Field-side power supply voltage 0 V
5	0 V	System power supply voltage 0 V
6	+	Field-side power supply voltage U_V
7	-	Field-side power supply voltage 0 V

4.2.4 Device Supply

The device is powered via terminal blocks with CAGE CLAMP® connections.

The device supply generates the necessary voltage to power the electronics of the device and the internal electronics of the connected I/O modules.

The fieldbus interface is galvanically separated to the electrical potential of the device.

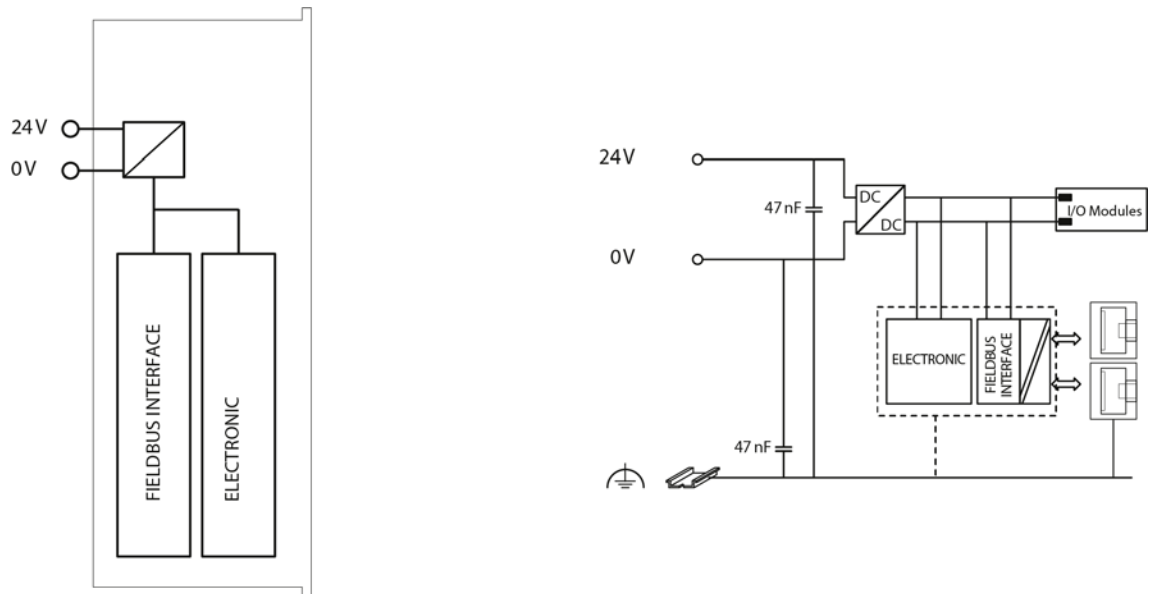


Figure 28: Device Supply

4.2.5 Fieldbus Connection

The connection to the fieldbus is made via two RJ-45 plugs, which are connected to the fieldbus controller via an integrated switch.

The integrated switch works in store-and-forward operation and for each port, supports the transmission speeds 10/100 Mbit as well as the transmission modes full and half-duplex and autonegotiation.

The wiring of these plugs corresponds to the specifications for 100BaseTX, which prescribes a category 5 twisted pair cable as the connecting cable. Cable types S/UTP (Screened Unshielded Twisted Pair) and STP (Shielded Twisted Pair) with a maximum segment length of 100 m (approximately 328.08 feet) can be used.

The socket is arranged physically lower, allowing the coupler to fit in an 80 mm high enclosure after plug connection.

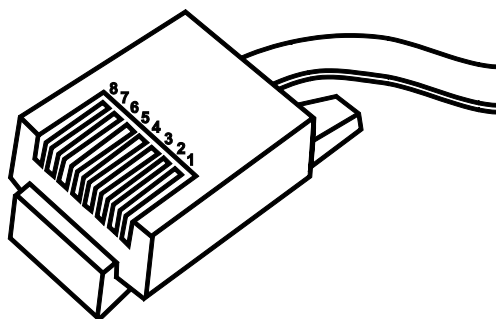


Figure 29: RJ-45 Connector

Table 17: RJ-45 Connector and RJ-45 Connector Configuration

Contact	Signal	
1	TD +	Transmit +
2	TD –	Transmit –
3	RD +	Receive +
4		free
5		free
6	RD –	Receive –
7		free
8		free

NOTICE

Do not use in telecommunication circuits!

Only use devices equipped with ETHERNET or RJ-45 connectors in LANs.
Never connect these devices with telecommunication networks.

4.3 Display Elements

The operating condition of the fieldbus coupler or the node is displayed with the help of illuminated indicators in the form of light-emitting diodes (LEDs). The LED information is routed to the top of the case by light guides. In some cases, the LEDs are multi-colored (red, green or orange).

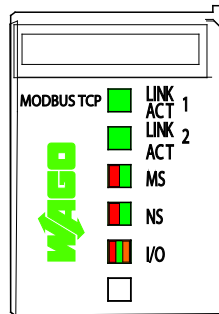


Figure 30: Display Elements

For the diagnostics of the different ranges fieldbus and node, the LED's can be divided into groups:

Table 18: Display Elements Fieldbus Status

LED	Color	Meaning
LNK ACT 1	green	indicates a connection to the physical network at port 1
LNK ACT 2	green	indicates a connection to the physical network at port 2
MS	red/green	indicates the status of the node
NS	red/green	indicates the network status

Table 19: Display Elements Node Status

LED	Color	Meaning
I/O	red/green/ orange	Indicates the operation of the node and signals via a blink code faults encountered.

Information



More information about the LED Signaling

Read the detailed description for the evaluation of the displayed LED state in the section "Diagnostics" > ... > "LED Signaling".

4.4 Operating Elements

4.4.1 Service Interface

The service interface is located behind the flap.

It is used for the communication with the WAGO I/O-CHECK and WAGO Ethernet Settings.

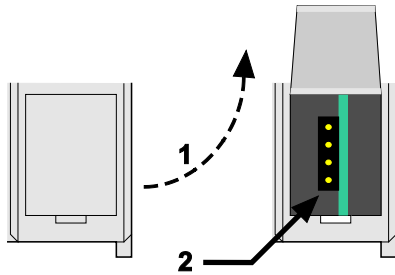


Figure 31: Service Interface (Closed and Opened Flap)

Table 20: Legend for Figure “Service Interface (Closed and Opened Flap)”

Number	Description
1	Open closed
2	View Service Interface

NOTICE

Device must be de-energized!

To prevent damage to the device, unplug and plug in the communication cable only when the device is de-energized!

The connection to the 4-pin header under the cover flap can be realized via the communication cables with the item numbers 750-920 and 750-923 or via the WAGO radio adapter with the item number 750-921.

4.4.2 Address Selection Switch


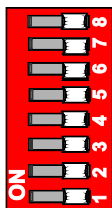


Figure 32: Address Selection Switch (for example setting "0")

The 8-pole DIP switch is used to select the protocol for setting the IP address and as an address selection switch, to set the IP address.

The IP address is composed of a network component and a host component.

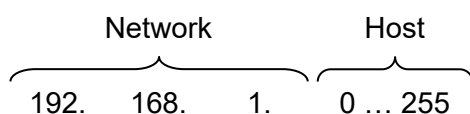

The network component is configurable and in delivery status 192.168.1.

The host component is set via the DIP switches of the address selection switch.

The coding with the DIP switches is bit-wise, starting with DIP switch 1 with the least significant bit (2^0) to DIP switch 8 with the most significant bit (2^7), corresponding to the values 0 to 255.

Table 21: Meaning of DIP Switch Positions

DIP Switch Positions (ON = 1)	Value	Meaning
00000000	0 (WBM)	The IP configuration set in the WBM on the "Port" WBM page is used (default DHCP, but can be changed to BootP or EEPROM).
00000001... 11111110	1-254 Host component	Host component by switch position Example of setting the DIP switch: For the IP address 192.168.1. 33 , the 1st and 6th switches must be set: 2^0 (1st switch) + 2^5 (6th switch) = 33
11111111	255 (DHCP)	The DHCP protocol is used to configure the IP parameters.

4.5 Technical Data

4.5.1 Device Data

Table 22: Technical Data – Device

Width	50 mm
Depth (from upper edge of DIN-rail)	62 mm
Height	97 mm
Weight	112 g
Degree of protection	IP20

4.5.2 System Data

Table 23: Technical Data – System

Number of fieldbus nodes per master	Limited by ETHERNET specification
Transmission medium	Twisted Pair CAT 5e (S/UTP or S/STP)
Fieldbus coupler connection	2 x RJ-45
Max. cable length	100 m
Max. network length	2000 m
Baud rate	10/100 Mbit/s
Transmission performance	Class D acc. to EN 50173
Protocols	Modbus TCP/UDP, HTTP, HTTPS, BootP, DHCP, DNS, SNTP, (S)FTP, SNMP
Max. number of socket links	15 Modbus TCP
Number of I/O modules	64
Configuration	Via WBM, DIP Switch, WAGO Ethernet Settings
Internal file system	1 Gbyte

4.5.3 Supply

Table 24: Technical Data – Supply

Internal current consumption (5 VDC)	450 mA
Total current for I/O modules (5 VDC)	1700 mA
Input current _{typ.} at nominal load (24 VDC)	280 mA
Power failure time acc. IEC 61131-2	Depending on external buffering
Supply voltage	
System	24 VDC via wiring level (CAGE CLAMP® connection)
Field	24 VDC <ul style="list-style-type: none"> • incoming via wiring level (CAGE CLAMP® connection); • outgoing via power jumper contacts
Derating under laboratory conditions	18 V ... 31.2 V (17.4 V ... 31.2 V) ¹⁾
for ambient operating temperature –40 °C ... +55 °C	18 V ... 28.8 V (17.4 V ... 28.8 V) ¹⁾
for ambient operating temperature +55 °C ... +70 °C	18 V ... 26.4 V (17.4 V ... 26.4 V) ¹⁾
Efficiency of the power supply _{typ.} at nominal load	90 %
Isolation	510 VAC ²⁾ or 775 VDC power supply/DIN rail
Rated impulse voltage	1 kV

¹⁾ Including residual ripple of 15%

²⁾ When performing insulation testing, observe the instructions in the manual!

Note



Buffer for system power supply!

The system power supply must be buffered to bridge power outages. As the power demand depends on the respective node configuration, buffering is not implemented internally.

To achieve power outages of 1 ms to 10 ms according to IEC61131-2, determine the buffering appropriate for your node configuration and structure it as an external circuit.

4.5.4 Fieldbus Modbus TCP

Table 25: Technical Data - Fieldbus Modbus TCP

Input process image _{max.}	1020 words
Output process image _{max.}	1020 words

4.5.5 Accessories

Table 26: Technical Data – Accessories

Miniature WSB Quick marking system

4.5.6 Connection Type

Table 27: Technical Data – Field Wiring

Connection technology	CAGE CLAMP®
Conductor cross-section	0.08 mm² ... 1.5 mm² / AWG 28 ... 14
Strip length	5 mm ... 6 mm / 0.22 in

Table 28: Technical Data – Power Jumper Contacts

Power jumper contacts	Spring contact, self-cleaning, hard gold plated
-----------------------	---

Table 29: Technical Data – Data Contacts

Data contacts	Slide contact, self-cleaning, hard gold plated
---------------	--

4.5.7 Mechanical Conditions

Table 30: Technical Data – Mechanical Conditions

Vibration resistance	Max. 5g *
----------------------	-----------

* Follow the installation instructions

4.5.8 Climatic Environmental Conditions

Table 31: Technical Data – Climatic Environmental Conditions

Surrounding air temperature, operation	–40 °C ... +70 °C
Surrounding air temperature, storage	–40 °C ... +85 °C
Relative humidity ^{*)}	95 %
Elevation above sea level without temperature derating with temperature derating max.	0 m ... 2000 m 2000 m ... 5000 m: 0.5 K per 100 m 5000 m
Resistance to harmful substances	Acc. to IEC 60068-2-42 and IEC 60068-2-43
Maximum pollutant concentration at relative humidity < 75 %	SO ₂ ≤ 25 ppm H ₂ S ≤ 10 ppm
Special conditions	The permissible temperature range of the connecting cable must be dimensioned based on the mounting position and current intensity, as the temperature of the terminal connection can be up to 25 K above the maximum expected surrounding air temperature (at 10 A).

^{*)} Short-term condensation acc. class 3K7 / IEC EN 60721-3-3 permitted, applying
E-DIN 40046-721-3 (except wind-driven precipitation, water and ice formation)

4.5.9 Mechanical Strength

Table 32: Technical Data – Mechanical Strength

Vibration resistance	Acc. to IEC 60068-2-6 Comment to the vibration resistance: a) Type of oscillation: sweep with a rate of change of 1 octave per minute 10 Hz ≤ f < 57 Hz, const. Amplitude 0,075 mm 57 Hz ≤ f < 150 Hz, const. Acceleration 1 g b) Period of oscillation: 10 sweep per axis in each of the 3 vertical axes
Shock resistance	Acc. to IEC 60068-2-27 Comment to the shock resistance: a) Type of impulse: half sinusoidal b) Intensity of impulse: 15 g peak value, 11 ms maintenance time c) Route of impulse: 3 impulses in each pos. And neg. direction of the 3 vertical axes of the test object, this means 18 impulses in all.
Free fall	Acc. IEC 60068-2-32 ≤ 1 m (module in original packing)

Table 33: Technical Data – Software Compatibility

Commissioning software	WAGO-I/O-CHECK 759-302 starting from version 3.18.1.2
Configuration software	WAGO Ethernet Settings 759-316 starting from version 6.9.9.16

4.6 Approvals



Information

More information about approvals.

Detailed references to the approvals are listed in the document “**Overview on WAGO I/O System 750 approvals**”, which you can find via the internet under:
www.wago.com → DOWNLOADS → Documentation → System Description.

The following approvals have been granted to 750-362/0040-0000 fieldbus coupler/controller:



Conformity Marking



Ordinary
Locations

UL61010-2-201



Korea Certification

MSIP-REM-W43-PFC750

The following Ex approvals have been granted to 750-362/0040-0000 fieldbus coupler/controller:



UL E198726 for Use in Hazardous Locations
CI I, Div 2, Group A, B, C, D, T4



TÜV 17 ATEX 193969 X
II 3 G Ex ec IIC T4 Gc
IECEX TUN 16.0046X
Ex ec IIC T4 Gc

The following ship approvals have been granted to 750-362/0040-0000 fieldbus coupler/controller:



DNV GL
[Temperature: D, Humidity: B, Vibration: B, EMC: B, Enclosure: A]

4.7 Standards and Guidelines

750-362/0040-0000 fieldbus coupler meets the following standards and guidelines:

Table 34: Standards and Rated Conditions for Explosion Protection Applications

ATEX acc. Directive 2014/34/EU	
General Requirements	
EN 60079-0	Group II electrical equipment
Equipment requirements in the types of protection	
EN 60079-7	Electrical equipment in “e” type of protection with “ec” level of protection
EN 60079-15	Electrical equipment in the “n” type of protection with “nC” level of protection
IECEx Certificates of Conformity	
General Requirements	
IEC 60079-0	Group II electrical equipment
Equipment requirements in the types of protection	
IEC 60079-7	Electrical equipment in “e” type of protection with “ec” level of protection
IEC 60079-15	Electrical equipment in the “n” type of protection with “nC” level of protection

Table 35: Climatic and Mechanical Environmental Conditions and Shipbuilding

Standard	Test Value
Transport	
EN 60870-2-2	Ct2(2k4) (except precipitation/water/moisture)
Mechanical Environmental Conditions	
EN 61850-3	Achieved
EN 60870-2-2	Bm
EN 60721-3-1	1M3
EN 60721-3-3	3M5
EN 60068-2-6	Acceleration 5g
IEC 60068-2-27 Shock	15g, 11 ms, 1000 shocks per axis and direction, half-sine
	25g, 6 ms, 1000 shocks per axis and direction, half-sine
EN 50155 EN 61373	Random vibration: Category 1, classes A and B
	Shock 5g, 30 ms: Category 1, classes A and B
Environmental Requirements	
EN 61850-3	Achieved
EN 60721-3-1	1K5 (except precipitation and ice formation)
EN 60721-3-3	3K7 (except wind-driven precipitation, water and ice formation)
EN 60870-2-2	C3 (except wind-driven precipitation and ice formation)
EN 50155	OT4 (−40 ... +70 °C)
Shipbuilding (Mechanical/Climatic Environmental Conditions and EMC)	
Shipbuilding ^{*)}	Temperature: D (cold test with −40 °C/16 h) Humidity: B Vibration: B (vibration test with acceleration amplitude 5.0g) EMC: B Enclosure: A

^{*)} The list of ship certifications issued is available in the section "Approvals".

The fieldbus coupler 750-362/0040-0000 meets the following EMC standards as these standards relate to the fieldbus coupler:

Table 36: EMC – Product and Generic Standards

EN 61000-6-1	Electromagnetic compatibility (EMC) - Part 6-1: Generic standards - Immunity for residential, commercial and light-industrial environments
EN 61000-6-2	Electromagnetic compatibility (EMC) - Part 6-2: Generic standards - Immunity for industrial environments
EN 61000-6-3	Electromagnetic compatibility (EMC) - Part 6-3: Generic standards - Emission standard for residential, commercial and light-industrial environments
EN 61000-6-4	Electromagnetic compatibility (EMC) - Part 6-4: Generic standards - Emission standard for industrial environments
EN 61000-6-5	Electromagnetic compatibility (EMC) - Part 6-5: Generic standards - Immunity for equipment used in power station and substation environment
EN 61850-3	Communication networks and systems for power utility automation - Part 3: General requirements
EN 60870-2-1	Telecontrol equipment and systems - Part 2: Operating conditions; section 1: Power supply and electromagnetic compatibility
EN 61131-2	Programmable controllers - Part 2: Equipment requirements and tests
EN 60255-26	Measuring relays and protection equipment - Part 26: Electromagnetic compatibility requirements
IEEE 1613	Environmental and testing requirements for communications networking devices installed in electric power substations
IEEE 1613.1	IEEE Standard Environmental and Testing Requirements for Communications Networking Devices Installed in Transmission and Distribution Facilities
IEEE 1613a	Environmental and testing requirements for communications networking devices installed in electric power substations - Amendment 1: Adding of one definition, dc power supply requirements (5.1), and annex E - History

Table 37: EMC – Testing Standards: Immunity to Interference

Standard	Test Value
Electrostatic Discharge	
• EN 61000-4-2	8 kV (contact discharge)
• IEEE C37.90.3	8 kV (air discharge)
High-frequency Electromagnetic Fields	
• EN 61000-4-3	20 V/m (80 MHz ... 1 GHz)
• IEEE C37.90.2	10 V/m (1 GHz ... 6 GHz)
Fast Electrical Transient Disturbances / Burst	
• EN 61000-4-4	4 kV
• IEEE C37.90.1	
Surge Voltage / Surge	
• EN 61000-4-5	1 kV (conductor/conductor) 2 kV (conductor/ground)
Conducted Disturbances, Induced by High-frequency Fields	
• EN 61000-4-6	10 V (150 kHz ... 80 MHz)
Magnetic Fields With Electrical Frequencies	
• EN 61000-4-8	300 A/m continuous / 1000 A/m for 1 s
Pulse-shaped Magnetic Fields	
• EN 61000-4-9	300 A/m
Damped Oscillatory Magnetic Fields	
• EN 61000-4-10	100 A/m
Voltage Dips, Short-term Interruptions and Voltage Fluctuations	
• EN 61000-4-11	Standard not applicable
Damped Sinusoidal Oscillations	
• EN 61000-4-12	1 kV (conductor/conductor) 2 kV (conductor/ground)
Harmonics and Interharmonics	
• EN 61000-4-13	Standard not applicable
Conducted Asymmetric Disturbances	
• EN 61000-4-16	30 V continuous 300 V for 1 s

Table 37: EMC – Testing Standards: Immunity to Interference

Standard	Test Value
Line Frequency Disturbances	
• EN 60255-26	Standard not applicable
Alternating Components of the Voltage to DC Line Connections	
• EN 61000-4-17	15 %
Damped Oscillatory Waves	
• EN 61000-4-18	1.25 kV conductor/conductor
• IEEE C37.90.1	2.5 kV conductor/ground
Voltage Dips, Short-term Interruptions and Voltage Fluctuations to DC Supply Inputs	
• EN 61000-4-29	See section “Power Supply Units”
Harmonics	
• Shipbuilding ^{*)}	Max. 2 W DC: 3 V _{eff} , AC: 10 % to 15th harmonic 10 % ... 1 % for 15th to 100th harmonic 1 % for 100th to 200th harmonic

^{*)} The list of ship certifications issued is available in the section “Approvals”.

Table 38: EMC – Testing Standards: Emission of Interference

Standard	Test Value ^{*)}
Enclosure Emission of Interference	
• EN 55032 Class B	30 dB(μV/m), QP, 30 MHz ... 230 MHz 37 dB(μV/m), QP, 230 MHz ... 1 GHz 70 dB(μV/m), Peak, 1 GHz ... 3 GHz 50 dB(μV/m), AV, 1 GHz ... 3 GHz 74 dB(μV/m), Peak, 3 GHz ... 6 GHz 54 dB(μV/m), AV, 3 GHz ... 6 GHz
• EN 55011 Class A • EN 55032 Class A	40 dB(μV/m), QP, 30 MHz ... 230 MHz 47 dB(μV/m), QP, 230 MHz ... 1 GHz 76 dB(μV/m), Peak, 1 GHz ... 3 GHz 56 dB(μV/m), AV, 1 GHz ... 3 GHz 80 dB(μV/m), Peak, 3 GHz ... 6 GHz 60 dB(μV/m), AV, 3 GHz ... 6 GHz
• Shipbuilding ^{**) (Class B)}	80 dB(μV/m) ... 50 dB(μV/m), QP, 150 kHz ... 300 kHz 50 dB(μV/m) ... 34 dB(μV/m), QP, 0.3 MHz ... 30 MHz 54 dB(μV/m), QP, 30 MHz ... 2 GHz 24 dB(μV/m), QP, 156 MHz ... 165 MHz
• Shipbuilding ^{**) (Class A)}	80 dB(μV/m) ... 50 dB(μV/m), QP, 150 kHz ... 30 MHz 60 dB(μV/m) ... 54 dB(μV/m), QP, 30 MHz ... 100 MHz 54 dB(μV/m), QP, 100 MHz ... 2 GHz 24 dB(μV/m), QP, 156 MHz ... 165 MHz

Table 37: EMC – Testing Standards: Immunity to Interference

Standard	Test Value
Conducted Emission of Interference – Line Connection AC Voltage	
• EN 55032 Class B	Standard not applicable
• EN 55011 Class A	Standard not applicable
Conducted Emission of Interference – Line Connection	
• Shipbuilding**) (Class B)	96 dB(μV) ... 50 dB(μV), 10 kHz ... 150 kHz 60 dB(μV) ... 50 dB(μV), 150 kHz ... 350 kHz 50 dB(μV), 0.35 MHz ... 30 MHz
• Shipbuilding**) (Class A)	120 dB(μV) ... 69 dB(μV), 10 kHz ... 150 kHz 79 dB(μV), 150 kHz ... 500 kHz 73 dB(μV), 0.5 MHz ... 30 MHz
Conducted Emission of Interference – Line Connection DC Voltage	
• EN 55032 Class A	79 dB(μV) QP, 0.15 MHz ... 0.5 MHz 66 dB(μV) AV, 0.15 MHz ... 0.5 MHz 73 dB(μV) QP, 0.5 MHz ... 30 MHz 60 dB(μV) AV, 0.5 MHz ... 30 MHz

*) QP = Quasi Peak Detector; AV = Average Detector

**) If necessary, please find different data in the section "Approval" (regarding approval for EMC A or EMC B).

Table 39: Standards and Rated Conditions for Rail Applications (EN 50155:2017)

Requirement	Fulfills class/standard
4.3 Rated Operating Conditions	
4.3.1 Altitude above sea level	AX (EN 50125-1)
4.3.2 Ambient operating temperature	OT4
4.3.3 Switch-on extended operating temperature	ST1
4.3.4 Rapid temperature variations	H1
4.3.5 Shock and vibration	1B (EN 61373)
4.3.7 Relative humidity	95 % (EN 50125-1)
5.1 Power Supply	
5.1.1.2 DC power supply range	
Minimum continuous voltage	$0.725 \times U_n$ ($0.7 \times U_n$ must be provided by a suitable external power supply unit)
Maximum continuous voltage	$1.25 \times U_n$
5.1.1.3 Temporary DC power supply fluctuation	
Minimum fluctuation voltage	$0.725 \times U_n$ ($0.6 \times U_n$ must be provided by a suitable external power supply unit)
Maximum fluctuation voltage	$1.4 \times U_n$
5.1.1.4 Interruptions of voltage supply	S1
5.1.3 Supply change-over	must be provided by a suitable external power supply unit
5.2.3 Electromagnetic compatibility	EN 50121-3-2
5.2.6 Insulation	EN 50124-1; Overvoltage Category OV2
6.2 Useful life	LX
10.7 Protective coatings for printed board assemblies	PC2
11.3 Fire behavior requirements	EN 45545-2 hazard level HL3
12 Documentation	According to annex G
MTBF values (acc. to MIL-HDBK-217-F2)	are available and can be provided on request for specific projects

WAGO is a company certified in accordance with the **IRIS** quality standard.

5 Mounting

5.1 Mounting Position

5.1.1 Coordinates Model

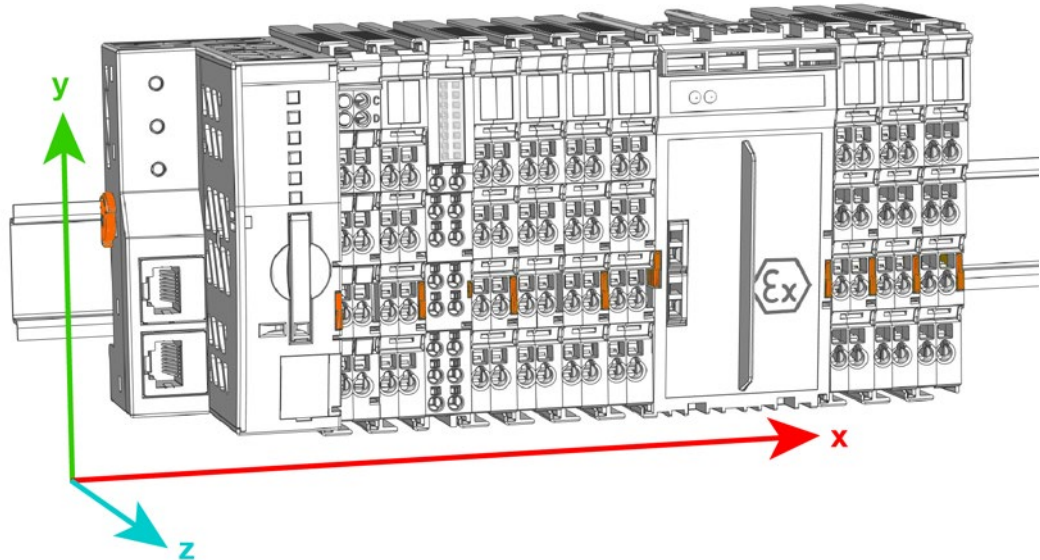


Figure 33: Coordinates Model: Width (x), Height (y), Depth (z)

- Width = dimension in the direction of the x-axis = horizontal in nominal mounting position, parallel to the longitudinal axis of the mounting rail
- Height = dimension in the direction of the y-axis = vertical in nominal mounting position.
- Depth = dimension in the direction of the z-axis = horizontal in nominal mounting position, perpendicular to the longitudinal axis of the mounting rail

Note



Changed coordinates model

In product manuals published before 2021, the height (y) and depth (z) are swapped!


5.1.2 Overview of Mounting Positions

The following mounting positions are approved for the WAGO I/O System 750 XTR:


- Nominal mounting position (horizontal left)
- Floor mounting position
- Vertical top mounting position

- Vertical bottom mounting position

Nominal mounting position (horizontal left)

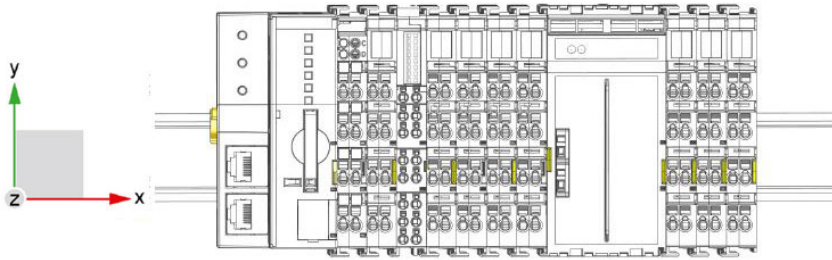

Floor mounting position

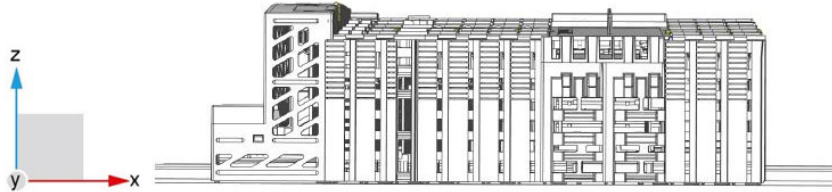

Vertical top mounting position



Vertical bottom mounting position

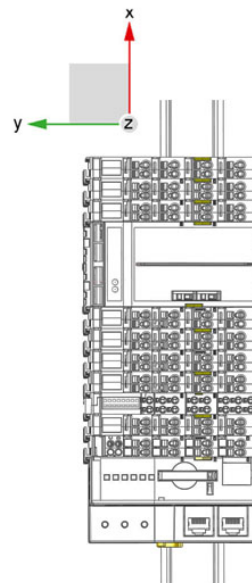


Figure 34: Mounting Positions

Note



Use an end stop in the case of vertical installation!

When mounting in the “vertical top” or “vertical bottom” mounting position, also mount an end stop below the fieldbus node to protect the fieldbus node against sliding.

WAGO item no. 249-116	End stop for DIN 35 rail, 6 mm wide
WAGO item no. 249-117	End stop for DIN 35 rail, 10 mm wide
WAGO item no. 249-197	End stop for DIN 35 rail, 14 mm wide, reinforced

For vibration loads > 4g, observe the following installation instructions:

- Use pan-head screws or blind rivets at least every 60 mm (12 mm pin spacing) to secure the DIN rail.
- Make the open conductor length between strain relief and wire connection as short as possible.
- Use the reinforced end stop 249-197.

5.2 Overall Configuration

The maximum total length of a fieldbus node without fieldbus coupler/controller is 780 mm including end module. The width of the end module is 12 mm. When assembled, the I/O modules have a maximum length of 768 mm.

Examples:

- 64 I/O modules with a 12 mm width can be connected to a fieldbus coupler/controller.
- 32 I/O modules with a 24 mm width can be connected to a fieldbus coupler/controller.

Exception:

The number of connected I/O modules also depends on the type of fieldbus coupler/controller is used. For example, the maximum number of stackable I/O modules on one PROFIBUS DP/V1 fieldbus coupler/controller is 63 with no passive I/O modules and end module.

NOTICE

Observe maximum total length of a fieldbus node!

The maximum total length of a fieldbus node without fieldbus coupler/controller may not exceed 780 mm.

Also note the limitations of individual fieldbus couplers/controllers.

5.3 Mounting onto Carrier Rail

5.3.1 Carrier Rail Properties

All system components can be snapped directly onto a carrier rail in accordance with the European standard EN 60175 (DIN 35).

NOTICE

Do not use any third-party carrier rails without approval by WAGO!

WAGO Kontakttechnik GmbH & Co. KG supplies standardized carrier rails that are optimal for use with the I/O system. If other carrier rails are used, then a technical inspection and approval of the rail by WAGO Kontakttechnik GmbH & Co. KG should take place.

Carrier rails have different mechanical and electrical properties. For the optimal system setup on a carrier rail, certain guidelines must be observed:

- The material must be non-corrosive.
- Most components have a contact to the carrier rail to ground electro-magnetic disturbances. In order to avoid corrosion, this tin-plated carrier rail contact must not form a galvanic cell with the material of the carrier rail which generates a differential voltage above 0.5 V (saline solution of 0.3 % at 20°C).
- The carrier rail must optimally support the EMC measures integrated into the system and the shielding of the I/O module connections.
- A sufficiently stable carrier rail should be selected and, if necessary, several mounting points (every 20 cm) should be used in order to prevent bending and twisting (torsion).
- The geometry of the carrier rail must not be altered in order to secure the safe hold of the components. In particular, when shortening or mounting the carrier rail, it must not be crushed or bent.
- The base of the I/O components extends into the profile of the carrier rail. For carrier rails with a height of 7.5 mm, mounting points are to be riveted under the node in the carrier rail (slotted head captive screws or blind rivets).
- The metal springs on the bottom of the housing must have low-impedance contact with the DIN rail (wide contact surface is possible).

5.3.2 WAGO DIN Rails

WAGO carrier rails meet the electrical and mechanical requirements shown in the table below.

Table 40: WAGO DIN Rails

Item No.	Description
210-112	35 × 7.5; 1 mm; steel; bluish, tinned, chromed; slotted
210-113	35 × 7.5; 1 mm; steel; bluish, tinned, chromed; unslotted
210-197	35 × 15; 1.5 mm; steel; bluish, tinned, chromed; slotted
210-114	35 × 15; 1.5 mm; steel; bluish, tinned, chromed; unslotted
210-118	35 × 15; 2.3 mm; steel; bluish, tinned, chromed; unslotted
210-198	35 × 15; 2.3 mm; copper; unslotted
210-196	35 × 8.2; 1.6 mm; aluminum; unslotted

5.4 Spacing

The spacing between adjacent components, cable conduits, casing and frame sides must be maintained for the complete fieldbus node.

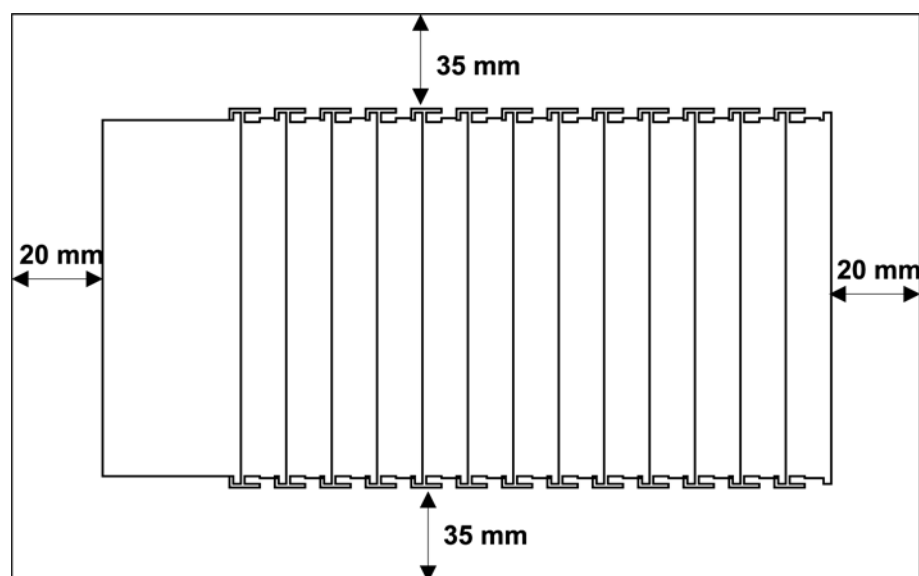


Figure 35: Spacing

The spacing creates room for heat transfer, installation or wiring. The spacing to cable conduits also prevents conducted electromagnetic interferences from influencing the operation.

5.5 Mounting Sequence

Fieldbus couplers, controllers and I/O modules of the WAGO I/O System 750 are snapped directly on a carrier rail in accordance with the European standard EN 60175 (DIN 35).

The reliable positioning and connection is made using a tongue and groove system. Due to the automatic locking, the individual devices are securely seated on the rail after installation.

Starting with the fieldbus coupler or controller, the I/O modules are mounted adjacent to each other according to the project design. Errors in the design of the node in terms of the potential groups (connection via the power contacts) are recognized, as the I/O modules with power contacts (blade contacts) cannot be linked to I/O modules with fewer power contacts.

CAUTION

Risk of injury due to sharp-edged blade contacts!

The blade contacts are sharp-edged. Handle the I/O module carefully to prevent injury. Do not touch the blade contacts.

NOTICE

Insert I/O modules only from the proper direction!

All I/O modules feature grooves for power jumper contacts on the right side. For some I/O modules, the grooves are closed on the top. Therefore, I/O modules featuring a power jumper contact on the left side cannot be snapped from the top. This mechanical coding helps to avoid configuration errors, which may destroy the I/O modules. Therefore, insert I/O modules only from the right and from the top.

Note



Don't forget the bus end module!

Always plug a bus end module 750-600/040-00x onto the end of the fieldbus node! You must always use this bus end module at all fieldbus nodes with the WAGO I/O System 750 XTR fieldbus couplers/controllers to guarantee proper data transfer.

Note



Increased interference!

For standard-compliant application in substation instrumentation and control, telecontrol systems, railway technology or shipbuilding certified operation, field-side power supply filter 750-624/040-001 or power supply filter 750-626/040-000 are generally to be used for XTR module groups.

Note



Mixed operation

Mixed operation (standard/XTR modules) within a node is possible when groups of modules are electrically isolated on the field side (i.e., electrically isolated power supply).

5.6 Inserting and Removing Devices



DANGER

Do not work when devices are energized!

High voltage can cause electric shock or burns.

Switch off all power to the device prior to performing any installation, repair or maintenance work.

5.6.1 Inserting the Fieldbus Coupler/Controller

1. When replacing the fieldbus coupler/controller for an already available fieldbus coupler/controller, position the new fieldbus coupler/controller so that the tongue and groove joints to the subsequent I/O module are engaged.
2. Snap the fieldbus coupler/controller onto the carrier rail.
3. Use a screwdriver blade to turn the locking disc until the nose of the locking disc engages behind the carrier rail (see the following figure). This prevents the fieldbus coupler/controller from canting on the carrier rail.

With the fieldbus coupler/controller snapped in place, the electrical connections for the data contacts and power contacts (if any) to the possible subsequent I/O module are established.

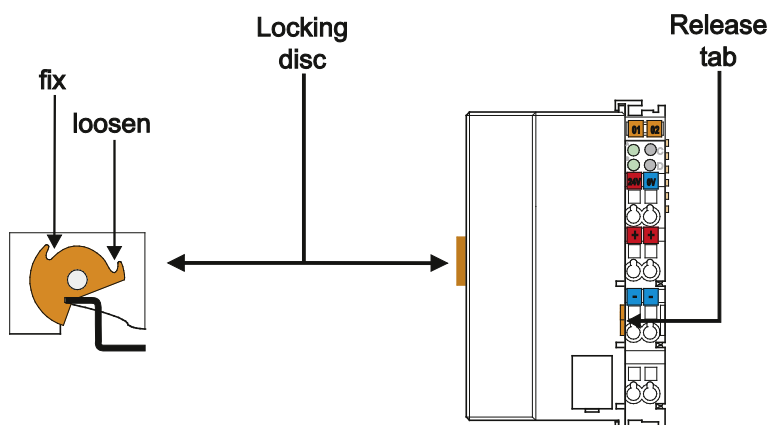


Figure 36: Release Tab of Extended ECO Fieldbus Coupler (Example)

5.6.2 Removing the Fieldbus Coupler/Controller

1. Use a screwdriver blade to turn the locking disc until the nose of the locking disc no longer engages behind the carrier rail.
2. Remove the fieldbus coupler/controller from the assembly by pulling the release tab.

Electrical connections for data or power contacts to adjacent I/O modules are disconnected when removing the fieldbus coupler/controller.

5.6.3 Inserting the I/O Module

1. Position the I/O module in such a way that the groove and spring are connected to the preceding and following components.

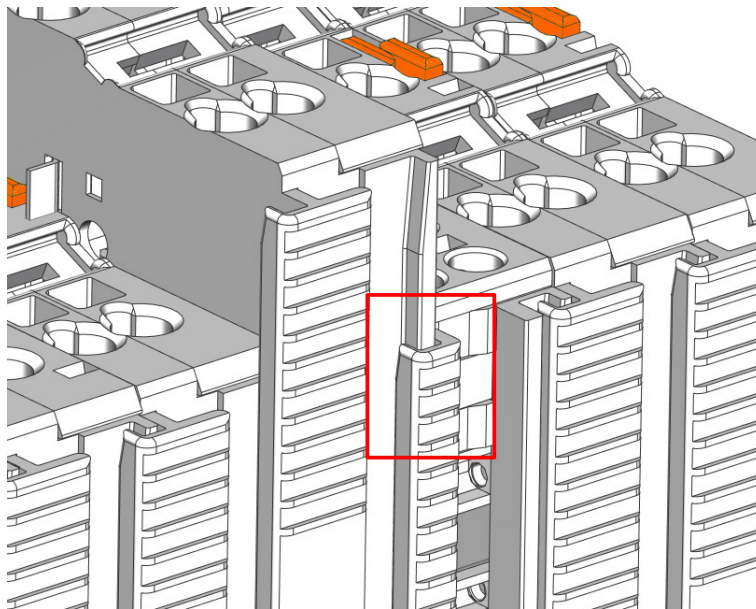


Figure 37: Inserting I/O Module (Example)

2. Press the I/O module into the assembly until the I/O module snaps into the carrier rail.

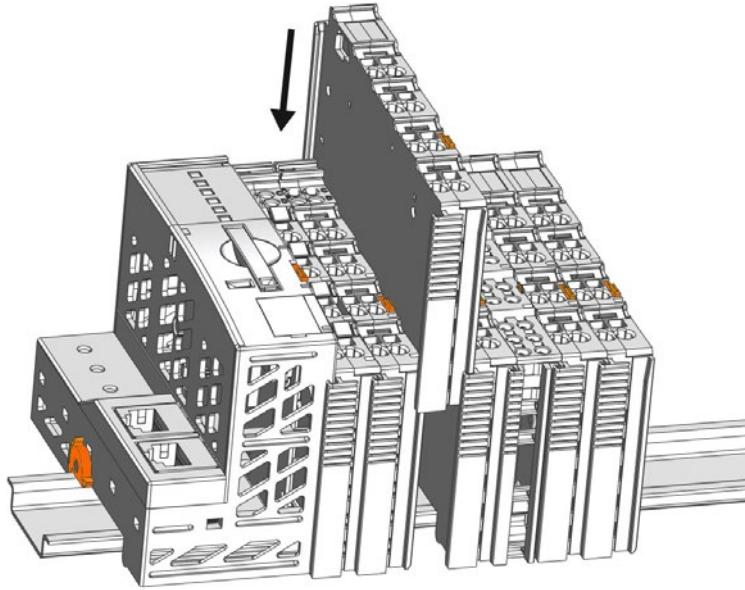


Figure 38: Snap the I/O Module into Place (Example)

3. Check that the I/O module is seated securely on the carrier rail and in the assembly. The I/O module must not be inserted crooked or askew.

Once the I/O module has snapped into place, the electrical connections for the data contacts and power contacts (if any) to the head station or to the preceding and, if applicable, following I/O module are established.

5.6.4 Removing the I/O Module

1. Remove the I/O module from the assembly by pulling the release tab.

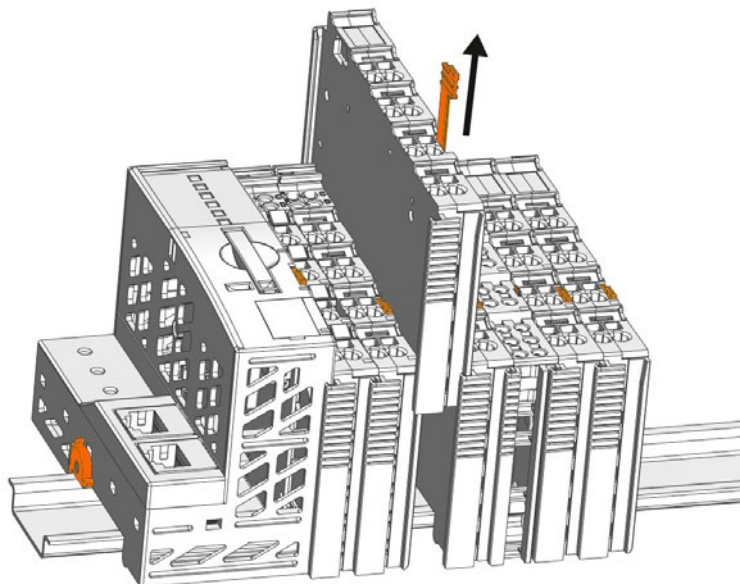


Figure 39: Removing the I/O Module (Example)

Electrical connections for data or power jumper contacts are disconnected when removing the I/O module.

6 Connect Devices

6.1 Data Contacts/Local Bus

Communication between the fieldbus coupler/controller and the I/O modules as well as the system supply of the I/O modules is carried out via the local bus. The contacting for the local bus consists of 6 data contacts, which are available as self-cleaning gold spring contacts.

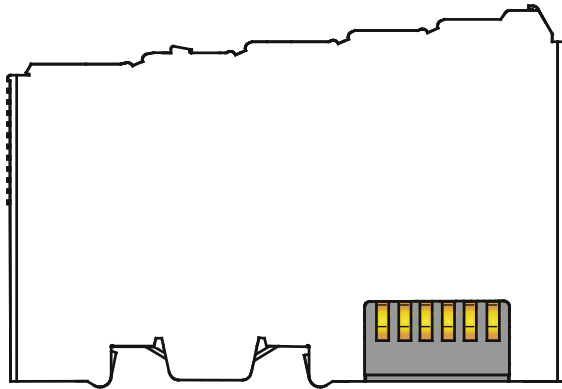


Figure 40: Data Contacts

NOTICE

Do not place the I/O modules on the gold spring contacts!

Do not place the I/O modules on the gold spring contacts in order to avoid soiling or scratching!

NOTICE



Pay attention to potential equalization from the environment!

The devices are equipped with electronic components that may be destroyed by electrostatic discharge. When handling the devices, please ensure that environmental factors (personnel, work space and packaging) are properly equalized. Do not touch any conducting parts, e.g., data contacts.

6.2 Power Contacts/Field Supply

⚠ CAUTION

Risk of injury due to sharp-edged blade contacts!

The blade contacts are sharp-edged. Handle the I/O module carefully to prevent injury. Do not touch the blade contacts.

Self-cleaning power jumper contacts used to supply the field side are located on the right side of most of the fieldbus couplers/controllers and on some of the I/O modules. These contacts come as touch-proof spring contacts. As fitting counterparts the I/O modules have male contacts on the left side.

Power jumper contacts

Blade	0	0	3	2
Spring		0	3	3

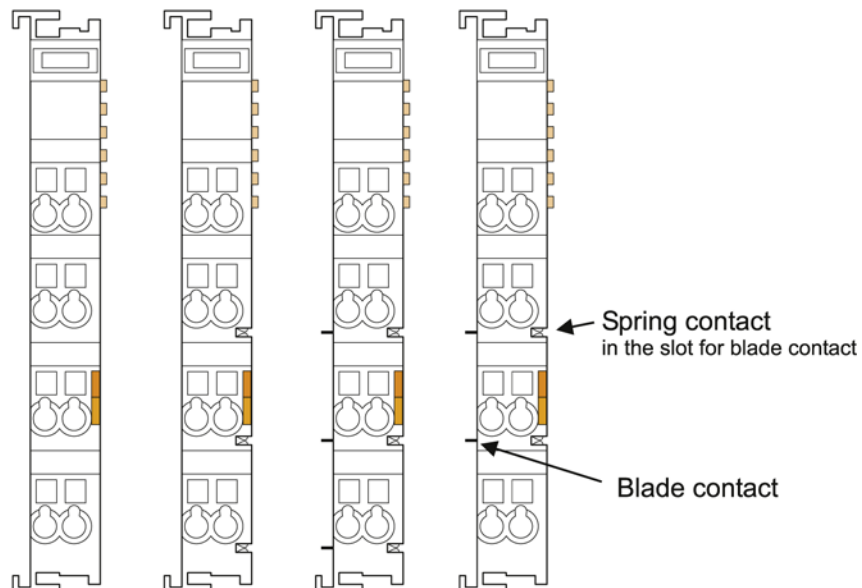


Figure 41: Example for the Arrangement of Power Contacts

6.3 Connecting a Conductor to the CAGE CLAMP®

The WAGO CAGE CLAMP® connection is appropriate for solid, stranded and finely stranded conductors.



Note

Only connect one conductor to each CAGE CLAMP®!

Only one conductor may be connected to each CAGE CLAMP®.

Do not connect more than one conductor at one single connection!

If more than one conductor must be routed to one connection, these must be connected in an up-circuit wiring assembly, for example using WAGO feed-through terminals.

1. For opening the CAGE CLAMP® insert the actuating tool into the opening above the connection.
2. Insert the conductor into the corresponding connection opening.
3. For closing the CAGE CLAMP® simply remove the tool. The conductor is now clamped firmly in place.

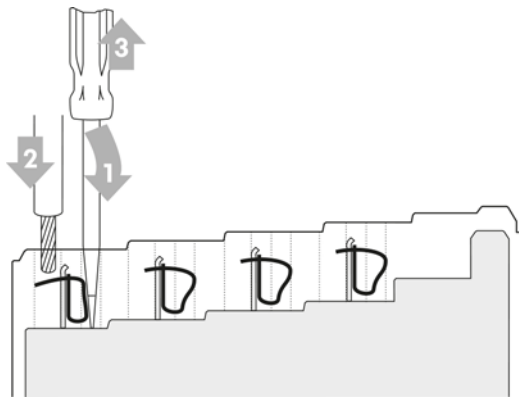


Figure 42: Connecting a Conductor to a CAGE CLAMP®

7 Function Description

7.1 Operating System

After master configuration and electrical installation of the fieldbus station, the system is operative.

The coupler begins running up after switching on the power supply or after a reset.

Upon initialization, the fieldbus coupler determines the I/O modules and configuration. The 'I/O' LED flashes red. After a trouble-free start-up, the coupler enters "Fieldbus start" mode and the 'I/O' LED lights up green. In the event of a failure, the 'I/O' LED will blink continuously. Detailed error messages are indicated by blinking codes; an error is indicated cyclically by up to 3 blinking sequences.

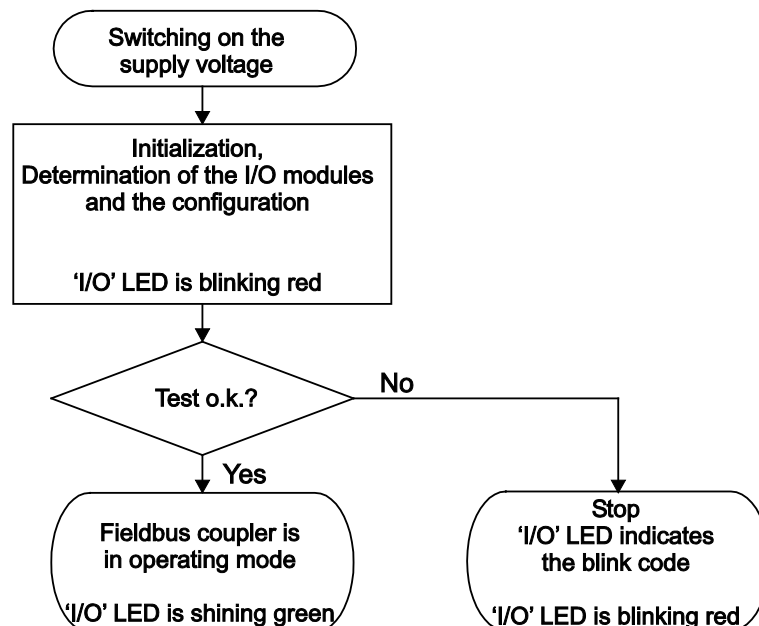


Figure 43: Operating System



Information

More information about the LED Signaling

Read the detailed description for the evaluation of the displayed LED state in the section "Diagnostics" > ... > "LED Signaling".

7.2 Process Data Architecture

7.2.1 Basic Structure

After switching on the supply voltage, the fieldbus coupler identifies all I/O modules connected with the node that send or receive data (data width/bit width > 0). In the maximum total extension the node can consist of a mixed arrangement of a maximum of 64 analog and digital I/O modules, connected on the fieldbus coupler.

The data of the digital I/O modules are bit-oriented; i.e., digital data are sent bit by bit. The data of the analog I/O modules are byte-oriented; i.e., analog data are sent byte by byte. The term "Analog I/O modules" represents the group of byte-oriented I/O modules, which send data byte by byte. This group includes, for example, counter modules and angle and distance measurement modules.

The fieldbus coupler stores the process data in the process images. The fieldbus coupler works with a process output data image (PIO) and a process input data image (PII).

The PIO is filled of the fieldbus master with the process output data. The PII is filled of the fieldbus coupler with the process input data.

Into the input and output process image the data of the I/O modules are stored in the sequence of its physical position after the fieldbus coupler in the individual process image.

First, all the byte-oriented I/O modules are stored in the process image, then the bit-oriented I/O modules. The bits of the digital I/O modules are grouped into bytes. If the amount of digital I/O information exceeds 8 bits, the fieldbus coupler automatically starts a new byte.

NOTICE

Avoid equipment damages due to addressing errors!

To avoid equipment damages within the field range, you must consider that, depending on the specific position of an I/O module in the fieldbus node, the process data of all previous byte or bit-oriented modules must be taken into account to determine its location in the process data map.



Note

Consider the Process Data size for each module!

Observe the number of input and output bits or bytes for the individual I/O modules.

For some I/O modules and their different versions, the structure of the process data depends on the fieldbus.

Information



Additional information about the fieldbus specific process image

For the fieldbus-specific process image of any WAGO I/O Module, please refer to the section "Structure of the Process Data".

7.2.2 Process Data MODBUS TCP

For some I/O modules (and their variations), the structure of the process data depends on the fieldbus.

For the fieldbus controller with MODBUS, the process image is built up word-by-word (with word alignment). The internal mapping method for data greater than one byte conforms to Intel formats.

Information



Additional Information:

For the respective fieldbus-specific structure of the process values of any I/O module within the 750 or 753 Series of the WAGO-I/O-SYSTEM, refer to Section "Structure of Process Data for MODBUS/TCP".

7.3 Data Exchange

With the fieldbus coupler, data is exchanged via the Modbus TCP or Modbus UDP protocol.

Modbus TCP works according to the master/slave principle. The master controller can be a PC or a PLC.

The fieldbus couplers of the WAGO-I/O-SYSTEM 750 are slave devices.

The master requests communication. This request can be directed to certain nodes by addressing. The nodes receive the request and, depending on the request type, send a reply to the master.

A defined number of simultaneous connections (socket connections) with other network devices can be established to a fieldbus coupler:

- 3 connections for HTTP(S) (to read HTML pages from the coupler)
- 15 connections via Modbus TCP (to read or write input and output data of the coupler)
- 10 connections for FTP

The maximum number of simultaneous connections can not be exceeded. Existing connections must first be terminated before new ones can be set up. The FC Modbus TCP G4 XTR is essentially equipped with two interfaces for data exchange:

- the interface to the fieldbus (Master)
- the interface to the I/O modules.

Data exchange takes place between the fieldbus master and the I/O modules.

7.3.1 Memory Space

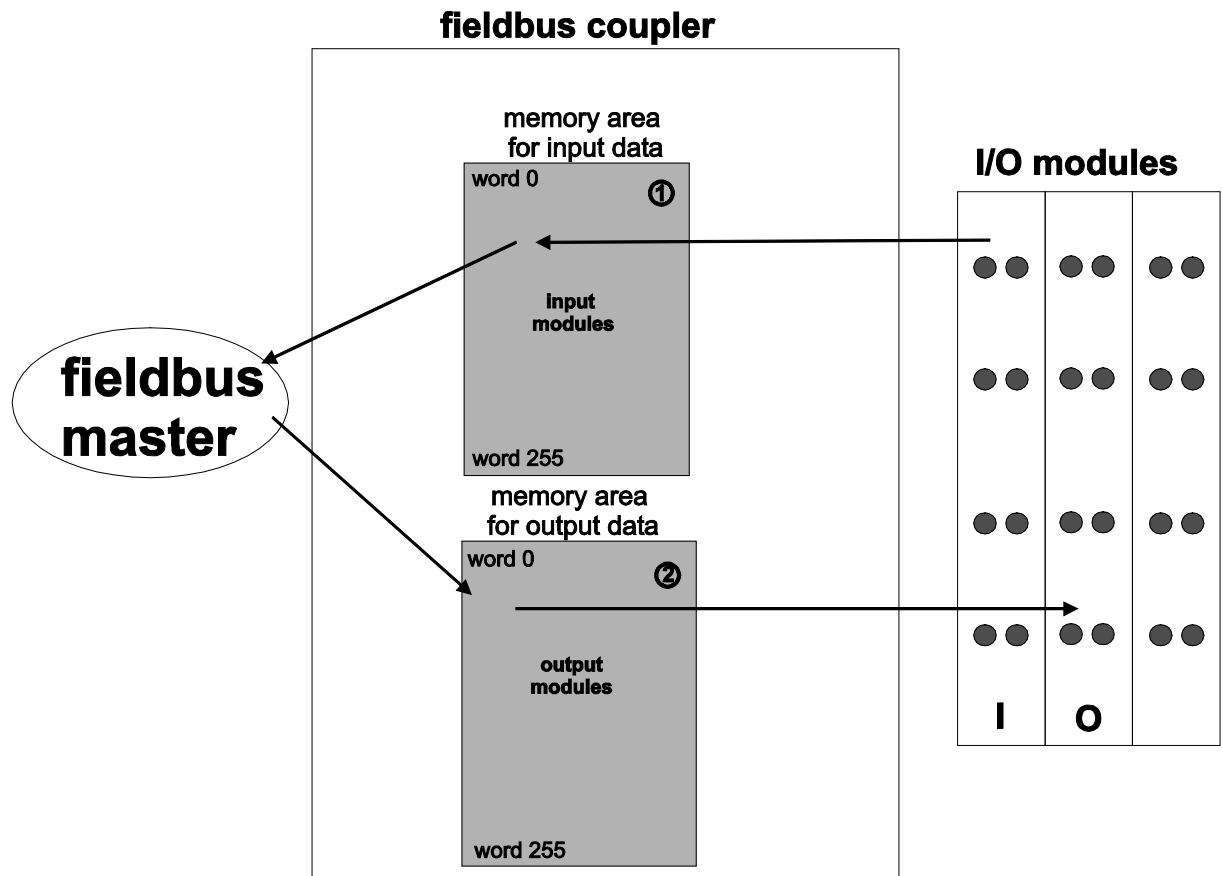


Figure 44: Memory Areas and Data Exchange

The fieldbus coupler process image contains the physical data for the bus modules.

These have a value of 0 ... 255 and word 512 ... 1275.

- 1 The input module data can be read by the CPU and by the fieldbus side.
- 2 Likewise, data can be written to the output modules from the CPU and the fieldbus side.

In addition, all output data is mirrored in the FC Modbus TCP G4 XTR to a memory area with the address offset 0x0200 and 0x1000. This allows output values to be read back in by adding 0x0200 or 0x1000 to the MODBUS address.

7.3.2 Addressing

Module inputs and outputs in a fieldbus coupler are addressed internally as soon as they are started. The order in which the connected modules are addressed depends on the type of module that is connected (input module, output module).

The process image is formed from these addresses.

The physical arrangement of the I/O modules in the fieldbus node is arbitrary.

7.3.2.1 Addressing of I/O Modules

Addressing first references complex modules (modules that occupy several bytes) in accordance with their physical order downstream of the fieldbus coupler/controller; i.e., they occupy addresses starting from word 0.

Following these is the data for the remaining modules, compiled in bytes (modules that occupy less than one byte). In this process, byte by byte is filled with this data in the physical order. As soon a complete byte is occupied by the bit oriented modules, the process begins automatically with the next byte.

Note

**Hardware changes can result in changes of the process image!**

If the hardware configuration is changed and/or expanded; this may result in a new process image structure. In this case, the process data addresses also change. If adding modules, the process data of all previous modules has to be taken into account.

Note

**Observe process data quantity!**

For the number of input and output bits or bytes of the individual IO modules please refer to the corresponding description of the IO modules.

Table 41: Data Width for I/O Modules

Data width > 1 byte (channel)	Data width = 1 bit (channel)
Analog input modules	Digital input modules
Analog output modules	Digital output modules
Input modules for thermocouples	Digital output modules with diagnostics (2 bits/channel)
Input modules for resistor sensors	Supply modules with fuse carrier/diagnostics
Pulse width output modules	Solid-state load relays
Interface modules	Relay output modules
Up/down counters	
I/O modules for angle and distance measurement	

7.3.3 Data Exchange between MODBUS/TCP Master and I/O Modules

Data exchange between the MODBUS/TCP Master and the I/O modules is conducted using the MODBUS functions implemented in the controller by means of bit-by-bit or word-by-word reading and writing routines.

There are 4 different types of process data in the controller:

- Input words
- Output words
- Input bits
- Output bits

Access by word to the digital I/O modules is carried out in accordance with the following table:

Table 42: Allocation of Digital Inputs and Outputs to Process Data Words in Accordance with the Intel Format

Digital inputs/ outputs	16.	15.	14.	13.	12.	11.	10.	9.	8.	7.	6.	5.	4.	3.	2.	1.
Process data word	Bit 15	Bit 14	Bit 13	Bit 12	Bit 11	Bit 10	Bit 9	Bit 8	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Byte	High byte D1								Low byte D0							

Output can be read back in by adding an offset of 200_{hex} (0x0200) to the MODBUS address.

Note



Data > 256 words can be read back by using the cumulative offset!

All output data greater than 256 words and, therefore located in the memory range 0x6000 to 0x62FC, can be read back by adding an offset of 1000_{hex} (0x1000) to the MODBUS address.

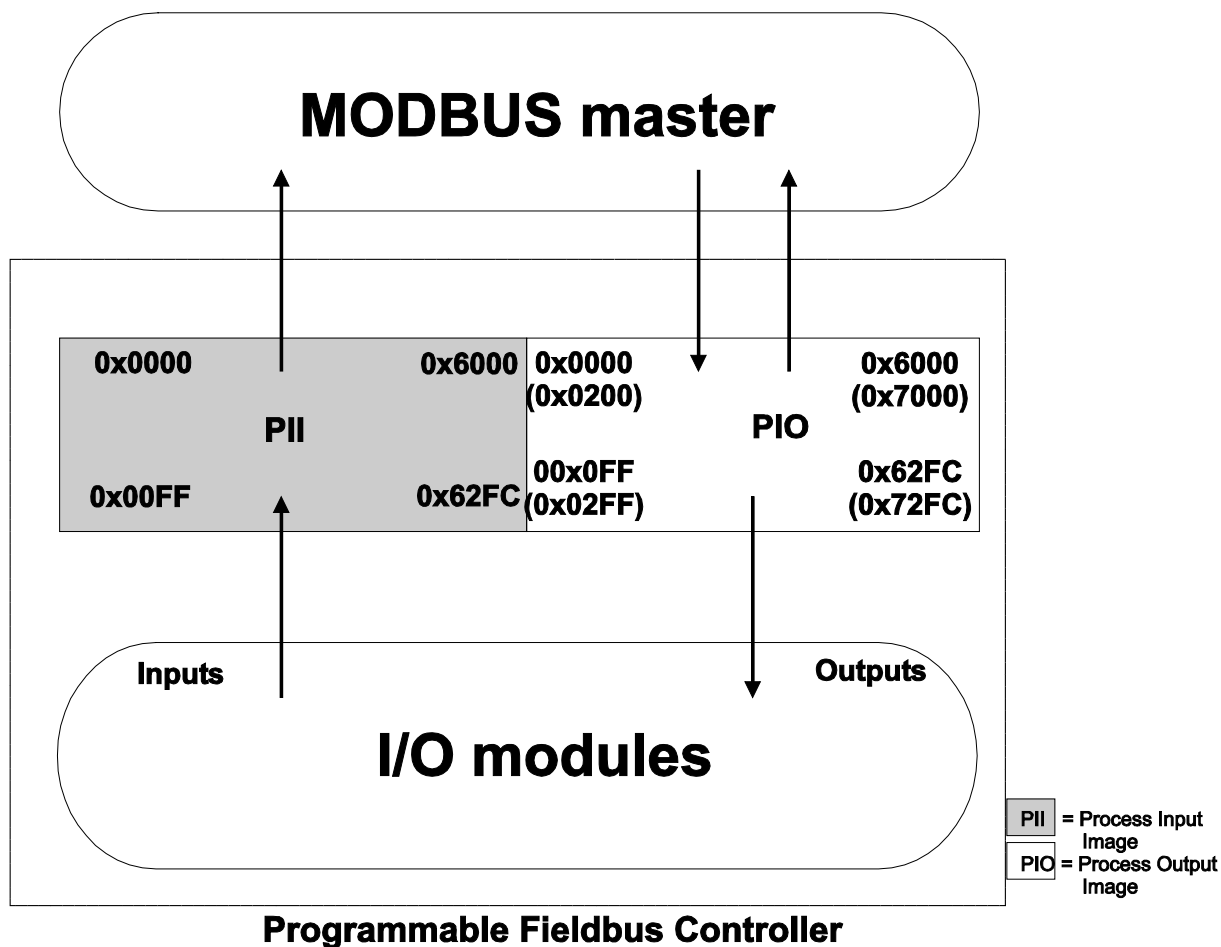


Figure 45: Data Exchange Between MODBUS Master and I/O Modules

Register functions start at address 0x1000. These functions can be addressed in a similar manner with the MODBUS function codes that are implemented (read/write).

The specific register address is then specified instead of the address for a module channel.

Information



Additional Information

A detailed description of the MODBUS addressing may be found in Chapter "MODBUS Register Mapping".

7.4 Logging

For diagnostic purposes, a message protocol can be recorded in the form of a log book via the head station.

The log messages can be sent to a syslog server or saved on the internal or, if available, on an external file system (e.g. memory card).

NOTICE

Rapid aging of the internal storage medium!

Note, when the log output is activated on the internal file system, excessive log output leads to faster aging of the storage medium.

In addition, by lowering the log level this is also favored.

Therefore You should only use the log output in a targeted manner (troubleshooting / support case) or use external / exchangeable storage media (if supported by the device).

Sending and saving of log messages is done by selecting the respective log level, which indicates the severity of the event (e.g. INFO, WARNING, ERROR). The log level defines the threshold for the log outputs on the network "Network log level" or for storage on the file system "File log level".

Example:

Log messages with the severity "INFO" are only recorded and displayed if at least one of the two log level options is set to "INFO".

The online log works as a ring buffer and shows the last 256 log entries in chronologically descending order.

For saving, the entries are downloaded in a single merged log file.

This log file in CSV format (comma-separated values) can be opened with a normal text editor or imported and processed with a spreadsheet program (e.g. Microsoft Excel).

The file name of the log file has the following structure:

Table 43: Log File Name Syntax

Syntax	Description
log_<MAC5:3>_<YYMMDDTHHMMSS>.csv	
<MAC5:3>	The last 3 digits of the MAC ID (MAC-ID without OUI part)
<YYMMDDTHHMMSS>	Date and time on the device

The fill level of the log memory can be limited by a limit value in%.

The maximum size results from the number and the maximum size of the log files.

With a set value between 1% and 100%, the current fill level of the log memory is monitored and a message is generated if the set limit value is exceeded (blink code and log message).

If the value is set to 0%, the level is not monitored.

When the saved log files are deleted on the device, any warning regarding the fill level of the log memory (blink code) is also reset.

To avoid data loss, the following points must be observed:

- The log files can only be called up via the WBM using the download function **[Download]** and emptying using the delete function **[Delete]**.

Direct access to the log directory "A:\log" or "S:\log" via FTP or SFTP as well as the renaming of log files is not permitted and can lead to access conflicts or inconsistent log information.

- No storage of user-specific files in the log directories "A:\log" or "S:\log".

The contents of the log directories "A:\log" or "S:\log" are not included in the Backup & Restore function.

8 Commissioning

This section shows a step-by-step procedure for starting up exemplarily a WAGO fieldbus node.

Note



Good example!

This description is just an example and only serves to describe the procedure for a local start-up of a single fieldbus node with a PC under Windows.

In principle, only a few steps are required for start-up.

To enable communication from your PC to the fieldbus coupler/controller over network, both must be in the same network. This requires that you first determine the IP address of the PC and then assign a corresponding IP address to the fieldbus node. There are several options being available for IP address assignment.

The description of these single work steps can be found in the corresponding following chapters.

- **Connecting PC and fieldbus node**
- **Determining IP address of the PC**
- **Assigning IP address to the fieldbus node**
- **Applying IP address permanently (option “static”)**

Following the commissioning descriptions after which the fieldbus node is ready for communication, the following topics are described:

- **Preparing the Flash File System**
- **Synchronizing the System Time**
- **Restoring Factory Settings**

8.1 Connecting Client PC and Fieldbus Nodes

1. Mount the fieldbus node on the TS 35 carrier rail.
Follow the mounting instructions found in the “Mounting” chapter.
2. Connect the 24 V power supply to the supply terminals.
3. Connect the PC's ETHERNET interface to the head station's ETHERNET interface (RJ-45) of your fieldbus node.
4. Turn the operating voltage on.

The head station is initialized. The head station determines the I/O module configuration of the fieldbus node and creates a process image.

During start-up, the I/O LED (red) flashes.

If the I/O LED lights up green after a brief period, the fieldbus node is operational.

If an error has occurred during initialization, it is red flashed with an error code by the I/O LED.

If the I/O LED flashes 6 times (indicating error code 6) and then 4 times (indicating error argument 4), this indicates that an IP address has not been assigned yet.

8.2 Determining the IP Address of the PC

To determine the IP address of the PC (with Microsoft Windows operating system) using the MS DOS prompt, proceed as follows:

1. Go via "Start"> "Search programs/files".
2. Enter the command "cmd" in the input field.
3. Choose at
(**Windows 7**): "cmd.exe" and
(**Windows 10**): "Command Prompt".
4. Press **[Enter]** key to confirm the entry.

The MS DOS prompt window opens.

5. In the MS DOS prompt window enter the command "ipconfig".
6. Press **[Enter]** key to confirm the entry.

The IP address, subnet mask and the default gateway with the corresponding parameters of the PC are displayed.

8.3 Assigning the IP Address to the Fieldbus Node



Note

The IP address must occur in the network only once!

For error-free network communication, note that the assigned IP address must occur only once in the network!

In the event of an error, the error message "IP address configuration error" (error code 6 – error argument 7) is indicated by 'I/O' LED at the next power-on.

- Use **address selection switch** (DIP switch) to assign IP address (manually).
- **Automatic assignment of addresses via DHCP**
(IP address via the fieldbus)
- **Assigning IP Address via "WAGO Ethernet Settings"**
(static IP address via the serial communication port or the ETHERNET interface)
- **Assigning IP Address via BootP**
(IP address via the fieldbus)

8.3.1 Assigning IP Address via Address Selection Switch

Use the address selection switch to set the host ID, which is the last byte of the IP address, with values between 1 and 254 binary coded.

The first three bytes of the IP address are specified by the fieldbus coupler/controller. The fieldbus coupler/controller uses a static base IP address to assign the IP address via the address selector switch.

The basic IP address can be changed via the Web-based management or WAGO Ethernet settings (in the delivery state: **192.168.1.0**).

The subnet mask and default gateway values are taken from the static settings (as delivered: subnet mask = **255.255.255.0**, default gateway = **0.0.0.0**).

Example:

Base IP address:	192.168.1.0
Set DIP switch value:	50 (binary coded: 00110010)
Resulting IP address:	192.168.1. 50

Table 44: Address selection switch values (host ID)

Address selection switch	Description
1 ... 254	Address selection switch is enabled. The host ID is set to a fixed value between 1 ... 254. The IP address consists of the static base address and the set host ID. The IP address set via the current device configuration (DHCP, BootP, static) is disabled.
0	Address selection switch is disabled. The IP address set via the current device configuration (DHCP, BootP, static) is used.
255	Address selection switch is disabled. The IP address is obtained from a DHCP server.




Information

More information about changing the static base address

You can also change the static base address currently saved in the fieldbus coupler/controller as required. Proceed as described for example in the section "Assigning IP Address via "WAGO Ethernet Settings"".

- To configure the IP address via the address selection switch by setting the host ID (last position of the IP address) to a value that does not equal 0/255, first convert the host ID to the binary representation.
For example, host ID "50" results in a binary code of "00110010".
- Set the bits in sequence using the 8 address switches. Start with address switch 1 to set bit 0 (LSB) and end with address switch 8 for bit 7 (MSB).

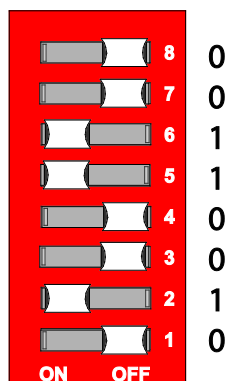Figure 46: Address Selection Switch, for Example the Value Setting "50" ($2^1 + 2^4 + 2^5$)

- Restart the fieldbus node after adjusting the address selection switch to apply the configuration changes.

8.3.2 Assigning IP Address via DHCP

Note



Set the address selection switch to 255 for assigning the IP address via DHCP!

Set the address selection switch to 255 to disable the DIP switch and to enable DHCP.

Restart the fieldbus node after adjusting the address selection switch to apply the configuration changes.

In delivery state of the head station, the dynamic assignment of the IP address is active by means of "Dynamic Host Configuration Protocol" (DHCP).

When the DHCP protocol is enabled the head station of fieldbus node expects the DHCP server to be permanently available. If there is no DHCP server available after a Power On reset, the network will remain inactive.

If DHCP is not active, it is necessary to enable DHCP, e. g. via "WAGO Ethernet Settings" or via the WBM (see chapters "Enable DHCP via "WAGO Ethernet Settings" (without existing IP address)" or "Enable DHCP via WBM (with existing IP address)").

Then the IP address assignment with DHCP takes place automatically via a DHCP server in the network.

If there is no DHCP server on your local PC, you can download a DHCP server free of charge from the Internet and install it on your PC.

Note



Total network failure when there are two DHCP servers in the network!

To prevent network failure, never connect a PC, on which a DHCP server is installed, to a global network. In larger networks, there is usually a DHCP server already that can cause collisions and subsequent network failure.

Note



Assign the DHCP server a fixed IP address and note common subnet!

Note that the DHCP server must have a fixed IP address and that the fieldbus node and DHCP server must be in the same subnet.

After the IP address was assigned by means of DHCP, it can be determined via the settings or outputs of the respective DHCP server, such as via the output of "Open DHCP", for example.



Note

Via DHCP assigned IP addresses are only temporarily valid!

Note that an IP address assigned via DHCP is limited in time. If the DHCP server is not available at the end of its useful life, the fieldbus node sets the IP address free and then the fieldbus node is no longer accessible!

In order to use the IP address permanently, change it to "static" (see chapter "Apply IP address permanently (option "static ")").

8.3.2.1 Enable DHCP via "WAGO Ethernet Settings" (without existing IP address)"



Note

Note Software Compatibility!

Refer to the version of the software specified in "Software Compatibility" in the Technical Data.

In the delivery state of the head station, the dynamic assignment of the IP address is active by means of "Dynamic Host Configuration Protocol" (DHCP).

However, if DHCP is not active and you do not have access to your fieldbus node via an IP address, you can enable DHCP via "WAGO Ethernet Settings" in the **Network** tab.

WAGO communication cables or WAGO radio-link adapters can be used for data communication via the serial service interface.

NOTICE

Do not connect Communication Cable when energized!

To prevent damage to the service interface, do not connect or disconnect 750-920 respectively 750-923 Communication Cable when energized! The fieldbus coupler/controller must be de-energized!

1. Using a WAGO Communication cable 750-920 respectively 750-923, connect your PC with the service interface of the head station of the fieldbus node.
2. Start "WAGO Ethernet Settings" program.
3. Click on **[Read]** to read in and identify the connected fieldbus node.
4. Select the **Network** tab.
5. Select the option "DHCP" in the field **Source**.
6. Click on the **[Write]** button to apply the settings in the fieldbus node.

The fieldbus node then starts with the new IP address assigned via DHCP.

7. Then You can use the **[Read]** button to read out the currently assigned IP address.
8. In order to use the IP address permanently, select on "TCP/IP" WBM page the option "static" in the field **Source** and apply the settings for "IP address", "Subnet mask" and "Gateway" from the currently used settings.
9. Click on the **[Write]** button to apply the settings.

8.3.2.2 Enable DHCP via WBM (with existing IP address)

In the delivery state of the head station, the dynamic assignment of the IP address is active by means of "Dynamic Host Configuration Protocol" (DHCP).

However, if DHCP is not active and you do already have access to your fieldbus node via an IP address, you can enable DHCP via WBM on "TCP/IP" WBM page.

1. Open the WBM (see chapter: "Configuring via the Web-Based Management System (WBM)" >> "Open WBM").
2. Change to the WBM page "TCP / IP".
3. Activate the "DHCP" option to assign a new IP address via DHCP.
4. Confirm the change with the **[SUBMIT]** button.
5. Select the WBM page "Administration".
6. Click the **[SOFTWARE RESET]** button to apply the changed setting.

Alternatively, you can restart the fieldbus node.

The fieldbus node then starts with the new IP address assigned via DHCP. The connection to the browser is interrupted.

7. If you want to call the WBM again, you must use now the changed IP address.
8. In order to use the IP address permanently, select in the WBM on "TCP/IP" WBM page the option "IP configuration source: static" (see chapter "Apply IP address permanently (option "static")").
9. In order to use the IP address permanently, select on "TCP/IP" WBM page the option "static" in the field **Source** and apply the settings for "IP address", "Subnet mask" and "Gateway" from the currently used settings.
10. Confirm the change with the **[SUBMIT]** button.
11. Click the **[SOFTWARE RESET]** button to apply the changed setting.

8.3.3 Assigning IP Address via “WAGO Ethernet Settings”

Note



Note Software Compatibility!

Refer to the version of the software specified in "Software Compatibility" in the Technical Data.

This program is used to configure an IP address, to reset the fieldbus coupler/controller parameters to the factory settings and to restore the Flash File System in which the WBM pages of the fieldbus coupler/controller are stored. "WAGO Ethernet Settings" can be used via the serial service interface or via the ETHERNET interface.

For initial commissioning, however, the way via the serial service interface is described here, because for access via the ETHERNET interface the currently assigned IP address must already be known.

WAGO communication cables or WAGO radio-link adapters can be used for data communication via the serial service interface.

NOTICE

Do not connect Communication Cable when energized!

To prevent damage to the service interface, do not connect or disconnect 750-920 respectively 750-923 Communication Cable when energized! The fieldbus coupler/controller must be de-energized!

Note



Set the address selection switch to 0 for an IP assignment via software!

Set the address selection switch to "0" to disable the DIP switch.

Restart the fieldbus node after adjusting the address selection switch to apply the configuration changes.

1. Using a WAGO Communication cable 750-920 respectively 750-923, connect your PC with the service interface of the head station of the fieldbus node.
2. Start “**WAGO Ethernet Settings**” program.
3. Click on **[Read]** to read in and identify the connected fieldbus node.
4. Select the **Network** tab.
5. To assign a permanent address, select the option "Static configuration" in the field **Source**.

6. Enter the required **IP Address** and, if applicable, the address of the subnet mask and gateway.
7. Click on the **[Write]** button to apply the settings in the fieldbus node.
8. You can now close "WAGO Ethernet Settings" or make other changes in the Web-based Management System as required. To open the Web-based Management System click on the button **[Start WBM]** on the right side.

8.3.4 Assigning the IP Address via BootP

A BootP server can be used to assign a fixed IP address.

Assigning the IP address using a BootP server depends on the respective BootP program. Handling is described in the respective manual for the program or in the respective integrated help texts.

Note



Set the address selection switch to 0 for an IP assignment via software!

Set the address selection switch to "0" to disable the DIP switch.

Restart the fieldbus node after adjusting the address selection switch to apply the configuration changes.

By default, DHCP is active in the delivery state of the head station.

Therefore it is necessary to enable BootP for IP address assignment via BootP, e. g. via "WAGO Ethernet Settings" or via the WBM (see analog the chapters "Activate DHCP via "WAGO Ethernet Settings" (without existing IP address)" or "Activate DHCP via WBM (with existing IP address)").

Then the IP address assignment with BootP takes place automatically via a BootP server in the network.

If there is no BootP server on your local PC, you can download a BootP server free of charge from the Internet and install it on your PC.

Information



Additional Information

Assigning IP addresses using a BootP server can be carried out in any Windows and Linux operating system. Any BootP server may be used.

Note



IP address assignment is not possible via the router!

The IP address is assigned via patch cable, switches or hubs. Addresses cannot be assigned via routers.

When the BootP protocol is enabled the head station of fieldbus node expects the BootP server to be permanently available. If there is no BootP server available after a Power On reset, the network will remain inactive.

In order to use the IP address permanently, change it to "static" (see chapter "Apply IP address permanently (option "static ")").

1. Based on the handling, which depends on the BootP program set, assign the required IP address for your fieldbus node.
2. Enable the query/response mechanism of the BootP protocol based on the handling, which depends on the BootP program set or e. g. in "WAGO Ethernet Settings" (**Network** tab, **Source** "BootP").
3. To apply the new IP address, use e.g. a hardware reset to restart your fieldbus node by interrupt the voltage supply for approx. 2 seconds.
4. Restart the fieldbus node.

The fieldbus node then starts with the new IP address assigned via BootP.

5. In order to use the IP address permanently, select in the WBM on "TCP/IP" WBM page the option "IP configuration source: static" (see chapter "Apply IP address permanently (option "static")").

8.3.4.1 Reasons for Failed IP Address Assignment

- The PC on whom the BootP server is running is not located in the network as the fieldbus coupler/controller; i.e., the IP addresses do not match.

Example:

Sub net mask:	255.255.255.0
	(default value for a fieldbus
coupler/	controller n)
PC's IP:	<u>192.168.2</u> .100
fieldbus coupler/controller's IP:	<u>192.168.1</u> .200

Due to the sub net mask, the first 3 digits of the IP addresses must match.

- PC and/or head station is/are not linked to the ETHERNET

8.4 Apply IP address permanently (option “static”)



Note

For permanent address assignment, the IP stored in the EEPROM must be used!

To apply permanently the new IP address assigned via DHCP or BootP in the fieldbus coupler/controller, the assigned or desired settings for IP address, subnet mask and default gateway must be entered on the WBM “TCP/IP” page. In addition the option “IP configuration source: static” must be activated. Then, the IP address is stored in the EEPROM and used as static address.

You can enable the option “IP configuration source: static” in the Web-based Management System.

1. Open the WBM (see chapter: “Configuring in the Web-Based Management System (WBM)” >> “Open WBM”).
2. Select the WBM page “TCP/IP”.
3. Enter the assigned or desired settings for IP address, subnet mask and default gateway in the fields “IP address”, “Subnet mask” and “Default gateway”.
4. Enable the option “IP configuration source: “static”.

At the same time, the use of the DHCP/BootP server is disabled.

5. Confirm your changes with button **[SUBMIT]**.
6. Select the “Administration” WBM page.
7. Click on the button **[Software Reset]** at the bottom of the page in order for the settings to take effect.

Alternatively restart the fieldbus node.

Then the fieldbus node starts with the configurations and the assigned IP address, which were previously loaded into the EEPROM. The connection to the browser is interrupted.

8. Now you must use the new IP address, if you want to access again on the WBM of this fieldbus node via browser.

8.5 Testing the Function of the Fieldbus Node

1. To ensure that the IP address is correct and to test communication with the fieldbus node, first turn off the operating voltage of the fieldbus node.
2. Create a non-serial connection between your PC and the fieldbus node.

The head station is initialized. The head station determines the I/O module configuration of the fieldbus node and creates a process image.

During start-up, the I/O LED (red) flashes.

If the I/O LED lights up green after a brief period, the fieldbus node is operational.

If an error occurs during start-up indicated by the I/O LED flashing red, evaluate the error code and argument and resolve the error.



Information

More information about LED signaling

The exact description for evaluating the LED signal displayed is available in the section "Diagnostics" > ... > "LED Signaling".

8.6 Preparing the Flash File System

The flash file system must be prepared in order to use the WBM of the fieldbus coupler/controller of the fieldbus node to make all configurations.

The flash file system is already prepared when delivered.

However, if the flash file system has not been initialized on your fieldbus coupler/controller or it has been destroyed due to an error, you first must initialize it manually to access it.

NOTICE

Do not connect Communication Cable when energized!

To prevent damage to the service interface, do not connect or disconnect 750-920 respectively 750-923 Communication Cable when energized! The fieldbus coupler/controller must be de-energized!



Note

Resetting erases data!

Note that resetting erases all data and configurations.

Only use this function when the flash file system has not been initialized yet or has been destroyed due to an error.

1. Switch off the supply voltage of the fieldbus node.
2. Connect the communication cable 750-920 or 750-923 respectively the *Bluetooth*® Adapter 750-921 to the service interface of the head station of the fieldbus node and to your computer.
3. Switch on the supply voltage of the fieldbus node.

The head station is initialized. The head station determines the I/O module configuration of the fieldbus node and creates a process image.

During start-up, the I/O LED (red) flashes.

If the I/O LED lights up green after a brief period, the fieldbus node is operational.

If an error occurs during start-up indicated by the I/O LED flashing red, evaluate the error code and argument and resolve the error.



Information

More information about LED signaling

The exact description for evaluating the LED signal displayed is available in the section "Diagnostics" > ... > "LED Signaling".

4. Start the "**WAGO Ethernet Settings**" program.

5. In the top menu bar, select **[Reset File System]** to format the file system and to extract the WBM pages of the flash file system.

Formatting and extracting is complete when the status window displays "Resetting the file system successfully".



Note

Restart the Fieldbus node after resetting file system!

Make a restart of the fieldbus node, so that the WBM pages can be displayed after resetting file system.

8.7 Synchronizing the System Time

The head station's system time enables a date and time indication for files in the flash file system.

Note



System time will be reset when the fieldbus node is de-energized!

The head station 750-362/0040-0000 does not have a real-time clock. For this reason, the current system time will be reset when the fieldbus node is de-energized!

After switching on the operating voltage, the system time starts at 01/01/2000, 00:00:00 a.m.

At start-up, synchronize the system time with the computer's current time.

There are two options to synchronize the system time:

- Synchronize the system time using "**WAGO Ethernet Settings**"
- Set the system time using the **Web Based Management System**

Synchronize the system time using "WAGO Ethernet Settings"

Note



Do not set time during a WAGO I/O-CHECK communication!

Note that setting the clock during a WAGO I/O-CHECK communication may cause communication errors. Therefore set the time only if WAGO I/O-CHECK is not yet started.

1. Switch off the supply voltage of the fieldbus node.
2. Connect the communication cable 750-920 or 750-923 respectively the *Bluetooth*® Adapter 750-921 to the service interface of the head station of the fieldbus node and to your computer.
3. Switch on the supply voltage of the fieldbus node.

The head station is initialized. The head station determines the I/O module configuration of the fieldbus node and creates a process image.

During start-up, the I/O LED (red) flashes.

If the I/O LED lights up green after a brief period, the fieldbus node is operational.

If an error occurs during start-up indicated by the I/O LED flashing red, evaluate the error code and argument and resolve the error.



Information

More information about LED signaling

The exact description for evaluating the LED signal displayed is available in the section "Diagnostics" > ... > "LED Signaling".

4. Start the "**WAGO Ethernet Settings**" program.
5. Select the **Date and Time** tab.
6. Click on the **[Apply]** button.

Set the system time using the Web-based Management-System

1. Launch a Web browser (e.g., MS Internet Explorer or Mozilla) and enter in the address bar the IP address you have assigned to your fieldbus node.
2. Click **[Enter]** to confirm.
The WBM start page is displayed.
3. Select "Clock" in the left navigation bar.
4. Enter your user name and password in the displayed query dialog box (default: user = "admin", password = "wago" or: user = "user", password = "user"). The WBM page "Clock" is displayed.
5. Set the current time and date values, as well as the time zone deviation in the input fields, and select the desired option for the display and Daylight Saving Time (DST).
6. Click on **[SUBMIT]** to apply the changes in your fieldbus node.
7. Restart the fieldbus node to apply the settings of the Web interface.

8.8 Restoring Factory Settings

To restore the factory settings, proceed as follows:

1. Switch off the supply voltage of the fieldbus node.
2. Connect the communication cable 750-920 or 750-923 respectively the *Bluetooth*® Adapter 750-921 to the service interface of the head station of the fieldbus node and to your computer.
3. Switch on the supply voltage of the fieldbus node.
4. Start the **WAGO-ETHERNET-Settings** program.
5. In the top menu bar, select **[Factory Settings]** and click **[Yes]** to confirm.

A restart of the fieldbus node is implemented automatically. The start takes place with the default settings.

9 Configuring via the Web-Based Management System (WBM)

An integrated Web server can be used for configuration and administration of the device. The HTML pages together, they are referred to as the Web-based Management System (WBM).

The WBM pages saved internally provide current information about the configuration and status of the device.

The configuration of the device can be changed via the special configuration pages. Authentication is required for this.

Also HTML pages created by yourself can be save via the implemented file system.



Note

After changes to the configuration, a restart may be necessary!

In order for changed configuration settings to take effect, it may be necessary for you to perform a system restart after your changes. This is then indicated in the description text on the respective WBM pages.

9.1 WBM User Groups

For authentication, 3 different password-protected user authorization groups are provided as standard:

Table 45: WBM User Groups

User Group	Default Password	Access Rights
admin	wago	Read/write access to all WBM pages as well as passwords modification and CODESYS application download, if this is enabled for CODESYS (WBM page "Administration"> "Security Settings"> "Enable CODESYS port authentication")
user	user	Read/write access to all WBM pages, but no write authorization on WBM-page "Administration"
guest	guest	Read only

9.2 Open WBM

1. To open the WBM, launch a Web browser.
2. Enter the IP address of the fieldbus coupler/controller in the address bar.
3. Click **[Enter]** to confirm.
The start page of WBM loads.
4. Select the link to the desired WBM page in the left navigation bar.

The first time a configuration page is called, a login dialog appears

5. Enter your user name and password in the query dialog (default: user = "admin", password = "wago" or user = "user", password = "user").
The corresponding WBM page is loaded.

6. Make the desired settings.
7. Click **[SUBMIT]** to confirm your changes or click **[UNDO]** to discard the changes.

At the first confirmation via the **[SUBMIT]** button, a login dialog appears again. Proceed as described under point 5.

8. To apply the settings, you may have to reboot afterwards if this is indicated in the description text on the respective WBM page.
You restart the system using WBM page "Administration", button **[SOFTWARE RESET]**.

9.3 WBM Pages

You can access the available WBM pages via the links given in the navigation bar on the left side.

The integrated configuration pages are following described.

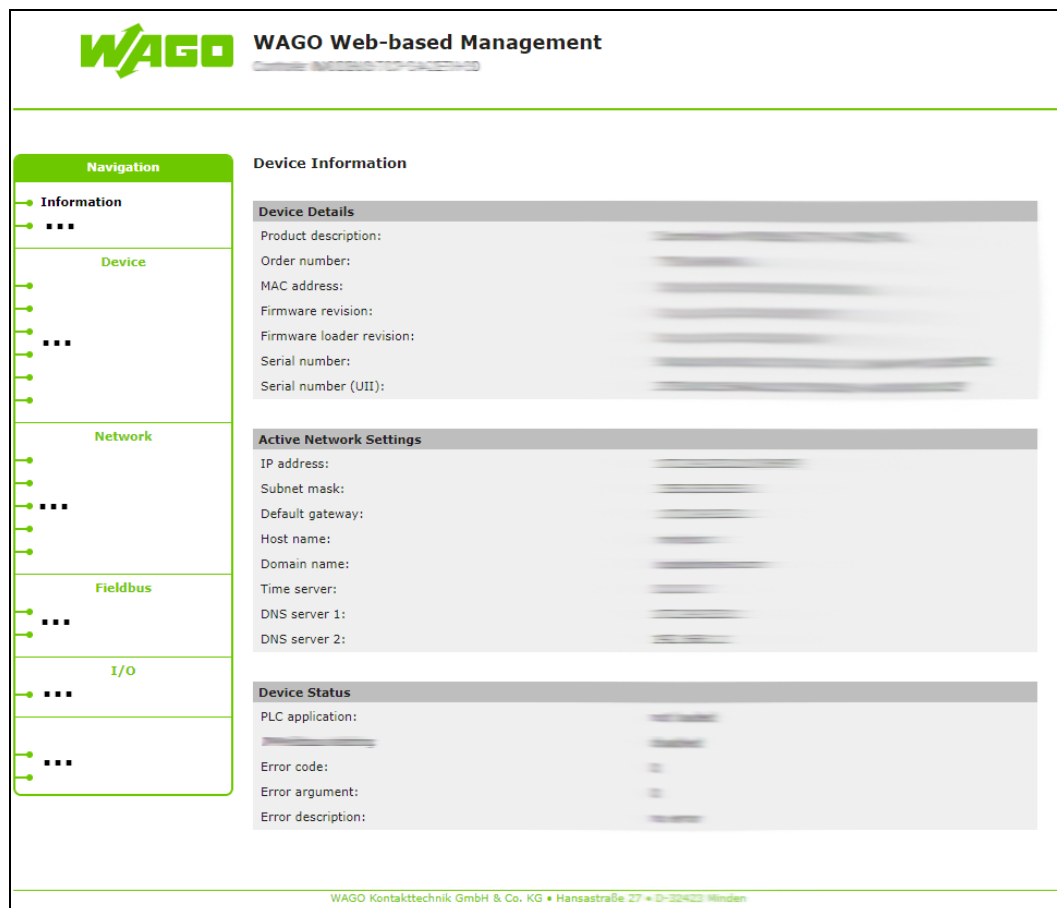


Figure 47: Example for a WBM page structure (simplified representation)

9.4 Information

The WBM page “Information” contains an overview of all important information about your fieldbus coupler.

Table 46: WBM Page “Information”

Device details			
Entry	Default	Value (example)	Description
Product description	Fieldbus Coupler Modbus TCP; Generation 4, Extreme		Produkt description
Order number	750-362/0040-0000		Order number
Mac address	0030DEXXXXXX	0030DE000006	Hardware MAC address
Firmware revision	kk.ff.bb(rr)	01.01.14(01)	Firmware revision number (kk = compatibility, ff = functionality, bb = bugfix, rr = revision)
Firmware loader revision	kk.ff.bb(rr)	01.03.01(03)	Firmware loader revision number (kk = compatibility, ff = functionality, bb = bugfix, rr = revision)
Serial number	—	“ ”	Serial number of device (manufacturer-specific identification of device)
Serial number (UII)	—	“ ”	„Unique Item Identifier“ (world wide unique identification of device)

Active Network Settings			
Entry	Default	Value (example)	Description
IP address	0.0.0.0	172.29.233.123	IP address, Type of IP address assignment
Subnet mask	255.255.255.0	255.0.0.0	Subnet mask
Default gateway	0.0.0.0	192.168.2.1	Gateway
Host name	0030DEXXXXXX	0030DE000000	Host name
Domain name	—	—	Domain name (not assigned here)
Time server	0.0.0.0	0.0.0.0	Address of Time server
DNS server 1	0.0.0.0	0.0.0.0	Address of first DNS server
DNS server 2	0.0.0.0	0.0.0.0	Address of second DNS server

Module Status			
Entry	Default	Value (example)	Description
State Modbus Watchdog	Disabled	Disabled	Status of Modbus Watchdog
Error Code	0	10	Error code
Error Argument	0	5	Error argument
Error Description	no error	Missmatch in CODESYS IO- configuration	Error description

9.5 Administration

Use the “Administration” WBM page to set configuration options for basic administration purposes, such as boot behavior, authentication, and SSL certificate.

These configuration options are stored in non-volatile memory when the **[SUBMIT]** button is pressed. Changes to the configuration options take effect after the next power-on cycle or software reset.

Note



Changing the passwords requires administrator rights and software reset!

You can only change the passwords as an administrator with the user rights "admin" and the associated password.

Press the **[Software Reset]** button to restart the software for the setting changes to take effect.

Note



Note password restrictions!

The following restriction is applied for passwords:

- Max. 32 characters inclusive special characters.

Note



Renew access after software reset!

If you initiate a software reset on this page, then the fieldbus coupler/controller starts with the configurations previously loaded into the EEPROM and the connection to the browser is interrupted.

If you changed the IP address previously, you have to use the changed IP address to access the device from the browser.

You have not changed the IP address and performed other settings; you can restore the connection by refreshing the browser.

Table 47: WBM Page “Administration”

Security Settings		
Entry	Default	Description
Enable web-server authentication	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/> Enable password protection to access the Web interface
		<input type="checkbox"/> Disable password protection to access the Web interface

User Settings		
Entry	Default	Description
User	guest	Select user permissions according to the default user group (→ see Chapter “WBM User Groups”).
Password	-	Enter desired password (max. 32 characters inclusive special characters).
Confirm Password	-	Enter desired password again to confirm.

*) The following default groups exist:

User: admin	Password: wago
User: user	Password: user
User: guest	Password: guest

SSL Certificates			
Entry	Button	Status (Example)	Description
Server certificate incl. private key	[UPLOAD]	NO FILE	Select and load the file with the server certificate and user key for secure Web server communication (HTTPS protocol) onto the device. The server certificate must be in *.pem, *.cer or *.crt format and contain the private key of the device.
Root certificate (CA)	[UPLOAD]	NO FILE	Select and load the file with the SSL root certificate onto the device. The root certificate must be in *.pem, *.cer or *.crt format.
Upload and installation status	-	Ready	Download and install status indicator
-	[INSTALL]	-	Installs the SSL server and/or root certificate previously loaded on the device and replaces the existing SSL certificates.
-	[DOWNLOAD]	-	Downloads the SSL root certificate stored in the device to the local PC.

Button	Description
[SOFTWARE RESET]	Restart the software.
[RESTORE SETTINGS]	Reset the device to the delivery status. NOTICE Data will be deleted! All user settings and user-specific files and an existing boot application (only for controllers) are deleted.

9.6 System Status

On the WBM "System Status" page, you can collect status information about the system in log files, save it and make settings for it.

These configuration options are saved in non-volatile memory when the **[SUBMIT]** button is pressed.

Changes to the configuration options take effect after the next power-up cycle or software reset.

You can use the icons to customize the view of the sections with the log entries:

- **[+]** Expand
- **[-]** Minimize
- **[↻]** Update

NOTICE

Rapid aging of the internal storage medium!

Note, when the log output is activated on the internal file system, excessive log output leads to faster aging of the storage medium.

In addition, by lowering the log level this is also favored.

Therefore You should only use the log output in a targeted manner (troubleshooting / support case) or use external / exchangeable storage media (if supported by the device).

Table 48: WBM Page "System Status"

Device details		
Entry	Default	Description

Log storage threshold [%]	80	(0 ... 100%, 0 = disable) Defines the limit value for the fill level of the log memory in%.
Network log level	INFO	(INFO, WARNING, ERROR, DEBUG) Specifies (together with the "File log level" option) the threshold for the log outputs on the network. This setting affects the log messages that are sent to the syslog server.
File log level	INFO	(INFO, WARNING, ERROR, DEBUG) Specifies (together with the "Network log level" option) the threshold for the log outputs for storage on the file system. This setting affects the log messages that are stored in log files.

Button	Description
[DOWNLOAD]	Downloads the saved log files as a single merged file (CSV format).
[DELETE]	Deletes the log files stored on the device. A possibly existing warning regarding the filling level of the log memory is hereby reset (blink code).

System Log			
Entry	Default	Value (example)	Description
Time (UTC); Severity; Facility; Module; Description	-	20210322T073715; notice; user; PARAM; Configuration changed. ID = 3	Online logbook, shows the most recent log entries in chronologically descending order.

System Load			
Entry	Default	Value (example)	Description
Current CPU load	___%	17,3%	Shows the current CPU utilization in %.

System Memory			
Entry	Default	Value (example)	Description
Pool Name; Pool Size; Memory Available; Tasks Waiting; Task Name	-	SYSMEM; 33554432 31488620; 0; -	Shows the current memory usage. The display shows the internal status of the memory pools in RAM.

System Tasks			
Entry	Default	Value (example)	Description
Name; Priority; Preemptable; Time Slice; Stack Size; Status	-	DevDisc; 3; no; 0; 10240; suspend (event)	Displays the current task configuration. The display shows the internal status of the system tasks.

9.7 Clock

On the WBM "Clock" page, you make settings for the internal system time. Enter the current time and date here and select a time zone deviation, 12h or 24h display and automatic daylight saving time as required.

At start-up, the system time has to be synchronized with the computer's current time.

Note



System time will be reset when the controller is de-energized!

The head station 750-362/0040-0000 does not have a real-time clock. For this reason, the current system time will be reset when the controller is de-energized! After switching on the operating voltage, the system time starts at 01/01/2000 00:00:00 a.m. and has to synchronize with the computer's current time.

Note



Use a WAGO RTC module for time synchronization!!

You can use a WAGO 750-640 RTC Module for your node to utilize the actual encoded time (Real-time – RTC) in your higher-level control system.

Table 49: WBM Page „Clock“

Clock Settings			
Entry	Default	Value (example)	Description
Device local time (HH:MM:SS)	00:00:00	08:30:38	Set current time
Device local date (YYYY-MM-DD)	2000-01-01	2018-07-19	Set current date
Device time zone (+/- HH:MM)	0:00	+1:00	Set time zone offset from the Coordinated Universal Time (UTC)
Time display mode	<input checked="" type="radio"/> 24h		<input checked="" type="radio"/> Enable 24-hour display
			<input type="radio"/> Disable 24-hour display
	<input type="radio"/> 12h (AM/PM)		<input checked="" type="radio"/> Enable 12-hour display
			<input type="radio"/> Disable 12-hour display
Automatic daylight saving time (DST)	<input checked="" type="radio"/> off	<input type="radio"/>	<input checked="" type="radio"/> Disable manual summer/winter time
			<input type="radio"/> Enable manual summer/winter time
	<input type="radio"/> EU	<input checked="" type="radio"/>	<input checked="" type="radio"/> Enable automatic Daylight Saving Time (EU) (last Sunday in March, clocks are advanced from 02:00 AM to 03:00 AM / last Sunday in October, clocks are set back from 03:00 AM to 02:00 AM)
			<input type="radio"/> Disable automatic Daylight Saving Time (EU)
	<input type="radio"/> US	<input type="radio"/>	<input checked="" type="radio"/> Enable automatic Daylight Saving Time (US) (second Sunday in March, clocks are advanced from 02:00 AM to 03:00 AM / first Sunday in November, clocks are set back from 02:00 AM to 01:00 AM)
			<input type="radio"/> Disable automatic Daylight Saving Time (US)
	<input type="radio"/> AU	<input type="radio"/>	<input checked="" type="radio"/> Enable automatic Daylight Saving Time (AU) (first Sunday in October, clocks are advanced from 02:00 AM to 03:00 AM / first Sunday in April, clocks are set back from 03:00 AM to 02:00 AM)
			<input type="radio"/> Disable automatic Daylight Saving Time (AU)
DST current status	not active	not active	Status display for the current DST status

9.8 Miscellaneous

On the Miscellaneous WBM page, you can set configuration options for various features and compatibility options.

These configuration options are stored in non-volatile memory when the **[SUBMIT]** button is pressed. Changes to the configuration options take effect after the next power-on cycle or software reset.

Table 50: WBM Page "Miscellaneous"

Global Settings		
Entry	Default	Description
Autoreset on fatal error	<input type="checkbox"/>	<input checked="" type="checkbox"/> Enables an automatic software reset to be conducted when a system error occurs
		<input type="checkbox"/> Disables an automatic software reset to be conducted when a system error occurs
BootP request before static IP	<input type="checkbox"/>	<input checked="" type="checkbox"/> Automatically set the static IP address enabled. For this configuration, the fieldbus coupler/controller uses a statically configured IP address if the request via BootP fails. This process can take a few minutes. With the setting "DHCP" this function has no effect.
		<input type="checkbox"/> Automatically set the static IP address disabled. For this configuration, the IP address request via BootP is repeated in the event of error.
Non-adaptive local bus interval	<input type="checkbox"/>	<input checked="" type="checkbox"/> Enables a fixed sampling interval of the local bus and statically sets the pause time to 14 ms. As a result, possibly the sampling interval of the local bus is extended and more computing power is available for the PLC application.
		<input type="checkbox"/> Enables the dynamic sampling interval of the local bus (default). The pause time between two local bus cycles is dynamically adjusted. This shortens the sampling interval of the local bus and less computing power is available for the PLC application.
Local bus extension installed	<input type="checkbox"/>	<input checked="" type="checkbox"/> Indicates, that the bus extension (750-627/-628) is installed.
		<input type="checkbox"/> Indicates, that no bus extension is installed.

9.9 Storage Media

Information about the available storage devices and active drives which are currently mounted within the file system of the device is given on the "Storage Media" WBM page.

This page will be refreshed every 5 s.

This size information for the storage devices listed below are specified in units of 1 kB with 1 kB = 1024 Byte.

Table 51: WBM page "Storage Media"

Local Disks		
Entry	Value (Example)	Description
Drive Letter	A	Directory
Total Size [kB]	1050184 kB	Total size of the file system
Used Size [kB]	295560 kB	Used memory capacity
Free Size [kB]	754624 kB	Free memory capacity
File System	FAT	File system (File Allocation Table)

9.10 Update

Use the "Update" WBM page to update the firmware of the device. To do this, the associated firmware image is first selected from the PC's local file system and downloaded to the device. Afterwards, the update will be executed and the device will be restarted automatically.

After the firmware update, the WBM pages will also be updated, self-created HTML pages or settings will be remained save.



Note

Stop fieldbus application and finish FTP connections before the update !

Please ensure, that the superordinate fieldbus application has been stopped and possibly existing FTP connections has been finished before starting the update process. When the software reset is beeing executed, the connection to the web-based management will be lost and the web-page has to be reloaded.

Table 52: WBM Page "Update"

Firmware Selection / Upload			
Entry	Button	Value (example)	Description
Firmware image	[UPLOAD]	OK	Use this button to select the firmware image file (*.bin) on your local file system (PC) and upload this file onto the device.
Update Status	-	Verification of firmware image is done	Status display for the update.

9.11 Ethernet

Use the “Ethernet” WBM page to set the data transfer rate, the MAC address filter settings and bandwidth limit for each of the two switch ports for data transfer via Ethernet.

Table 53: WBM Page „Ethernet“

PHY Settings			
Entry	Default value	Description	
Enable port	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	Enable Port X1 or Port X2
		<input type="checkbox"/>	Disable Port X1 or Port X2
Enable auto-negotiation	<input checked="" type="radio"/>	<input checked="" type="radio"/>	Enable Autonegotiation for Port X1 or Port X2. Automatically handling the best possible transmission mode and baud rate with the communication partner.
		<input type="radio"/>	Enable Autonegotiation for Port X1 or Port X2.
10 MBit Half Duplex	<input type="radio"/>	Use a fixed transmission mode and baud rate for Port X1 or Port X2.	
10 MBit Full Duplex	<input type="radio"/>		
100 MBit Half Duplex	<input type="radio"/>		
100 MBit Full Duplex	<input type="radio"/>		
Enable Auto-MDI/MDI-X	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	Enable Auto-MDI/MDI-X for Port X1 or Port X2
		<input type="checkbox"/>	Disable Auto-MDI/MDI-X for Port X1 or Port X2
MDI	<input type="radio"/>	<input checked="" type="radio"/>	Transceiver of Port X1 or Port X2 sends on Tx wire pair.
MDI-X	<input type="radio"/>	<input checked="" type="radio"/>	Port X1 or Port X2 sends an Rx wire pair.

MAC Address Filter Settings			
Entry	Default value	Description	
Enable filter	<input type="checkbox"/>	<input checked="" type="checkbox"/>	Activate MAC address filter. Depending on the operating mode of the MAC address filter (whitelist / blacklist), the subsequently entered MAC addresses are blocked or permitted.
		<input type="checkbox"/>	Deactivate MAC address filter.
Filter mode	Whitelist <input checked="" type="radio"/>	<input checked="" type="radio"/>	Chose Whitelist. Only the following registered MAC addresses have network access to the fieldbus coupler/controller, others are blocked
	Blacklist <input type="radio"/>	<input type="radio"/>	Chose Blacklist. Only the following registered MAC addresses are blocked, others have network access to the fieldbus coupler/controller.
Allow WAGO devices	<input type="checkbox"/>	<input checked="" type="checkbox"/>	Activate MAC address filter. The WAGO devices with the MAC address 00:30:EN:XX:XX:XX always have network access to the fieldbus coupler/controller, independent of the other settings of the MAC address filter.
		<input type="checkbox"/>	Deactivate MAC address filter. Only devices whose MAC address is entered in the list have network access to the fieldbus coupler / controller. The settings of the MAC address filter apply.
MAC address 1	00:00:00:00:00:00	Filter for the first MAC address (hexadecimal).	
MAC address 2	00:00:00:00:00:00	Filter for the second MAC address (hexadecimal).	
MAC address 3	00:00:00:00:00:00	Filter for the third MAC address (hexadecimal).	
MAC address 4	00:00:00:00:00:00	Filter for the fourth MAC address (hexadecimal).	
MAC address 5	00:00:00:00:00:00	Filter for the fifth MAC address (hexadecimal).	

Switch Settings				
Entry	Default value			Description
Enable fast aging	<input type="checkbox"/>			<input checked="" type="checkbox"/> Enable "Fast Aging" "Fast Aging" ensures that the cache for the MAC addresses is cleared faster in the switch. This may be required if a redundancy system (e.g., using a Jet-Ring network or comparable technology) needs to be set up.
				<input type="checkbox"/> Disable "Fast Aging". The time to discard the cache entries is five minutes.
Enable port mirroring	<input type="checkbox"/>			<input checked="" type="checkbox"/> Enable port mirroring Port Mirroring is used for network diagnostics. Packets are mirrored from one port (mirror port) to another (sniffer port).
				<input type="checkbox"/> Disable port mirroring
Ethernet MTU	1500			Maximum packet size of a protocol, which can be transferred without fragmentation ("Maximum Transmission Unit" - MTU).
	Port 1 2 internal			
Input data rate limit	No limit ▼			The input limit rate limits network traffic when receiving. The rate is indicated in megabits or kilobits per second. If the limit is exceeded, packets are lost.
Output data rate limit	No limit ▼			The output limit rate limits network traffic when sending. The rate is indicated in megabits or kilobits per second. If the limit is exceeded, packets are lost.
Enable broadcast storm protection	<input type="checkbox"/>	<input type="checkbox"/>		<input checked="" type="checkbox"/> Activate broadcast storm protection. The maximum number of incoming broadcast telegrams is limited and packets affected by the limitation are discarded.
				<input type="checkbox"/> Broadcast storm protection disabled.
Sniffer Port	<input type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	Select the sniffer port the mirror port should be mirrored to.
Mirror Port	<input checked="" type="radio"/>	<input type="radio"/>	<input type="radio"/>	Select the mirror port which should be mirrored to the sniffer port.

Note



Set the MTU value for fragmentation only!

Only set the value for MTU, i.e., the maximum packet size between client and server, if you are using a tunnel protocol (e.g., 1452 for VPN) for ETHERNET communication and the packets must be fragmented.

Setting the value is independent of the transmission mode selected.

Note



Configure ETHERNET transmission mode correctly!

A fault configuration of the ETHERNET transmission mode may result in a lost connection, poor network performance or faulty performance of the fieldbus coupler/controller.



Note

All ETHERNET ports cannot be disabled!

Both ETHERNET ports can be switched off. If both ports are disabled and you press **[SUBMIT]**, the selection is not applied and the previous values are restored.

9.12 Protocols

Use the "Protocols" WBM page to enable or disable ports for the services available.

Note



Close any ports and services that you do not need!

Unauthorized persons may gain access to your automation system through open ports.

To reduce the risk of cyber attacks and, thus, enhance your cyber security, close all ports and services in the control components (e.g., Port 6626 for WAGO I/O-CHECK, Port 2455 for CODESYS 2 and Port 11740 for **e!COCKPIT**) not required by your application.

Only open ports and services during commissioning and/or configuration.

Table 54: WBM page „Protocols“

Protocol Settings		
Entry	Default Value	Description
FTP (Port 21)	<input type="checkbox"/>	<input checked="" type="checkbox"/> Enable "File Transfer Protocol"
		<input type="checkbox"/> Disable "File Transfer Protocol"
SFTP (Port 22)	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/> Enable "SSH File Transfer Protocol"
		<input type="checkbox"/> Disable "SSH File Transfer Protocol"
HTTP (Port __)	80 <input checked="" type="checkbox"/>	Port number setting for HTTP (1 ... 65535)
		<input checked="" type="checkbox"/> Disable "Hypertext Transfer Protocol"
		<input type="checkbox"/> Enable "Hypertext Transfer Protocol over SSL-encrypted connection"
HTTPS (Port 443)	<input type="checkbox"/>	<input checked="" type="checkbox"/> Disable "Hypertext Transfer Protocol over SSL-encrypted connection"
		<input type="checkbox"/> Enable "File Transfer Protocol"
SNTP (Port 123)	<input type="checkbox"/>	<input checked="" type="checkbox"/> Enable "Simple Network Time Protocol"
		<input type="checkbox"/> Disable "Simple Network Time Protocol"
SNMP (Port 161, 162)	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/> Enable "Simple Network Management Protocol"
		<input type="checkbox"/> Disable "Simple Network Management Protocol"
Modbus UDP (Port 502)	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/> Enable Modbus-UDP protocol
		<input type="checkbox"/> Disable Modbus-UDP protocol
Modbus TCP (Port 502)	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/> Enable Modbus-TCP protocol
		<input type="checkbox"/> Disable Modbus-TCP protocol
WAGO service protocol (Port 6626)	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/> Enable WAGO services
		<input type="checkbox"/> Disable WAGO services
Syslog UDP (Port 514)	<input type="checkbox"/>	<input checked="" type="checkbox"/> Enable Syslog protocol (via UDP)
		<input type="checkbox"/> Disable Syslog protocol (via UDP)

9.13 SNMP

On the HTML pages „SNMP“, you can perform the settings for the Simple Network Management Protocol (SNMP v1/v2c and v3).

SNMP is a standard for device management within a TCP/IP network. The Simple Network Management Protocol (SNMP) is responsible for transporting the control data that allows the exchange of management information, the status and statistic data between individual network components and a management system.

The fieldbus coupler supports SNMP in versions 1, 2c and 3.

The SNMP of the ETHERNET TCP/IP coupler includes the general MIB according to RFC1213 (MIB II).

SNMP is processed via port 161. The port number for SNMP traps (agent messages) is 162.

Note



Enable port 161 and 162 to use SNMP!

Enable ports 161 and 162 in the WBM in menu “port”, so that the fieldbus coupler can be reached via SNMP. The port numbers cannot be modified.

Note



Modify parameter via WBM or SNMP objects!

However, parameters that can be set on the WBM pages can also be changed directly by the appropriate SNMP objects.

Information



Additional Information:

Additional information for SNMP, the Management Information Base (MIB) and traps (event messages via SNMP) may be obtained from section “Fieldbus Communication” > ... > “SNMP (Simple Network Management Protocol).”

Note that the settings for SNMPV1/V2c and SNMPV3 are separate from each other: The different SNMP versions can be activated or used in parallel or individually on a fieldbus coupler.

9.13.1 SNMP v1/v2c

The SNMP version 1/2c represents a community message exchange. The community name of the network community must thereby be specified.

Table 55: WBM Page "SNMP v1/v2"

SNMP Settings		
Entry	Value (Default)	Description
Description	<u>FC Modbus TCP G4 XTR 750-362/0040-0000</u>	Device description (sysDescription)
Physical location	<u>LOCAL</u>	Location of device (sysLocation)
Contact address	<u>support@wago.com</u>	E-mail contact address (sysContact)

SNMP v1/v2c Manager Settings		
Entry	Default value	Description
Enable protocol	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/> Activating SNMP Version 1/2c
		<input type="checkbox"/> Deactivating SNMP-Version 1/2c
Local community name	<u>public</u>	used community name

SNMP v1/v2c Trap Receiver 1 Settings		
Entry	Default value	Description
Trap receiver	<u>0.0.0.0</u>	IP address of 1. used SNMP manager
Community name	<u>public</u>	1. Community name of the network community used
Trap version	v1 <input checked="" type="radio"/>	v1 <input checked="" type="radio"/> v2 <input type="radio"/> Activating Traps Version 1
	v2 <input type="radio"/>	v1 <input type="radio"/> v2 <input checked="" type="radio"/> Activating Traps Version 2

SNMP v1/v2c Trap Receiver 2 Settings		
Entry	Default value	Description
Trap receiver	<u>0.0.0.0</u>	IP address of 2. used SNMP manager
Community name	<u>public</u>	2. Community name of the network community used
Trap version	v1 <input checked="" type="radio"/>	v1 <input checked="" type="radio"/> v2 <input type="radio"/> Activating Traps Version 1
	v2 <input type="radio"/>	v1 <input type="radio"/> v2 <input checked="" type="radio"/> Activating Traps Version 2

9.13.2 SNMP V3

In SNMP version 3, exchanging messages is user-related. Each device, that knows the passwords set via WBM, may read or write values from the fieldbus coupler.

In SNMP v3, user data from SNMP messages can also be transmitted in encoded form. This is why SNMP v3 is often used in safety-related networks.

Via this WBM page "SNMP V3" two independent SNMPV3 users can be defined and activated (User 1 and User 2).

Table 56: WBM Page "SNMP V3"

SNMP v3 User 1 / 2 Settings		
Entry	Value (Example)	Description
Enable user	activate <input checked="" type="checkbox"/>	<input checked="" type="checkbox"/> Activating user 1 or 2
		<input type="checkbox"/> Deactivating user 1 or 2
Authentication type	None <input type="radio"/> MD5 <input checked="" type="radio"/> SHA1 <input type="radio"/>	None <input checked="" type="radio"/> MD5 <input type="radio"/> SHA1 <input type="radio"/> No encryption of the authentication
		None <input type="radio"/> MD5 <input checked="" type="radio"/> SHA1 <input type="radio"/> Encryption of the authentication with MD5
		None <input type="radio"/> MD5 <input type="radio"/> SHA1 <input checked="" type="radio"/> Encryption of the authentication with SHA1
Authentication name	Security Name	Enter the name, if the "Authentication type" MD5 or SHA1 has been selected
Authentication key (min. 8 characters)	Authentication Key	Enter the password with at least 8 characters, if "Authentication type" MD5 or SHA1 has been selected
Privacy enable (DES)	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/> Activate the DES encryption of the data
		<input type="checkbox"/> Deactivate the DES encryption of the data
Privacy key (min. 8 characters)	Privacy Key	Enter the password of at least 8 characters in the encryption with DES
Enable v3 notification/trap enable	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/> Activate the notification traps of the SNMP version 3
		<input type="checkbox"/> Deactivate the notification traps of the SNMP version 3
Notification receiver (IP address)	192.168.1.10	IP address of the notification manager

9.14 SNTP

On the WBM page “SNTP”, you can perform the settings for the “Simple Network Time Protocol”.

The SNTP client supports configuration of static time servers. Two additional servers may be assigned by dynamic network configuration (e. g. DHCP or BootP). The selection of the active time server used to synchronize the current time is done automatically by the SNTP client. The SNTP client queries all time servers listed below and determines the most precise server to synchronize the device clock with. This takes into account whether the respective time server can be reached and how short the transmission distance between the time server and the SNTP client is.

Table 57: WBM Page “SNTP”

SNMP Settings		
Entry	Value (Example)	Description
Protocol status	enabled	Display the protocol status. „enabled“ SNTP protocol ist activated. „disabled“ SNTP protocol ist deactivated.
Active time server	de.pool.ntp.org	Hostname or IP address of the active time server, which is currently used to synchronize the time.

SNTP Client Settings		
Entry	Value (Example)	Description
Server update interval [s] (60 ... 65535 s)	3600	Polling interval for synchronizing the device clock with the active time server.
First time server	de.pool.ntp.org	Host name or IP address of the first user-defined time server.
Second time server	0.0.0.0	Host name or IP address of the second user-defined time server.
Additional time servers	- -	List of up to 2 time servers dynamically allocated via BootP or DHCP.

9.15 TCP/IP

You can configure network addressing and network identification on the “TCP/IP” WBM page.



Note

Set the DIP switch to “0” and enable static IP configuration source!

Before you change parameters on this page, set the DIP switch to value “0” and enable the option “IP configuration source static”!

If these conditions are not met, the DIP switch settings are applied instead.

Table 58: WBM page „TCP/IP“

Network Settings (non-volatile)			
Entry	Default Value	Value (Example)	Description
IP configuration source	<input type="radio"/> BootP	<input type="radio"/>	<input checked="" type="radio"/> Activate “Bootstrap Protocol”.
			<input type="radio"/> Deactivate “Bootstrap Protocol”.
	<input checked="" type="radio"/> DHCP	<input checked="" type="radio"/>	<input checked="" type="radio"/> Activate “Dynamic Host Configuration Protocol”.
			<input type="radio"/> Deactivate “Dynamic Host Configuration Protocol”.
	<input type="radio"/> static	<input type="radio"/>	<input checked="" type="radio"/> Use IP address from EEPROM.
			<input type="radio"/> Do not use IP address from EEPROM.
IP address	0.0.0.0	192.168.1.180	Enter IP address.
Subnet mask	255.255.255.0	255.255.255.0	Enter subnet mask.
Default gateway	0.0.0.0	0.0.0.0	Enter gateway.
Host name	0030DEXXX XX	0030DE000000	Enter host name.
Domain name	localdomain.co m		Enter domain name.
DNS server 1	0.0.0.0	0.0.0.0	Enter IP address of the first DNS server.
DNS server 2	0.0.0.0	0.0.0.0	Enter optional IP address of the second DNS server.
DIP switch base IP address	192.168.1	192.168.5	Network address for the configuration of the IP address with DIP switch.
Syslog UDP server	0.0.0.0	192.168.1.96	Host name or IP address of the Syslog UDP server
IP Fragment TTL [s] (max.255)	60	60	Life of a packet (Time to Live).

9.16 Modbus

Use the "Modbus" WBM page to specify the settings for the Modbus protocol.

Table 59: WBM page "MODBUS"

Modbus UDP Multicast Address Setup		
Entry	Default value	Description
Enable multicast addressing	<input type="checkbox"/>	<input checked="" type="checkbox"/> Enable Multicast for Modbus UDP transmission. In addition to its own IP address, the fieldbus coupler receives Modbus commands for the following registered MCAST addresses.
		<input type="checkbox"/> Multicast for Modbus UDP transmission is not enabled. The fieldbus coupler receives Modbus commands only for the own IP address.
Do not reply to Modbus UDP multicast messages	<input type="checkbox"/>	<input checked="" type="checkbox"/> The reply to Modbus UDP multicast messages is deactivated.
		<input type="checkbox"/> The reply to Modbus UDP multicast messages is activated.
MCAST address 1 ... 5:	0.0.0.0	Multicast address 1... 5, for the multicast will be enabled. The valid address range is shown in the WBM. Multiple assigned addresses are not valid.



Note

Multicast function only active with a valid MCAST address!

The multicast function is only active with a valid MCAST address.

If you activate the "**Enable Multicast**" function, it is therefore necessary to always enter an MCAST address that is not equal to 0.0.0.0. Otherwise, clicking on the **[SUBMIT]** button automatically deactivates the function again.

If the "**Enable Multicast**" function is already enabled with valid addresses, then you can no longer describe these MCAST address fields with invalid addresses, because when clicking on the **[SUBMIT]** button, they are reset to the previously valid addresses. The function "**Enable Multicast**" remains active.

Modbus Configuration Registers		
Entry	Default value	Description
Range 0x1029 – 0x1037 0x2040 – 0x2043	Enabled <input checked="" type="checkbox"/> <input checked="" type="checkbox"/>	<input checked="" type="checkbox"/> Enable Modbus configuration register range.
		<input type="checkbox"/> Disable Modbus configuration register range.

Connection Watchdog		
Entry	Default	Description
Connection timeout value (x 100 ms)	600	Monitoring period for TCP links. After the completion of this period without any subsequent data traffic, the TCP connection is closed.

Modbus Watchdog		
Entry	Default	Description
Status of Modbus watchdog	disabled	"disabled" – Watchdog is disabled "enabled [running]" – Watchdog is activated, Timeout monitoring is running "enabled [expired]" – Watchdog is activated, Timeout occurred
Watchdog type	Standard <input checked="" type="radio"/>	The watchdog can only be activated for the first time by writing to register 0x1001 or 0x1003.
	Alternative <input type="radio"/>	The watchdog is activated for the first time with each function code that is enabled in the coding mask (watchdog trigger mask).
Watchdog timeout value (x 100 ms)	100	Monitoring period for Modbus links. After the completion of this period without receiving a Modbus telegram, the physical outputs are set to "0".
Close modbus socket after watchdog timeout	<input type="checkbox"/>	<input type="checkbox"/> The Modbus TCP connection remains opened when the watchdog timeout has expired.
		<input checked="" type="checkbox"/> The Modbus TCP connection is closed when the watchdog timeout has expired.
Watchdog trigger mask (FC1 to FC16)	0xFFFF	Coding mask for certain Modbus telegrams (Function Code FC1 ... FC16)
Watchdog trigger mask (FC17 to FC32)	0xFFFF	Coding mask for certain Modbus telegrams (Function Code FC17 ... FC32)

9.17 Modbus Mapping

The WBM page “Modbus Mapping” contains an overview of the current Assignment of the Modbus registers for the I/O modules plugged into the local bus as well as the general division of the register areas.

Table 60: WBM page “Modbus Mapping”

I/O Mapping			
Modbus Register [word addresses]			
Entry	Default	Value (example)	Description
I/O Module	1 ... n	1	Position of the I/O module on the local bus, starting with 1 behind the front-end station
Order Number	750-XXX	750-4xx	WAGO item number of the I/O module
Input (RO)	-	2.0 - 2.7	Address of the input data in format <SR>[.<SO>] - <ER>[.<EO>], with: <SR> = Start register address <ER> = End register address <SO> = Start bit offset inside the start register <EO> = End bit offset inside the end register The bit offset is only specified for digital I/O modules
output (WO)	-	2.0 - 2.7	Address of the output data in format <SR>[.<SO>] - <ER>[.<EO>], with: <SR> = Start register address <ER> = End register address <SO> = Start bit offset inside the start register <EO> = End bit offset inside the end register The bit offset is only specified for digital I/O modules
output (RW)	-	514.0 - 514.7	Address of the read back output data in format <SR>[.<SO>] - <ER>[.<EO>], with: <SR> = Start register address <ER> = End register address <SO> = Start bit offset inside the start register <EO> = End bit offset inside the end register The bit offset is only specified for digital I/O modules
I/O access	-	RO	Read/write rights on the I/O module: RO = Read only, RW = Read and write

Modbus Coils [bit addresses]			
Entry	Default	Value (example)	Description
I/O Module	1 ... n	2	Position of the digital I/O module on the local bus, starting with 1 behind the front-end station
Order Number	750-XXX	750-5xx	WAGO item number of the digital I/O module
Input (RO)	-	0 - 7	Bit address of the digital input data in format [<SO>] – [<EO>], with: <SO> = Start bit offset <EO> = End bit offset
output (WO)	-	0 - 7	Bit address of the digital output data in format [<SO>] – [<EO>], with: <SO> = Start bit offset <EO> = End bit offset
output (RW)	-	512 - 519	Bit address of the read back digital output data in format [<SO>] – [<EO>], with: <SO> = Start bit offset <EO> = End bit offset
I/O access	-	RW	Read/write rights on the I/O module: RO = Read only, RW = Read and write

General Modbus Mapping			
Input Register (FC3, FC4, FC23)			
Entry	Default	Value (example)	Description
Modbus address	0xXXXX – 0xYYYY	0x0000 – 0x00FF	Register address area of the associated input data register
Description	-	physical input data	Description of the content for the specified register address range

Output Register (FC6, FC7, FC22, FC23)			
Entry	Default	Value (example)	Description
Modbus address	0xXXXX – 0xYYYY	0x0000 – 0x00FF	Register address area of the associated output data register
Description	-	physical output data	Description of the content for the specified register address range

Digital Input (FC1, FC2)			
Entry	Default	Value (example)	Description
Modbus address	0xXXXX – 0xYYYY	0x0000 – 0x01FF	Coil address area of the associated digital input data register
Description	-	physical input data	Description of the content for the specified coil address range

Digital Output (FC5, FC15)			
Entry	Default	Value (example)	Description
Modbus address	0XXXXX – 0YYYYY	0x0000 – 0x01FF	Coil address area of the associated digital output data register
Description	-	physical output data	Description of the content for the specified coil address range

9.18 I/O Config

Click the link "I/O config" to view the number of modules that are connected to your hardware.

The data in the second line are not relevant for the present fieldbus coupler, because no I/O configuration will be load onto devices which have no runtime system (PLC). Therefore you always find the value "0" for the number of modules in the I/O configuration.

Table 61: WBM page „I/O Data“

Configuration summary		
Entry	Value (Example)	Description
Number of modules on terminal bus	6	Number of I/O modules (hardware)
Number of modules in I/O configuration	0	Number of I/O modules in the I/O configuration (not relevant).

Button	Description
[SAVE CONFIG]	With this button, the current status of the I/O configuration on the local bus is read in, displayed and stored on the device.

I/O Mapping		
Entry	Value (Example)	Description
Position	1	Position of the I/O module in the hardware
Module	750-5xx M001Ch1 M001Ch2	Product number of the integrated I/O module M = module, 001 = position 1, Ch1 = channel 1 M = module, 002 = position 2, Ch2 = channel 2
Type	8DO	I/O module type, e.g. 8DO (8 Channel Digital Output Module)
Assigned Fieldbus	Fieldbus 1	Mapping via fieldbus 1

10 Diagnostics

10.1 LED Signaling

For on-site diagnostics, the fieldbus coupler has several LEDs that indicate the operational status of the fieldbus coupler or the entire node (see following figure).

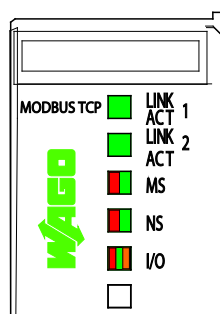


Figure 48: Display Elements

The diagnostics displays and their significance are explained in detail in the following section.

The LEDs are assigned in groups to the various diagnostics areas:

Table 62: LED Assignment for Diagnostics

Diagnostics area	LEDs
Fieldbus status	<ul style="list-style-type: none"> • LINK ACT Port 1 • LINK ACT Port 2 • MS • NS
Node status	<ul style="list-style-type: none"> • I/O

10.1.1 Evaluating Fieldbus Status

The health of the ETHERNET Fieldbus is signaled through the top LED group ('LINK ACT 1, 2', 'MS', and 'NS').

The two-colored LEDs 'MS' (module status) and 'NS' (network status) are used to display the status of the system and the fieldbus connections.

Table 63: Fieldbus Diagnostics – Solution in Event of Error

LED Status	Meaning	Solution
LINK ACT 1, 2		
green	The fieldbus node is connected to the physical network.	-
green flashing	The fieldbus node sends and receives ETHERNET telegrams	-
off	The fieldbus node is not connected to the physical network.	1. Check the fieldbus cable.
MS		
green	Normal operation	-
green flashing	The system is not yet configured	-
red	The system indicates a not remediable error	1. Restart the device by turning the power supply off and on again. 2. If the error still exists, please contact the I/O support.
red flashing	The system indicates a remediable error	1. Check the display of the I/O LED (see chapter "Evaluating Node Status – I/O LED (Blink Code Table)"). 2. If the error cannot be localized via the status of the I/O LED, please contact the I/O support.
off	No system supply voltage	1. Check the supply voltage.
NS		
green	At least one Modbus TCP connection is developed.	-
green flashing	No Modbus TCP connection.	-
red	The system indicates a double IP-address in the network	1. Use an IP address that is not used yet.
red flashing	At least one Modbus TCP connection announced a Timeout, where the controller functions as target.	1. Restart the device by turning the power supply off and on again. 2. Develop a new connection.
off	No IP address is assigned to the system.	1. Assign to the system an IP address by BootP, DHCP or the Ethernet Settings tool.

10.1.2 Evaluating Node Status – I/O LED (Blink Code Table)

The communication status between fieldbus coupler/controller and the I/O modules is indicated by the I/O LED.

Table 64: Node Status Diagnostics – Solution in Event of Error

LED Status	Meaning	Solution
I/O		
green	The fieldbus node is operating correctly.	Normal operation.
orange flashing	Start of the firmware. 1 ... 2 seconds of rapid flashing indicates start-up.	-
red	Fieldbus coupler/controller hardware defect	Replace the fieldbus coupler/controller.
red flashing	Flashing with approx. 10 Hz indicates the initialization of the local bus or a local bus error.	Note the following flashing sequence.
red cyclical flashing	Up to three successive flashing sequences indicate local bus errors. There are short intervals between the sequences.	Evaluate the flashing sequences based on the following blink code table. The blinking indicates an error message comprised of an error code and error argument.
off	No data cycle on the local bus.	The fieldbus coupler/controller supply is off.

Device boot-up occurs after turning on the power supply. The I/O LED flashes orange.

Then the local bus is initialized. This is indicated by flashing red at 10 Hz for 1 ... 2 seconds.

After a trouble-free initialization, the I/O LED is green.

In the event of an error, the I/O LED continues to blink red. Blink codes indicate detailed error messages. An error is indicated cyclically by up to 3 flashing sequences.

After elimination of the error, restart the node by turning the power supply of the device off and on again.

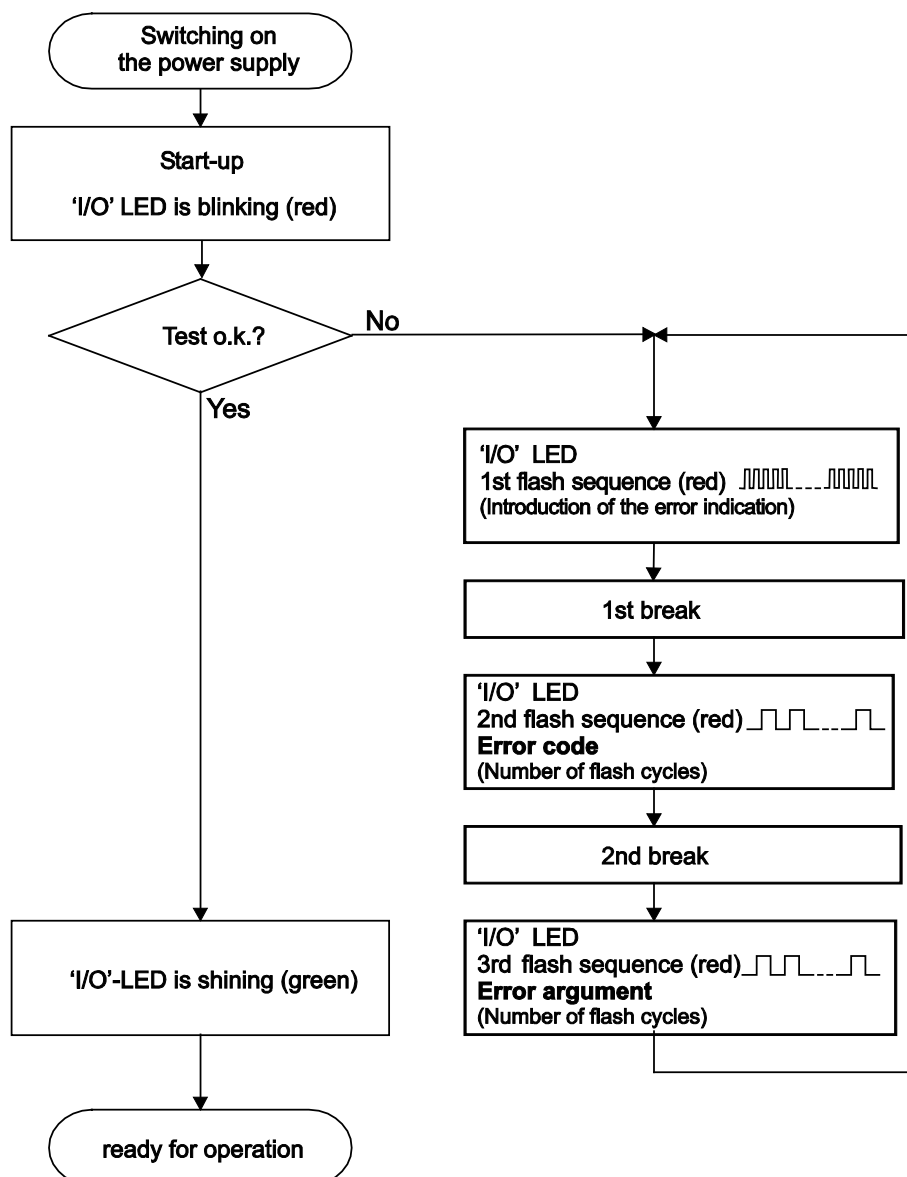


Figure 49: Node Status – I/O LED Signaling

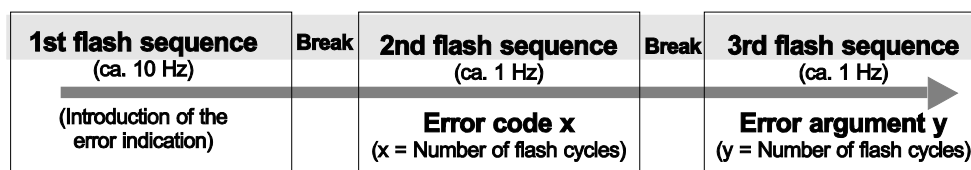


Figure 50: Error Message Coding

Example of a module error:

- The I/O LED starts the error display with the first flashing sequence (approx. 10 Hz).
- After the first break, the second flashing sequence starts (approx. 1 Hz): The I/O LED blinks four times.
Error code 4 indicates “data error internal data bus”.

- After the second break, the third flashing sequence starts (approx. 1 Hz):
The I/O LED blinks twelve times.
Error argument 12 means that the local bus is interrupted behind the twelfth I/O module.

The thirteenth I/O module is either defective or has been pulled out of the assembly.

Table 65: Blink code- table for the I/O LED signaling, error code 1

Error code 1: "Hardware and configuration error"		
Error Argument	Error Description	Solution
1	Overflow of the internal buffer memory for the attached I/O modules.	<ol style="list-style-type: none"> 1. Turn off the power supply of the node. 2. Reduce the number of I/O modules. 3. Turn on again the power supply of the node. 4. If the error persists, replace the head station.
2	I/O module(s) with unknown data type	<ol style="list-style-type: none"> 1. Determine the faulty I/O module. First turn off the power supply of the node. 2. Plug the end module into the middle of the node. 3. Turn on again the power supply of the node. 4. - LED continues to flash? - Turn off the power supply of the node and plug the end module into the middle of the first half of the node (toward the head station). - LED not flashing? - Turn off the power supply of the node and plug the end module into the middle of the second half of the node (away from the head station). 5. Turn on again the power supply of the node. 6. Repeat the procedure described in step 4 while halving the step size until the faulty I/O module is detected. 7. Replace the faulty I/O module. 8. Contact I/O support and inquire about a firmware update for the head station.
3	Invalid check sum in the parameter area of the head station.	<ol style="list-style-type: none"> 1. Turn off the power supply of the node. 2. Replace the head station. 3. Turn on again the power supply of the node.
4	Fault when writing in the serial EEPROM.	<ol style="list-style-type: none"> 1. Turn off the power supply of the node. 2. Replace the head station. 3. Turn on again the power supply of the node.
5	Fault when reading the serial EEPROM	<ol style="list-style-type: none"> 1. Turn off the power supply of the node. 2. Replace the head station. 3. Turn on again the power supply of the node.
6	The I/O module configuration after AUTORESET differs from the configuration determined the last time the head station was powered up.	<ol style="list-style-type: none"> 1. Restart the head station by turning the power supply off and on.
7	Invalid hardware-firmware combination.	<ol style="list-style-type: none"> 1. Turn off the power supply of the node. 2. Replace the head station. 3. Turn on again the power supply of the node.
8	Timeout during serial EEPROM access.	<ol style="list-style-type: none"> 1. Turn off the power supply of the node. 2. Replace the head station. 3. Turn on again the power supply of the node.

Table 65: Blink code- table for the I/O LED signaling, error code 1

Error code 1: "Hardware and configuration error"		
Error Argument	Error Description	Solution
9	Head station initialization error	<ol style="list-style-type: none"> 1. Turn off the power supply of the node. 2. Replace the head station. 3. Turn on again the power supply of the node.
10 ... 13	not used	
14	Maximum number of gateway or mailbox modules exceeded	<ol style="list-style-type: none"> 1. Turn off the power supply of the node. 2. Reduce the number of corresponding modules to a valid number. 3. Turn on again the power supply of the node.
15	Firmware loader was loaded from backup.	<ol style="list-style-type: none"> 1. Execute the last firmware update again. 2. If the error persists, contact I/O support.
16	Firmware was loaded from backup.	<ol style="list-style-type: none"> 1. Execute the last firmware update again. 2. If the error persists, contact I/O support.

Table 66: Blink Code Table for the I/O LED Signaling, Error Code 2

Error Code 2: „Process image exceeded“		
Error Argument	Error Description	Solution
1	Not used	-
2	Maximum process image size exceeded	<ol style="list-style-type: none"> 1. Turn off the power supply of the node. 2. Reduce number of I/O modules. 3. Turn on again the power supply of the node.
3	Process image generation error	<ol style="list-style-type: none"> 1. Turn off the power supply of the node. 2. Remove unsupported I/O modules. 3. Turn on again the power supply of the node.
4	Configuration error detected for output of log files	<ol style="list-style-type: none"> 1. Check the configuration settings on the WBM page "System Status".
5	Configured threshold ("Log storage threshold") exceeded for the log storage.	<ol style="list-style-type: none"> 1. Delete the log memory or increase the threshold value settings ("Log storage threshold") on the WBM page "System Status".
6	Error when accessing the log storage medium.	<ol style="list-style-type: none"> 1. Integrate the log medium or remove the write protection. 2. Close the log files that were opened via (S) FTP.
7	Error sending messages to the syslog server.	<ol style="list-style-type: none"> 1. Check whether the configured IP address is valid and can be reached (within the subnet). 2. Check whether the configured host name of the syslog server can be resolved (valid DNS configuration).

Table 67: Blink Code Table for the I/O LED Signaling, Error Code 3

Error Code 3: „Protocoll error, local bus“		
Error Argument	Error Description	Solution
-	Local bus communication defective, incorrect module not identifiable	<p>-- Are there power supply modules with the bus power supply (750-613) in the node? ---</p> <ol style="list-style-type: none"> 1. Check that these I/O modules are supplied correctly with power. 2. Determine this by the state of the associated status LEDs. --- Are all I/O modules connected correctly or are there any 750-613 I/O modules in the node? --- 3. Determine the faulty I/O module. First turn off the power supply of the node. 4. Plug the end module into the middle of the node. 5. Turn on again the power supply of the node. 6. - LED continues to flash? - Turn off the power supply of the node and plug the end module into the middle of the first half of the node (toward the head station). - LED not flashing? - Turn off the power supply of the node and plug the end module into the middle of the second half of the node (away from the head station). 7. Turn on again the power supply of the node. 8. Repeat the procedure described in step 4 while halving the step size until the faulty I/O module is detected. 9. Replace the faulty I/O module. 10. If there is only one I/O module left on the head station and the LED is flashing, either this I/O module or the head station is defective. 11. Replace the faulty component.

Table 68: Blink Code Table for the I/O LED Signaling, Error Code 4

Error Code 4: „Physical error, local bus“		
Error Argument	Error Description	Solution
-	Local bus data transmission error or interruption of the local bus at the head station	<ol style="list-style-type: none"> 1. Turn off the power supply of the node. 2. Plug in an I/O module with process data behind the head station. 3. Turn on again the power supply of the node. 4. Observe the error argument signaled. 5. --- Is no error argument indicated in the I/O LED? --- Replace the head station. 6. --- Is an error argument indicated by the I/O LED? --- 6. Determine the faulty I/O module. First turn off the power supply of the node. 7. Plug the end module into the middle of the node. 8. Turn on again the power supply of the node. 9. - LED continues to flash? - Turn off the power supply of the node and plug the end module into the middle of the first half of the node (toward the head station). - LED not flashing? - Turn off the power supply of the node and plug the end module into the middle of the second half of the node (away from the head station). 10. Turn on again the power supply of the node. 11. Repeat the procedure described in step 4 while halving the step size until the faulty I/O module is detected. 12. Replace the faulty I/O module. 13. If there is only one I/O module left on the head station and the LED is flashing, either this I/O module or the head station is defective. 14. Replace the faulty component.
n*	Interruption of the local bus behind the nth I/O module with process data.	<ol style="list-style-type: none"> 1. Turn off the power supply for the node. 2. Replace the (n+1) I/O module with process data or reduce the number of I/O modules until the (n+1) I/O module. 3. Turn the power supply on.

* The number of light pulses (n) indicates the position of the I/O module.
I/O modules without data are not counted (e.g., supply modules without diagnostics)

Table 69: Blink Code Table for the I/O LED Signaling, Error Code 5

Error Code 5: „Initialization error, local bus“		
Error Argument	Error Description	Solution
n*	Error in register communication during local bus initialization	<ol style="list-style-type: none"> 1. Turn off the power supply for the node. 2. Replace the (n+1) I/O module with process data or reduce the number of I/O modules until the (n+1) I/O module. 3. Turn the power supply on.

* The number of light pulses (n) indicates the position of the I/O module.
I/O modules without data are not counted (e.g., supply modules without diagnostics)

Table 70: Blink Code Table for the I/O LED Signaling, Error Code 6

Error Code 6: " Configuration error, node configuration"		
Error Argument	Error Description	Solution
1	Invalid MAC ID	<ol style="list-style-type: none"> 1. Turn off the power supply of the node. 2. Replace the head station. 3. Turn on again the power supply of the node.
2	Ethernet Hardware initialization error	<ol style="list-style-type: none"> 1. Restart the head station by turning the power supply off and on again. 2. If the error still exists, replace the head station.
3	TCP/IP initialization error	<ol style="list-style-type: none"> 1. Restart the head station by turning the power supply off and on again. 2. If the error still exists, replace the head station.
4	Network configuration error (no IP Address)	<ol style="list-style-type: none"> 1. Check the settings of DHCP/BootP server or if a static IP address is used.
5	Application protocol initialization error	<ol style="list-style-type: none"> 2. Restart the head station by turning the power supply off and on again. 3. If the error still exists, replace the head station.
6	Maximum process image size exceeded	<ol style="list-style-type: none"> 1. Turn off the power supply of the node. 2. Reduce number of I/O modules. 3. Turn on again the power supply of the node.
7	Double IP address in network	<ol style="list-style-type: none"> 1. Change configuration. Use another IP address, which is not yet present in network. 2. Restart the head station by turning the power supply off and on again.
8	Error when building the process image	<ol style="list-style-type: none"> 1. Turn off the power supply of the node. 2. Reduce number of I/O modules. 3. Restart the head station by turning the power supply off and on again. 4. If the error still exists, replace the head station.
9	Error when mapping the I/O modules to a fieldbus	<ol style="list-style-type: none"> 1. Check the file „io_config.xml“ on the head station.

Table 71: Blink Code Table for the I/O LED Signaling, Error Code 7

Error Code 7: „Not supported I/O module“		
Error Argument	Error Description	Solution
n	First not supported I/O module at position n	<ol style="list-style-type: none"> 1. Turn off the power supply for the node. 2. Replace the (n+1) I/O module with process data or reduce the number of I/O modules until the (n+1) I/O module. 3. Turn the power supply on.

Table 72: Blink Code Table for the I/O LED Signaling, Error Code 8 ... 11

Error Code 8 ... 11: - not used -		
Error Argument	Error Description	Solution
-	Not used	-

Table 73: Blink code table for I/O LED signaling, error code 12

Error code 12 "System Error"		
Error Argument	Error description	Solution
1	General error of the operating system	1. Restart the fieldbus node by turning the power supply off and on again. 3. If the error still exists, please contact the I/O Support.
2	General error of the file system	1. Reset the file system using "WAGO Ethernet Settings", button [Reset File System] in the menu above. 2. Restart the fieldbus node by turning the power supply off and on again. 3. If the error still exists, please contact the I/O Support.
3	Insufficient RAM memory	1. Reduce number of BACnet objects. 2. Restart the access function.

Table 74: Blink code table for I/O LED signaling, error code 13

Error code 13 – not used -		
Error Argument	Error description	Solution
-	Not used	-

10.2 Fault Behavior

10.2.1 Fieldbus Failure

Irrespective of the fieldbus protocol used, faults on the ETHERNET bus can lead to sporadic or permanent interruptions in the fieldbus communication.

This can show up e.g. through loss of telegrams, retransmissions or through a complete link failure.

A fieldbus and thus a connection failure occurs if the set time-out time of the watchdog has elapsed without being triggered by the higher-level controller.

The Modbus Watchdog monitors the Modbus communication running via the Modbus protocol. If the Modbus watchdog has been configured and activated, a fieldbus failure is indicated by the red I/O LED lighting up. All subsequent Modbus TCP/IP requests are answered with the exception code 0x0004 (Slave Device Failure).



Information

Further Information

For detailed information on the Watchdog see Chapter "Modbus Functions" >...> "Modbus Watchdog".

10.2.2 Local Bus Failure

I/O LED indicates a local bus failure.

When a local bus failure occurs, the head station generates an error message (error code and error argument) via the red-flashing I/O LED (see chapter "Diagnostics" => "Evaluating Node Status - I/O LED (Blink Code Table)").

If the local bus completely fails, output modules switch to defined states, e.g. "Off" or "0 V".

Example:

A fieldbus node consists of head station, five I/O modules with process data and the end module.

The output of one digital output module is activated.

If the end module is removed of the fieldbus node during operation, the local bus is interrupted. The output of the digital output module is automatically deactivated and the I/O LED flashes red and indicates with it error message 4/5.

The flashing code table provides for error code 4: "Physical error, local bus" with error argument 5: "Interruption of the local bus behind the nth I/O module with process data".

If the end module is re-inserted into the fieldbus node, the local bus will restart after a few seconds. After the initialization blink code is completely, the I/O LED lights up again in a steady green and the transmission of the process data is resumed. Also the output of the digital output module is re-activated.

If the local bus error is caused by a defective module, it must be replaced, as described in the blink code table for error code 4 under "Solution".

11 Fieldbus Communication

Fieldbus communication between master application and a WAGO fieldbus coupler/controller based on the ETHERNET standard normally occurs via a fieldbus-specific application protocol.

Depending on the application, this can be e.g., MODBUS TCP/UDP, EtherNet/IP, BACnet/IP, KNXnet/IP, PROFINET, sercos or other.

In addition to the ETHERNET standard and the fieldbus-specific application protocol, there are also other communications protocols important for reliable communication and data transmission and other related protocols for configuring and diagnosing the system implemented in the WAGO fieldbus coupler/controller based on ETHERNET.

These protocols are explained in more detail in the other sections.

11.1 Implemented Protocols

11.1.1 Communication Protocols

11.1.1.1 IP (Internet Protocol)

The Internet protocol divides datagrams into segments and is responsible for their transmission from one network subscriber to another. The stations involved may be connected to the same network or to different physical networks which are linked together by routers.

Routers are able to select various paths (network transmission paths) through connected networks, and bypass congestion and individual network failures. However, as individual paths may be selected which are shorter than other paths, datagrams may overtake each other, causing the sequence of the data packets to be incorrect.

Therefore, it is necessary to use a higher-level protocol, for example, TCP to guarantee correct transmission.

IP Packet

In addition to the data units to be transported, the IP data packets contain a range of address information and additional information in the packet header.

Table 75: IP Packet

IP Header	IP Data
-----------	---------

The most important information in the IP header is the IP address of the transmitter and the receiver and the transport protocol used.

IP Addresses

To allow communication over the network each fieldbus node requires a 32 bit Internet address (IP address).



Note

IP Address must be unique!

For error free operation, the IP address must be unique within the network. The same IP address may not be assigned twice.

As shown below there are various address classes with net identification (net ID) and subscriber identification (subscriber ID) of varying lengths. The net ID defines the network in which the subscriber is located. The subscriber ID identifies a particular subscriber within this network.

Networks are divided into various network classes for addressing purposes:

- **Class A:** (Net ID: Byte 1, Host ID: Byte 2... Byte 4)

Table 76: Network Class A

e. g.	101	.	16	.	232	.	22
	01100101		00010000		11101000		00010110
0	Net ID		Host ID				

The highest bit in Class A networks is always '0'. This means the highest byte can be in a range of '0 000000' to '0 111111'.

Therefore, the address range of a Class A network in the first byte is always between 0 and 127.

- **Class B:** (Net ID: Byte 1 ... Byte 2, Host ID: Byte 3... Byte 4)

Table 77: Network Class B

e. g.	181	.	16	.	232	.	22
	10110101		00010000		11101000		00010110
10	Net ID		Host ID				

The highest bits in Class B networks are always '10'. This means the highest byte can be in a range of '10 000000' to '10 111111'.

Therefore, the address range of Class B networks in the first byte is always between 128 and 191.

- **Class C:** (Net ID: Byte 1 ... Byte 3, Host ID: Byte 4)

Table 78: Network Class C

e. g.	201	.	16	.	232	.	22
	11000101		00010000		11101000		00010110
110	Net ID		Host ID				

The highest bits in Class C networks are always '110'. This means the highest byte can be in a range of '110 00000' to '110 11111'.

Therefore, the address range of Class C networks in the first byte is always between 192 and 223.

- **Additional network classes (D, E):** are only used for special tasks.

Key Data

Table 79: Key Data Class A, B and C

Network Class	Address range of the subnetwork	Possible number of	
		Networks	Hosts per Network
Class A	0.XXX.XXX.XXX ... 127.XXX.XXX.XXX	128 (2^7)	Approx. 16 Million (2^{24})
Class B	128.000.XXX.XXX ... 191.255.XXX.XXX	Approx. 16 Thousand (2^{14})	Ca. 65 Thousand (2^{16})
Class C	192.000.000.XXX ... 223.255.255.XXX	Approx. 2 Million (2^{21})	254 (2^8)

Each WAGO ETHERNET fieldbus coupler or controller can be easily assigned an IP address via the implemented BootP protocol. For small internal networks we recommend selecting a network address from Class C.

Note



Do not set IP addresses to 0.0.0.0 or 255.255.255.255!

Never set all bits to equal 0 or 1 in one byte (byte = 0 or 255). These are reserved for special functions and may not be allocated. Therefore, the address 10.0.10.10 may not be used due to the 0 in the second byte.

If a network is to be directly connected to the Internet, only registered, internationally unique IP addresses allocated by a central registration service may be used. These are available from InterNIC (International Network Information Center).

Note



Internet access only by the authorized network administrator!

Direct connection to the Internet should only be performed by an authorized network administrator and is therefore not described in this manual.

Subnets

To allow routing within large networks a convention was introduced in the specification RFC 950. Part of the Internet address, the subscriber ID is divided up again into a subnetwork number and the station number of the node. With the aid of the network number it is possible to branch into internal subnetworks within the partial network, but the entire network is physically connected together. The size and position of the subnetwork ID are not defined; however, the size is dependent upon the number of subnets to be addressed and the number of subscribers per subnet.

Table 80: Example: Class B Address with Field for Subnet IDs

1	8	16	24	32
1	0	...	Network ID	Subnet ID
			Host ID	

Subnet Mask

A subnet mask was introduced to encode the subnets in the Internet. This involves a bit mask, which is used to mask out or select specific bits of the IP address. The mask defines the subscriber ID bits used for subnet coding, which denote the ID of the subscriber. The entire IP address range theoretically lies between 0.0.0.0 and 255.255.255.255. Each 0 and 255 from the IP address range are reserved for the subnet mask.

The standard masks depending upon the respective network class are as follows:

- Class A Subnet mask:**

Table 81: Subnet Mask for Class A Network

255	.0	.0	.0
-----	----	----	----

- Class B Subnet mask:**

Table 82: Subnet Mask for Class B Network

255	.255	.0	.0
-----	------	----	----

- Class C Subnet mask:**

Table 83: Subnet Mask for Class C Network

255	.255	.255	.0
-----	------	------	----

Depending on the subnet division the subnet masks may, however, contain other values beyond 0 and 255, such as 255.255.255.128 or 255.255.255.248.

Your network administrator allocates the subnet mask number to you.

Together with the IP address, this number determines which network your PC and your node belongs to.

The recipient node, which is located on a subnet, initially calculates the correct network number from its own IP address and subnet mask. Only then the node checks the node number and, if it corresponds, delivers the entire packet frame.

Table 84: Example for an IP Address from a Class B Network

IP address	172.16.233.200	'10101100 00010000 11101001 11001000'
Subnet mask	255.255.255.128	'11111111 11111111 11111111 10000000'
Net ID	172.16.0.0	'10101100 00010000 00000000 00000000'
Subnet ID	0.0.233.128	'00000000 00000000 11101001 10000000'
Host ID	0.0.0.72	'00000000 00000000 00000000 01001000'



Note

Specification of the network mask necessary!

Specify the network mask defined by the administrator in the same way as the IP address when installing the network protocol.

Gateway

The subnets of the Internet are normally connected via gateways. The function of these gateways is to forward packets to other networks or subnets.

This means that in addition to the IP address and network mask for each network card, it is necessary to specify the correct IP address of the standard gateway for a PC or fieldbus node connected to the Internet. You should also be able to obtain this IP address from your network administrator.

The IP function is limited to the local subnet if this address is not specified.

To communicate directly with each other, host and gateway must be on the same subnet, that means the network ID must be the same.

RAW IP

Raw IP manages without protocols such as PPP (point-to-point protocol). With RAW IP, the TCP/IP packets are directly exchanged without handshaking, thus enabling the connection to be established more quickly.

However, the connection must beforehand have been configured with a fixed IP address. The advantages of RAW IP are high data transfer rate and good stability.

IP Multicast

Multicast refers to a method of transmission from a point to a group, which is a point-to-multipoint transfer or multipoint connection. The advantage of multicast is that messages are simultaneously transferred to several users or closed user groups via one address.

IP multicasting at the Internet level is realized with the help of the Internet Group Message Protocol IGMP; neighboring routers use this protocol to inform each other on membership to the group.

For distribution of multicast packets in the sub-network, IP assumes that the datalink layer supports multicasting. In the case of Ethernet, you can provide a packet with a multicast address in order to send the packet to several recipients with a single send operation. Here, the common medium enables packets to be sent simultaneously to several recipients. The stations do not have to inform each other on who belongs to a specific multicast address – every station

physically receives every packet. The resolution of IP address to Ethernet address is solved by the use of algorithms, IP multicast addresses are embedded in Ethernet multicast addresses.

11.1.1.2 TCP (Transmission Control Protocol)

As the layer above the Internet protocol, TCP (Transmission Control Protocol) guarantees the secure transport of data through the network.

TCP enables two subscribers to establish a connection for the duration of the data transmission. Communication takes place in full-duplex mode (i.e., transmission between two subscribers in both directions simultaneously).

TCP provides the transmitted message with a 16-bit checksum and each data packet with a sequence number.

The receiver checks that the packet has been correctly received on the basis of the checksum and then sets off the sequence number. The result is known as the acknowledgement number and is returned with the next self-sent packet as an acknowledgement.

This ensures that the lost TCP packets are detected and resent, if necessary, in the correct sequence.

TCP Data Packet

The packet header of a TCP data packet is comprised of at least 20 bytes and contains, among others, the application port number of the transmitter and the receiver, the sequence number and the acknowledgement number.

The resulting TCP packet is used in the data unit area of an IP packet to create a TCP/IP packet.

TCP Port Numbers

TCP can, in addition to the IP address (network and subscriber address), respond to a specific application (service) on the addressed subscriber. For this the applications located on a subscriber, such as a web server, FTP server and others are addressed via different port numbers. Well-known applications are assigned fixed ports to which each application can refer when a connection is built up

(Examples: Telnet Port number: 23, http Port number: 80).

A complete list of "standardized services" is contained in the RFC 1700 (1994) specifications.

11.1.1.3 UDP (User Datagram Protocol)

The UDP protocol, like the TCP protocol, is responsible for the transport of data. Unlike the TCP protocol, UDP is not connection-orientated; meaning that there are no control mechanisms for the data exchange between transmitter and receiver. The advantage of this protocol is the efficiency of the transmitted data and the resulting higher processing speed.

11.1.2 Configuration and Diagnostics Protocols

11.1.2.1 BootP (Bootstrap Protocol)

The “Bootstrap Protocol” (BootP) can be used to assign an IP address and other parameters to the head station of the fieldbus node in a TCP/IP network.

The BootP protocol can be enabled in the WBM on "TCP/IP" WBM page (the option "DHCP" is enabled by default).

The protocol communication consists of a client request from the head station and a response from the BootP server. If no BootP server is available, in the default configuration the head station will periodically send client requests at irregular intervals until a server responds.

The protocol sends a broadcast request on port 67 (BootP server) containing the hardware address (MAC ID) of the head station. The BootP server receives the message. It contains a database in which MAC ID and IP addresses are assigned to one another. If the MAC address is found, a broadcast response is transmitted via the network. The head station “listens” at the specified Port 68 for the response of the BootP server. Incoming packets contain information such as the IP address and the MAC address of the head station. A head station recognizes by the MAC address whether the message is intended for it and, if it matches, transfers the sent IP address to its network interface.

In contrast to DHCP, the head station keeps the IP address with BootP, as long as it is not switched off. This means that the head station can only receive a new IP address after the next power on reset (or a software reset).

Note



IP addresses can be assigned via BootP under Windows and Linux!

You can use BootP to assign an IP address under the Windows and Linux operating systems.

Information



More information about IP address assigning with BootP

The process for assigning addresses using BootP is described in detail in the section “Commissioning”.

The head station supports the following options in addition to the default “IP address” option:

Table 85: BootP Options

Option	Meaning
[OPT1] Subnet mask	32-bit address mask that displays which bits of the IP address identify the network and which identify the network stations.
[OPT2] Time zone	Time difference between the local time and the UTC (Universal Time Coordinated).
[OPT3] Gateway	IP address of the router that permits access to other networks.
[OPT6] DNS server	IP address of the name servers that converts a name into an IP address. Up to 2 DNS servers can be configured.
[OPT12] Host name	The name of the host is the unique name of a computer in a network. The host name can contain up to 32 characters.
[OPT15] Domain name	The name of the domain is the unique name of a network. The domain name can contain up to 32 characters.
[OPT42] NTP server	IP address of the Network Time Server. This address is only accepted if the protocol "SNTP" is enabled via the WBM.

The WBM page "Miscellaneous" can also be used to select the "BootP Request before static IP" option. To do this, static network parameters must be stored in the EEPROM on the "TCP/IP" WBM page. After the restart, 7 BootP requests are sent. If there is no response to any of these requests, the head station configures itself with the IP parameters stored in the EEPROM.

If the head station does not receive a valid IP address, the I/O LED indicates an error code (see chapter "Diagnostics").

11.1.2.2 DHCP (Dynamic Host Configuration Protocol)

The Dynamic Host Configuration Protocol (DHCP) allows you to assign an IP address and other parameters to the head station of a fieldbus node in a TCP/IP network.

The DHCP protocol can be activated in the WBM on the "TCP/IP" WBM page (this option is already enabled by default).

DHCP is an advancement of BootP. The difference between BootP and DHCP is that both use different mapping methods and the configuration is limited in time with DHCP.

The DHCP client must re-request the configuration at the end of the server-supplied time ("lease time"). Normally, the DHCP server returns the same configuration, but it can be changed at any time.

If there is no response from a server on a DHCP request, the request is repeated continuously: first after 4 seconds, another after 8 seconds, the third after 16 seconds. After that follow more and more requests at longer intervals. If requests remain without an answer, the network configuration is discarded after the lease time has expired and a flash code is displayed via the I/O LED. Then the head station no longer has a valid IP address (IP 0.0.0.0).

There are three different operating modes for a DHCP server:

- **Manual assignment**
In this mode, the IP addresses are permanently assigned on the DHCP server to specific MAC addresses. The addresses are assigned to the MAC address for an indefinite period.
Manual assignments are used primarily to ensure that the DHCP client can be reached under a fixed IP address.
- **Automatic assignment**
For automatic assignment, a range of IP addresses is assigned on the DHCP server.
If the address was assigned from this range once to a DHCP client, then it belongs to the client for an indefinite period as the assigned IP address is also bound to the MAC address.
- **Dynamic assignment**
This process is similar to automatic assignment, but the DHCP server has a statement in its configuration file that specifies how long a certain IP address may be “leased” to a client before the client must log into the server again and request an “extension”.
If the client does not log in, the address is released and can be reassigned to another (or the same) client. The time defined by the administrator is called Lease Time.
Some DHCP servers also assign IP addresses based on the MAC address, i.e., a client receives the same IP address as before after longer network absence and elapse of the Lease Time (unless the IP address has been assigned otherwise in the mean time).

DHCP is used to dynamically configure the network parameters.

The head station supports the following options in addition to the default “IP address” option:

Table 86: Meaning of DHCP Options

Option	Meaning
[OPT1] Subnet mask	32-bit address mask that displays which bits of the IP address identify the network and which identify the network stations.
[OPT2] Time zone	Time difference between the local time and the UTC (Universal Time Coordinated).
[OPT3] Gateway	IP address of the router that permits access to other networks.
[OPT6] DNS server	IP address of the name servers that converts a name into an IP address. Up to 2 DNS servers can be configured.
[OPT15] Domain name *)	The name of the domain is the unique name of a network. The domain name can contain up to 32 characters.
[OPT42] NTP server	IP address of the Network Time Server. This address is only accepted if the protocol "SNTP" is activated via the WBM.
[OPT51] Lease time	The maximum duration in seconds (i.e., how long the fieldbus coupler/controller maintains the assigned IP address) can be defined here. The maximum lease time for the fieldbus controller is 48 days. This is due to the internal timer resolution. The minimum lease time is 16 minutes.
[OPT58] Renewing time	The renewing time indicates when the fieldbus coupler/controller must renew the lease time. The renewing time should be approximately half of the lease time.
[OPT59] Rebinding time	The rebinding time indicates after what amount of time the fieldbus coupler/controller must have received its new address. The rebinding time should be approximately 7/8 of the lease time.

*) In contrast to BootP, the DHCP client does not support assignment of the host name.

11.1.2.3 HTTP (Hypertext Transfer Protocol)

HTTP is a protocol used by WWW (World Wide Web) servers for the forwarding of hypermedia, texts, images, audiodata, etc.

Today, HTTP forms the basis of the Internet and is also based on requests and responses in the same way as the BootP protocol.

The HTTP server implemented in the (programmable) fieldbus coupler or controller is used for viewing the HTML pages saved in the coupler/controller. The HTML pages provide information about the coupler/controller (state, configuration), the network and the process image.

On some HTML pages, (programmable) fieldbus coupler or controller settings can also be defined and altered via the web-based management system (e.g. whether IP configuration of the coupler/controller is to be performed via the DHCP protocol, the BootP protocol or from the data stored in the EEPROM).

The HTTP server uses port number 80.

11.1.2.4 DNS (Domain Name Systems)

The DNS client enables conversion of logical Internet names such as `www.wago.com` into the appropriate decimal IP address represented with separator stops, via a DNS server. Reverse conversion is also possible.

The addresses of the DNS server are configured via DHCP, BootP or web-based management. Up to 2 DNS servers can be specified. The host identification can be achieved with two functions; an internal host table is not supported.

11.1.2.5 SNTP-Client (Simple Network Time Protocol)

The SNTP client is used for synchronization of the time of day between a time server (NTP and SNTP server Version 3 and 4 are supported) and the internal system time in the (programmable) fieldbus coupler or controller. The protocol is executed via a UDP port. Only unicast addressing is supported.

Configuration of the SNTP client

The configuration of the SNTP client is performed via the web-based management system. The following parameters must be set:

Table 87: Meaning of the SNTP Parameters

Parameter	Meaning
WBM page "TCP/IP" → "(S)NTP Server"	The address assignment can be made over an IP address.
WBM page "TCP/IP" → „SNTP Update Time (sec, max. 65535) ”	The update time indicates the interval in seconds, in which the synchronization with the time server is to take place.
WBM page "Clock" → "Timezone (+/- hour:minute)"	To operate the ETHERNET couplers/controllers with SNTP in various countries, you must specify a time zone. The time zone relative to GMT (Greenwich Mean time). A range of -12 to +14 hours is acceptable.
WBM page "Port" → "SNTP"	It indicates whether the SNTP Client is to be activated or deactivated.

11.1.2.6 FTP-Server (File Transfer Protocol)

The file transfer protocol (FTP) enables files to be exchanged between different network stations regardless of operating system.

In the case of the ETHERNET coupler/controller, FTP is used to store and read the HTML pages created by the user, the IEC61131 program and the IEC61131 source code in the (programmable) fieldbus coupler or controller.

A total memory of 1 GB is available for the internal file system.



Note

Cycles for flash limited to 1 million!

Up to 1 million write cycles per sector are allowed when writing the flash for the file system. The file system supports "Wear-Leveling", so that the same sectors are not always written to.



Information

More Information about the implemented Protocols

You can find a list of the exact available implemented protocols in the section “Technical Data” to the fieldbus coupler and/or controller.

11.1.2.7 SNMP (Simple Network Management Protocol)

The Simple Network Management Protocol (SNMP) is responsible for transporting the control data that allows the exchange of management information as well as status and statistic data between individual network components and a management system.

An SNMP management workstation polls the SNMP agents to obtain information on the relevant devices.

SNMP is supported in versions 1/2c and some fieldbus couplers/controllers in version 3.

This represents a community message exchange in SNMP versions 1 and 2c. The community name of the network community must thereby be specified.

In SNMP version 3, exchanging messages is user-related. Each device, that knows the passwords set via WBM, may read or write values from the controller. In SNMPv3, user data from SNMP messages can also be transmitted in encoded form. This way, both requested values and values to be written cannot be easily decoded by others via ETHERNET. This is why SNMPv3 is often used in safety-related networks.

The device data, that can be accessed or modified by an SNMP agent, is called SNMP object. The sets of SNMP objects are stored in a logical database called Management Information Base (MIB); this is why these objects are typically known as “MIB objects”.

The SNMP of the ETHERNET controller includes both the general MIB acc. to RFC1213 (MIB II) and a special WAGO MIB.

SNMP is processed via port 161. The port number for SNMP traps (agent messages) is 161. Both ports must be enabled to use SNMP.

11.1.2.7.1 MIB II Description

MIB II acc. to RFC1213 is divided into the following groups:

Table 88: MIB II groups

Group	Identifier
System Group	1.3.6.1.2.1.1
Interface Group	1.3.6.1.2.1.2
IP Group	1.3.6.1.2.1.4
IpRoute Table Group	1.3.6.1.2.1.4.21
ICMP Group	1.3.6.1.2.1.5
TCP Group	1.3.6.1.2.1.6
UDP Group	1.3.6.1.2.1.7
SNMP Group	1.3.6.1.2.1.11

11.1.2.7.2 Traps

Standard Traps

For specific events, the SNMP agent will independently send one of the following messages without polling the manager.



Note

Enable event messages (traps) in the WBM!

Initially enable the event messages in the WBM in menu "SNMP" under "Trap Enable". Traps in version 1, 2c and 3 may be activated separately.

The following messages are triggered automatically as traps (SNMPv1) by the fieldbus coupler/controller:

Table 89: Standard Traps

TrapType/TrapNumber/OID of the provided value	Name	Event
TrapType = 0	ColdStart	Restart the coupler/controller
TrapType = 1	WarmStart	Reset via mode selector switch (only for controller)
TrapType = 3	EthernetUp	Network connection detected
TrapType = 4	AuthenticationFailure	Unauthorized (abortive) MIB access
TrapType = 6/ ab Trap-Nummer 25 benutzerspezifisch	enterpriseSpecific	Enterprise-specific messages and function poll in the PFC program starting with enterprise trap number 25

11.1.3 Application Protocols

If fieldbus specific application protocols are implemented, then the appropriate fieldbus specific communication is possible with the respective coupler/controller. Thus the user is able to have a simple access from the respective fieldbus on the fieldbus node.

The fieldbus specific application protocols implemented in the fieldbus coupler/controller are listed in the following chapters and some special details are described.

11.2 Modbus Functions

11.2.1 General

Modbus is a manufacturer-independent, open fieldbus standard for diverse applications in manufacturing and process automation.

The Modbus protocol is implemented according to the current Internet Draft of the IETF (Internet Engineering Task Force) and performs the following functions:

- Transmission of the process image
- Transmission of the fieldbus variables
- Transmission of different settings and information on the coupler/controller

The data transmission in the fieldside takes place via TCP and via UDP.

The Modbus TCP protocol is a variation of the Modbus protocol, which was optimized for communication via TCP/IP connections.

This protocol was designed for data exchange in the field level (i.e. for the exchange of I/O data in the process image).

All data packets are sent via a TCP connection with the port number 502.

Modbus TCP segment

The general Modbus TCP header is as follows:

Table 90: Modbus TCP Header

Byte	0	1	2	3	4	5	6	7	8 ... n
	Identifier (entered by receiver)		Protocol-identifier (is always 0)		Length field (High byte, low byte)		Unit identifier (Slave address)	Modbus function code	Data



Information

Additional Information

The structure of a datagram is specific for the individual function. Refer to the descriptions of the Modbus Function codes.

For the MODBUS protocol 15 connections are made available over TCP. Thus it allows digital and analog output data to be directly read out at a fieldbus node and special functions to be executed by way of simple MODBUS function codes from 15 stations simultaneously.

For this purpose a set of MODBUS functions from the Open MODBUS/TCP specification is realized.



Information

More information

More information on the “Open MODBUS/TCP specification” you can find in the Internet: www.modbus.org.

Therefore the MODBUS protocol based essentially on the following basic data types:

Table 91: Basic Data Types of MODBUS Protocol

Data type	Length	Description
Discrete inputs	1 bit	Digital inputs
Coils	1 bit	Digital outputs
Input register	16 bits	Analog input data
Holding register	16 bits	Analog output data

For each basic data type one or more function codes are defined.

These functions allow digital or analog input and output data, and internal variables to be set or directly read out of the fieldbus node.

Table 92: List of the MODBUS Functions in the Fieldbus Coupler

Function code		Function	Access method and description	Access to resources (R=read/W=write)
Designation	Value (hex)			
FC1	0x01	Read Coils	Reading of several single input bits	R: Process image
FC2	0x02	Read Discrete Inputs	Reading of several input bits	R: Process image
FC3	0x03	Read Holding Registers	Reading of several input registers	R: Process image, internal variables
FC4	0x04	Read Input Registers	Reading of several input registers	R: Process image, internal variables
FC5	0x05	Write Single Coil	Writing of an individual output bit	W: Process image
FC6	0x06	Write Single Register	Writing of an individual output register	W: Process image, internal variables
FC11	0x0B	Get Comm Event Counters	Communication event counter	R: None
FC15	0x0F	Write Multiple Coils	Writing of several output bits	W: Process image
FC16	0x10	Write Multiple Registers	Writing of several output registers	W: Process image, internal variables
FC22	0x16	Mask Write Register	Writing of several bits of an individual output register by mask	W: Process image
FC23	0x17	Read/Write Multiple Registers	Reading and writing of several output registers	R/W: Process image

To execute a desired function, specify the respective function code and the address of the selected input or output channel or of the register.



Note

Note the number system when addressing!

The examples listed use the hexadecimal system (i.e.: 0x000) as their numerical format. Addressing begins with 0. The format and beginning of the addressing may vary according to the software and the control system. All addresses then need to be converted accordingly.

11.2.2 Use of the MODBUS Functions

The example below uses a graphical view of a fieldbus node to show which MODBUS functions can be used to access data of the process image.

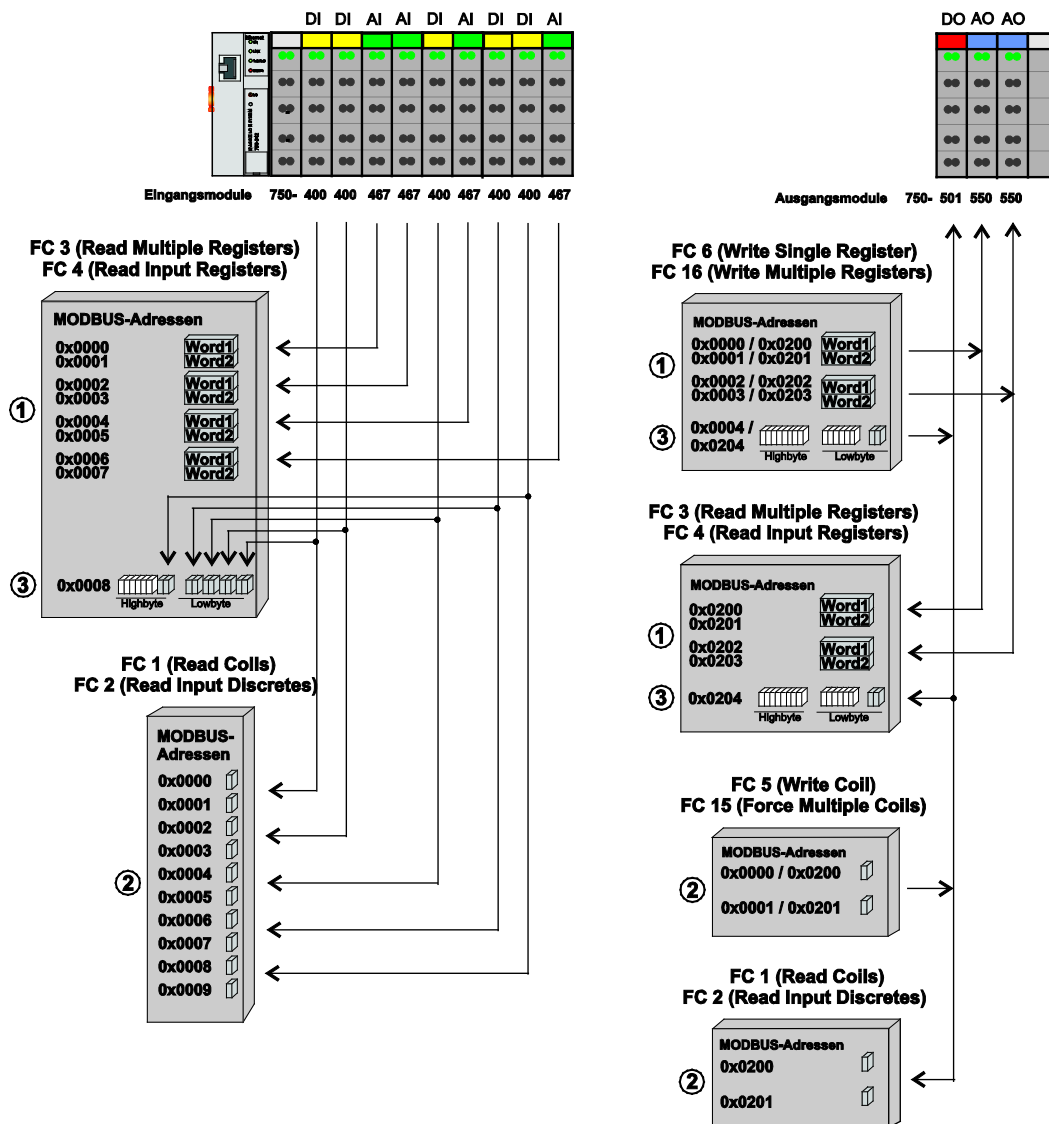


Figure 51: Use of the MODBUS Functions



Note

Use register functions to access analog signals and coil functions to access binary signals!

It is recommended that analog data be accessed with register functions ① and digital data with coil functions ②. If reading or writing access to binary signals is performed via register functions ③, an address shift may occur as soon as further analog modules are operated on the coupler/controller.

11.2.3 Description of the MODBUS Functions

All MODBUS functions are executed as follows:

1. A MODBUS TCP master (e.g., a PC) makes a request to the WAGO fieldbus node using a specific function code based on the desired operation..
2. The WAGO fieldbus node receives the datagram and then responds to the master with the proper data, which is based on the master's request.

If the WAGO fieldbus node receives an incorrect request, it sends an error datagram (Exception) to the master.

The exception code contained in the exception has the following meaning:

Table 93: Exception Codes

Exception code	Meaning
0x01	Illegal function
0x02	Illegal data address
0x03	Illegal data value
0x04	Slave device failure
0x05	Acknowledge
0x06	Server busy
0x08	Memory parity error
0x0A	Gateway path unavailable
0x0B	Gateway target device failed to respond

The following chapters describe the datagram architecture of request, response and exception with examples for each function code.



Note

Reading and writing of outputs via FC1 to FC4 is also possible by adding an offset!

In the case of the read functions (FC1 ... FC4) the outputs can be additionally written and read back by adding an offset of 200_{hex} (0x0200) to the MODBUS addresses in the range of [0_{hex} ... FF_{hex}] and an offset of 1000_{hex} (0x01000) to the MODBUS addresses in the range of [6000_{hex} ... 62FC_{hex}].

11.2.3.1 Function Code FC1 (Read Coils)

This function reads the status of the input and output bits (coils) in a slave device.

Request

The request specifies the reference number (starting address) and the bit count to read.

Example: Read output bits 0 to 7.

Table 94: Request of Function Code FC1

Byte	Field name	Example
Byte 0, 1	Transaction identifier	0x0000
Byte 2, 3	Protocol identifier	0x0000
Byte 4, 5	Length field	0x0006
Byte 6	Unit identifier	0x01 not used
Byte 7	MODBUS function code	0x01
Byte 8, 9	Reference number	0x0000
Byte 10, 11	Bit count	0x0008

Response

The current values of the response bits are packed in the data field. A binary 1 corresponds to the ON status and a 0 to the OFF status. The lowest value bit of the first data byte contains the first bit of the request. The others follow in ascending order. If the number of inputs is not a multiple of 8, the remaining bits of the last data byte are filled with zeroes (truncated).

Table 95: Response of Function Code FC1

Byte	Field name	Example
...		
Byte 7	MODBUS function code	0x01
Byte 8	Byte count	0x01
Byte 9	Bit values	0x12

The status of the inputs 7 to 0 is shown as byte value 0x12 or binary 0001 0010. Input 7 is the bit having the highest significance of this byte and input 0 the

lowest value.

The assignment is thus made from 7 to 0 as follows:

Table 96: Assignment of Inputs

	OFF	OFF	OFF	ON	OFF	OFF	ON	OFF
Bit	0	0	0	1	0	0	1	0
Coil	7	6	5	4	3	2	1	0

Exception

Table 97: Exception of Function Code FC1

Byte	Field name	Example
...		
Byte 7	MODBUS function code	0x81
Byte 8	Exception code	0x01 or 0x02

11.2.3.2 Function Code FC2 (Read Discrete Inputs)

This function reads the input bits from a slave device.

Request

The request specifies the reference number (starting address) and the bit count to be read.

Example: Read input bits 0 to 7

Table 98: Request of Function Code FC2

Byte	Field name	Example
Byte 0, 1	Transaction identifier	0x0000
Byte 2, 3	Protocol identifier	0x0000
Byte 4, 5	Length field	0x0006
Byte 6	Unit identifier	0x01 not used
Byte 7	MODBUS function code	0x02
Byte 8, 9	Reference number	0x0000
Byte 10, 11	Bit count	0x0008

Response

The current value of the requested bits are packed into the data field. A binary 1 corresponds to the ON status and a 0 the OFF status. The lowest value bit of the first data byte contains the first bit of the inquiry. The others follow in an ascending order. If the number of inputs is not a multiple of 8, the remaining bits of the last data byte are filled with zeroes (truncated).

Table 99: Response of Function Code FC2

Byte	Field name	Example
...		
Byte 7	MODBUS function code	0x02
Byte 8	Byte count	0x01
Byte 9	Bit values	0x12

The status of the inputs 7 to 0 is shown as a byte value 0x12 or binary 0001 0010. Input 7 is the bit having the highest significance of this byte and input 0 the lowest value. The assignment is thus made from 7 to 0 as follows:

Table 100: Assignment of Inputs

	OFF	OFF	OFF	ON	OFF	OFF	ON	OFF
Bit	0	0	0	1	0	0	1	0
Coil	7	6	5	4	3	2	1	0

Exception

Table 101: Exception of Function Code FC2

Byte	Field name	Example
...		
Byte 7	MODBUS function code	0x82
Byte 8	Exception code	0x01 or 0x02

11.2.3.3 Function Code FC3 (Read Multiple Registers)

This function reads the contents of holding registers from a slave device in word format.

Request

The request specifies the reference number (start register) and the word count (register quantity) of the registers to be read. The reference number of the request is zero based, therefore, the first register starts at address 0.

Example: Read registers 0 and 1.

Table 102: Request of Function Code FC3

Byte	Field name	Example
Byte 0, 1	Transaction identifier	0x0000
Byte 2, 3	Protocol identifier	0x0000
Byte 4, 5	Length field	0x0006
Byte 6	Unit identifier	0x01 not used
Byte 7	MODBUS function code	0x03
Byte 8, 9	Reference number	0x0000
Byte 10, 11	Word count	0x0002

Response

The reply register data is packed as 2 bytes per register. The first byte contains the higher value bits, the second the lower values.

Table 103: Response of Function Code FC3

Byte	Field name	Example
...		
Byte 7	MODBUS function code	0x03
Byte 8	Byte count	0x04
Byte 9, 10	Value register 0	0x1234
Byte 11, 12	Value register 1	0x2345

The contents of register 0 are displayed by the value 0x1234 and the contents of register 1 is 0x2345.

Exception

Table 104: Exception of Function Code FC3

Byte	Field name	Example
...		
Byte 7	MODBUS function code	0x83
Byte 8	Exception code	0x01 or 0x02

11.2.3.4 Function Code FC4 (Read Input Registers)

This function reads contents of input registers from the slave device in word format.

Request

The request specifies a reference number (start register) and the word count (register quantity) of the registers to be read. The reference number of the request is zero based, therefore, the first register starts at address 0.

Example: Read registers 0 and 1

Table 105: Request of Function Code FC4

Byte	Field name	Example
Byte 0, 1	Transaction identifier	0x0000
Byte 2, 3	Protocol identifier	0x0000
Byte 4, 5	Length field	0x0006
Byte 6	Unit identifier	0x01 not used
Byte 7	MODBUS function code	0x04
Byte 8, 9	Reference number	0x0000
Byte 10, 11	Word count	0x0002

Response

The register data of the response is packed as 2 bytes per register. The first byte has the higher value bits, the second the lower values.

Table 106: Response of Function Code FC4

Byte	Field name	Example
...		
Byte 7	MODBUS function code	0x04
Byte 8	Byte count	0x04
Byte 9, 10	Value register 0	0x1234
Byte 11, 12	Value register 1	0x2345

The contents of register 0 are shown by the value 0x1234 and the contents of register 1 is 0x2345.

Exception

Table 107: Exception of Function Code FC4

Byte	Field name	Example
...		
Byte 7	MODBUS function code	0x84
Byte 8	Exception code	0x01 or 0x02

11.2.3.5 Function Code FC5 (Write Coil)

This function writes a single output bit to the slave device.

Request

The request specifies the reference number (output address) of output bit to be written. The reference number of the request is zero based; therefore, the first coil starts at address 0.

Example: Turn ON the second output bit (address 1)

Table 108: Request of Function Code FC5

Byte	Field name	Example
Byte 0, 1	Transaction identifier	0x0000
Byte 2, 3	Protocol identifier	0x0000
Byte 4, 5	Length field	0x0006
Byte 6	Unit identifier	0x01 not used
Byte 7	MODBUS function code	0x05
Byte 8, 9	Reference number	0x0001
Byte 10	ON/OFF	0xFF
Byte 11		0x00

Response

Table 109: Response of Function Code FC5

Byte	Field name	Example
...		
Byte 7	MODBUS function code	0x05
Byte 8, 9	Reference number	0x0001
Byte 10	Value	0xFF
Byte 11		0x00

Exception

Table 110: Exception of Function Code FC5

Byte	Field name	Example
...		
Byte 7	MODBUS function code	0x85
Byte 8	Exception code	0x01, 0x02 or 0x03

11.2.3.6 Function Code FC6 (Write Single Register)

This function writes the value of one single output register to a slave device in word format.

Request

The request specifies the reference number (register address) of the first output word to be written. The value to be written is specified in the "Register Value" field. The reference number of the request is zero based; therefore, the first register starts at address 0.

Example: Write a value of 0x1234 to the second output register

Table 111: Request of Function Code FC6

Byte	Field name	Example
Byte 0, 1	Transaction identifier	0x0000
Byte 2, 3	Protocol identifier	0x0000
Byte 4, 5	Length field	0x0006
Byte 6	Unit identifier	0x01 not used
Byte 7	MODBUS function code	0x06
Byte 8, 9	Reference number	0x0001
Byte 10, 11	Register value	0x1234

Response

The reply is an echo of the inquiry.

Table 112: Response of Function Code FC6

Byte	Field name	Example
...		
Byte 7	MODBUS function code	0x06
Byte 8, 9	Reference number	0x0001
Byte 10, 11	Register value	0x1234

Exception

Table 113: Exception of Function Code FC6

Byte	Field name	Example
...		
Byte 7	MODBUS function code	0x85
Byte 8	Exception code	0x01 or 0x02

11.2.3.7 Function Code FC11 (Get Comm Event Counter)

This function returns a status word and an event counter from the slave device's communication event counter. By reading the current count before and after a series of messages, a master can determine whether the messages were handled normally by the slave.

Following each successful new processing, the counter counts up. This counting process is not performed in the case of exception replies, poll commands or counter inquiries.

Request

Table 114: Request of Function code FC11

Byte	Field name	Example
Byte 0, 1	Transaction identifier	0x0000
Byte 2, 3	Protocol identifier	0x0000
Byte 4, 5	Length field	0x0002
Byte 6	Unit identifier	0x01 not used
Byte 7	MODBUS function code	0x0B

Response

The reply contains a 2-byte status word and a 2-byte event counter. The status word only contains zeroes.

Table 115: Response of Function Code FC11

Byte	Field name	Example
...		
Byte 7	MODBUS function code	0x0B
Byte 8, 9	Status	0x0000
Byte 10, 11	Event count	0x0003

The event counter shows that 3 (0x0003) events were counted.

Exception

Table 116: Exception of Function Code FC 11

Byte	Field name	Example
...		
Byte 7	MODBUS function code	0x85
Byte 8	Exception code	0x01 or 0x02

11.2.3.8 Function Code FC15 (Write Multiple Coils)

This function sets a sequence of output bits to 1 or 0 in a slave device. The maximum number is 256 bits.

Request

The request message specifies the reference number (first coil in the sequence), the bit count (number of bits to be written), and the output data. The output coils are zero-based; therefore, the first output point is 0.

In this example 16 bits are set, starting with the address 0. The request contains 2 bytes with the value 0xA5F0, or 1010 0101 1111 0000 in binary format.

The first data byte transmits the value of 0xA5 to the addresses 7 to 0, whereby 0 is the lowest value bit. The next byte transmits 0xF0 to the addresses 15 to 8, whereby the lowest value bit is 8.

Table 117: Request of Function Code FC15

Byte	Field name	Example
Byte 0, 1	Transaction identifier	0x0000
Byte 2, 3	Protocol identifier	0x0000
Byte 4, 5	Length field	0x0009
Byte 6	Unit identifier	0x01 not used
Byte 7	MODBUS function code	0x0F
Byte 8, 9	Reference number	0x0000
Byte 10, 11	Bit count	0x0010
Byte 12	Byte count	0x02
Byte 13	Data byte1	0xA5
Byte 14	Data byte2	0xF0

Response

Table 118: Response of Function Code FC15

Byte	Field name	Example
...		
Byte 7	MODBUS function code	0x0F
Byte 8, 9	Reference number	0x0000
Byte 10, 11	Bit count	0x0010

Exception

Table 119: Exception of Function Code FC15

Byte	Field name	Example
...		
Byte 7	MODBUS function code	0x8F
Byte 8	Exception code	0x01 or 0x02

11.2.3.9 Function Code FC16 (Write Multiple Registers)

This function writes a sequence of registers in a slave device in word format.

Request

The Request specifies the reference number (starting register), the word count (number of registers to write), and the register data. The data is sent as 2 bytes per register. The registers are zero-based; therefore, the first output is at address 0.

Example: Set data in registers 0 and 1

Table 120: Request of Function Code FC16

Byte	Field name	Example
Byte 0, 1	Transaction identifier	0x0000
Byte 2, 3	Protocol identifier	0x0000
Byte 4, 5	Length field	0x000B
Byte 6	Unit identifier	0x01 not used
Byte 7	MODBUS function code	0x10
Byte 8, 9	Reference number	0x0000
Byte 10, 11	Word count	0x0002
Byte 12	Byte count	0x04
Byte 13, 14	Register value 1	0x1234
Byte 15, 16	Register value 2	0x2345

Response

Table 121: Response of Function Code FC16

Byte	Field name	Example
...		
Byte 7	MODBUS function code	0x10
Byte 8, 9	Reference number	0x0000
Byte 10, 11	Word count	0x0002

Exception

Table 122: Exception of Function Code FC16

Byte	Field name	Example
...		
Byte 7	MODBUS function code	0x85
Byte 8	Exception code	0x01 or 0x02

11.2.3.10 Function Code FC22 (Mask Write Register)

This function manipulates individual bits within a register using a combination of an AND mask, an OR mask, and the register's current content.

Request

Table 123: Request of Function Code FC22

Byte	Field name	Example
Byte 0, 1	Transaction identifier	0x0000
Byte 2, 3	Protocol identifier	0x0000
Byte 4, 5	Length field	0x0002
Byte 6	Unit identifier	0x01 not used
Byte 7	MODBUS function code	0x16
Byte 8, 9	Reference number	0x0000
Byte 10, 11	AND mask	0x0000
Byte 12, 13	OR mask	0xAAAA

Response

Table 124: Response of Function Code FC22

Byte	Field name	Example
...		
Byte 7	MODBUS function code	0x10
Byte 8, 9	Reference number	0x0000
Byte 10, 11	AND mask	0x0000
Byte 12, 13	OR mask	0xAAAA

Exception

Table 125: Exception of Function Code FC22

Byte	Field name	Example
...		
Byte 7	MODBUS function code	0x85
Byte 8	Exception code	0x01 or 0x02

11.2.3.11 Function Code FC23 (Read/Write Multiple Registers)

This function performs a combination of a read and write operation in a single request. The function can write the new data to a group registers, and then return the data of a different group. The write operation is performed before the read.

Request

The reference numbers (addresses) are zero-based in the request message; therefore, the first register is at address 0.

The request message specifies the registers to read and write. The data is sent as 2 bytes per register.

Example: The data in register 3 is set to value 0x0123, and values 0x0004 and 0x5678 are read out of the two registers 0 and 1.

Table 126: Request of Function Code FC23

Byte	Field name	Example
Byte 0, 1	Transaction identifier	0x0000
Byte 2, 3	Protocol identifier	0x0000
Byte 4, 5	Length field	0x000D
Byte 6	Unit identifier	0x01 not used
Byte 7	MODBUS function code	0x17
Byte 8, 9	Reference number for read	0x0000
Byte 10, 11	Word count for read (1...125)	0x0002
Byte 12, 13	Reference number for write	0x0003
Byte 14, 15	Word count for write (1...100)	0x0001
Byte 16	Byte count (2 x word count for write)	0x02
Byte 17...(B+16)	Register values (B = Byte count)	0x0123

Response

Table 127: Response of Function Code FC23

Byte	Field name	Example
...		
Byte 7	MODBUS function code	0x17
Byte 8	Byte count (2 x word count for read)	0x04
Byte 9...(B+1)	Register values (B = Byte count)	0x0004 or 0x5678

Exception

Table 128: Exception of Function Code FC23

Byte	Field name	Example
...		
Byte 7	MODBUS function code	0x97
Byte 8	Exception code	0x01 or 0x02



Note

Note that if the register ranges overlap, the results are undefined!
If register areas for read and write overlap, the results are undefined.

11.2.4 MODBUS Register Mapping

The following tables display the MODBUS addressing and the internal variables.

Via the register services the states of the complex and digital I/O modules can be determined or changed.

Register Access Reading (with FC3 and FC4)

Table 129: Register Access Reading (with FC3 and FC4)

MODBUS address		IEC 61131	Memory range
[dec]	[hex]	address	
0...255	0x0000...0x00FF	%IW0...%IW255	Physical input area (1) First 256 Words of physical input data
256...511	0x0100...0x01FF	-	MODBUS exception: "Illegal data address"
512...767	0x0200...0x02FF	%QW0...%QW255	Physical output area (1) First 256 Words of physical output data
768...4095	0x0300...0x0FFF	-	MODBUS exception: "Illegal data address"
4096...12287	0x1000...0x2FFF	-	Configuration register (see Section „Configuration Register“)
12288...24575	0x3000...0x5FFF	-	MODBUS exception: "Illegal data address"
24576...25339	0x6000...0x62FB	%IW256...%IW1020	Physical input area (2) Additional 764 Words physical input data
25340...28671	0x62FC...0x6FFF	-	MODBUS exception: "Illegal data address"
28672...29435	0x7000...0x72FB	%QW256...%QW1020	Physical output area (2) Additional 764 Words physical output data
29436...65535	0x72FC...0xFFFF	-	MODBUS exception: "Illegal data address"

Register Access Writing (with FC6 and FC16)

Table 130: Register Access Writing (with FC6 and FC16)

MODBUS address		IEC 61131	Memory range
[dec]	[hex]	address	
0...255	0x0000...0x00FF	%QW0...%QW255	Physical output area (1) First 256 Words of physical output data
256...511	0x0100...0x01FF	-	MODBUS exception: "Illegal data address"
512...767	0x0200...0x02FF	%QW0...%QW255	Physical output area (1) First 256 Words of physical output data
768...4095	0x0300...0x0FFF	-	MODBUS exception: "Illegal data address"
4096...12287	0x1000...0x2FFF	-	Configuration register (see Section "Configuration Register")
12288...24575	0x3000...0x5FFF	-	MODBUS exception: "Illegal data address"
24576...25339	0x6000...0x62FB	%QW256...%QW1020	Physical output area (2) Additional 764 Words physical output data
25340...28671	0x62FC...0x6FFF	-	MODBUS exception: "Illegal data address"
28672...29435	0x7000...0x72FB	%QW256...%QW1020	Physical output area (2) Additional 764 Words physical output data
29436...65535	0x72FC...0xFFFF	-	MODBUS exception: "Illegal data address"

The digital MODBUS services (coil services) are bit accesses, with which only the states of digital I/O modules can be determined or changed. Complex I/O modules are not attainable with these services and so they are ignored. Because of this the addressing of the digital channels begins again with 0, so that the MODBUS address is always identical to the channel number, (i.e. the digital input no. 47 has the MODBUS address "46").

Bit Access Reading (with FC1 and FC2)

Table 131: Bit Access Reading (with FC1 and FC2)

MODBUS address		Memory range	Description
[dec]	[hex]		
0...511	0x0000...0x01FF	Physical input area (1)	First 512 digital inputs
512...1023	0x0200...0x03FF	Physical output area (1)	First 512 digital outputs
1024... 12287	0x0400...0x2FFF	-	MODBUS exception: "Illegal data address"
12288...13815	0x3000...0x35F7		MODBUS exception: "Illegal data address"
13816...16383	0x35F8...0x3FFF	-	MODBUS exception: "Illegal data address"
16384...17911	0x4000...0x45F7		MODBUS exception: "Illegal data address"
17912...32767	0x45F8...0x7FFF	-	MODBUS exception: "Illegal data address"
	0x8000...0x85F7	Physical input area (2)	Starts with the 513 th and ends with the 2039 th digital input
	0x85F8...0x8FFF		MODBUS exception: "Illegal data address"
	0x9000...0x95F7	Physical output area (2)	Starts with the 513 th and ends with the 2039 th digital output
	0x95F8...0xFFFF		MODBUS exception: "Illegal data address"

Bit Access Writing (with FC5 and FC15)

Table 132: Bit Access Writing (with FC5 and FC15)

MODBUS address		Memory range	Description
[dec]	[hex]		
0...511	0x0000...0x01FF	Physical output area (1)	First 512 digital outputs
512...1023	0x0200...0x03FF	Physical output area (1)	First 512 digital outputs
1024...12287	0x0400...0x2FFF	-	MODBUS exception: "Illegal data address"
12288...13815	0x3000...0x35F7		MODBUS exception: "Illegal data address"
13816...16383	0x35F8...0x3FFF	-	MODBUS exception: "Illegal data address"
16384...17911	0x4000...0x45F7		MODBUS exception: "Illegal data address"
17912...32767	0x45F8...0x7FFF	-	MODBUS exception: "Illegal data address"
	0x8000...0x85F7	Physical output area (2)	Starts with the 513 th and ends with the 2039 th digital output
	0x85F8...0x8FFF		MODBUS exception: "Illegal data address"
	0x9000...0x95F7	Physical output area (2)	Starts with the 513 th and ends with the 2039 th digital output
	0x95F8...0xFFFF		MODBUS exception: "Illegal data address"

11.2.5 Modbus Registers

Table 133: Modbus Registers

Register address	Access	Length (Word)	Description
0x1000	R/W	1	Watchdog time read/write
0x1001	R/W	1 ... 2	Watchdog coding mask 1...16
0x1002	R/W	1	Watchdog coding mask 17...32
0x1003	R/W	1	Watchdog trigger
0x1004	R	1	Minimum trigger time
0x1005	R/W	1	Watchdog stop (Write sequence 0xAAAA, 0x5555)
0x1006	R	1	Watchdog status
0x1007	R/W	1	Restart watchdog (Write sequence 0x1)
0x1008	R/W	1	Stop watchdog (Write sequence 0x55AA or 0xAA55)
0x1009	R/W	1	Modbus and HTTP close at watchdog time-out
0x100A	R/W	1	Watchdog configuration
0x100B	W	1	Save watchdog parameter (Write sequence 0x55AA or 0xAA55)
0x1020	R	1 ... 2	LED error code
0x1021	R	1	LED error argument
0x1022	R	1 ... 4	Number of analog output data in the process image (in bits)
0x1023	R	1 ... 3	Number of analog input data in the process image (in bits)
0x1024	R	1 ... 2	Number of digital output data in the process image (in bits)
0x1025	R	1	Number of digital input data in the process image (in bits)
0x1029	R/W	1 ... 9	Modbus TCP statistics (Write sequence 0x55AA or 0xAA55)
0x102A	R	1	Number of TCP connections
0x102B	W	1	KBUS Reset
0x1030	R/W	1	Configuration MODBUS/TCP time-out
0x1031	R	1 ... 3	Read out the MAC-ID of the coupler/controller
0x1037	R/W	1	Modbus Response Delay (ms)
0x1038		1	Modbus TOS
0x1050	R	3	Diagnosis of the connected I/O modules
0x2000	R	1 ... 9	Constant 0x0000

0x2001	R	1 ... 8	Constant 0xFFFF
0x2002	R	1 ... 7	Constant 0x1234
0x2003	R	1 ... 6	Constant 0xAAAA
0x2004	R	1 ... 5	Constant 0x5555
0x2005	R	1 ... 4	Constant 0x7FFF
0x2006	R	1 ... 3	Constant 0x8000
0x2007	R	1 ... 2	Constant 0x3FFF
0x2008	R	1	Constant 0x4000
0x2010	R	1	Firmware version
0x2011	R	1	Series code
0x2012	R	1	Coupler/controller code
0x2013	R	1	Firmware version major revision
0x2014	R	1	Firmware version minor revision
0x2020	R	1 ... 16	Short description controller
0x2021	R	1 ... 8	Compile time of the firmware
0x2022	R	1 ... 8	Compile date of the firmware
0x2023	R	1 ... 32	Indication of the firmware loader
0x2030	R	1 ... 65	Description of the connected I/O modules (module 0...64)
0x2031	R	1 ... 64	Description of the connected I/O modules (module 65...128)
0x2032	R	1 ... 64	Description of the connected I/O modules (module 129...192)
0x2033	R	1 ... 63	Description of the connected I/O modules (module 193...255)
0x2035	R/W	1	Process image settings
0x2036	R		Fieldbus coupler/controller diagnostics
0x2040	W	1	Software reset (Write sequence 0x55AA or 0xAA55)
0x2043	W	1	Factory settings

11.2.5.1 Accessing Register Values

You can use any den Modbus application to access (read from or write to) register values. Both commercial (e.g., "Modscan") and free programs (from <http://www.modbus.org/tech.php>) are available.

The following sections describe the Modbus watchdog and how to access both the registers and their values.

11.2.5.2 Modbus-Watchdog

With the aid of the Modbus watchdog, it is possible to monitor whether communication takes place with Modbus function codes with a specific regularity. If the communication lapses for a given time, it is called a "time-out", which is considered fieldbus failure. In general, the Modbus watchdog ensures that all analog output modules in the fieldbus node are set to "0" and all digital output modules are set to logical "Off". At the same time, the user is informed about the time-out via the WBM as well as via a status register (0x1006).

An internal timer is used to monitor the time-out. This timer is set to a certain maximum time (register 0x1000) and started at the beginning of the monitoring. If communication with a Modbus function code to be monitored occurs before

reaching the maximum time, the timer starts again at "0". However, only the function codes selected in the coding mask (0x1001) are monitored (respective bit = '1'). All other function codes keep the timer running or, unlike the selected function codes, do not restart the watchdog after a time-out.

The head station's behavior after a time-out is defined by the initial choice of two possible operating modes ("Standard"/"Alternative") and by an additional parameter for the TCP interface (register 0x1009, "MODBUS and HTTP close for Modbus Watchdog time-out").

- **Behavior 1 (lowest restriction):**

After a Modbus watchdog time-out, all analog and digital output modules are set to "0" or "Off", however, the Modbus watchdog is immediately restarted the next time a function code is sent (provided the function code in the coding mask (0x1001) is selected).

=> Select the operating mode "Alternative",
=> Set register 0x1009 to the value '0'.

When reading the status register (0x1006), the correct value is read first: "2" = "Watchdog expired". Because this restarts the Modbus watchdog, the next read would result in "1" = "watchdog active".

- **Behavior 2 (medium restriction):**

Further communication in relation to process data should be prevented. Any attempt to access process data via Modbus function codes should be answered with an error.

=> Select the operating mode "Standard" for this.

However, the Modbus TCP connection will still work to access the Modbus configuration and status registers.

=> Set the register 0x1009 to the value '0'.

Access to the Modbus watchdog registers is still possible after a Modbus watchdog time-out, although Modbus function codes are also sent in this case.

For all other Modbus TCP/IP requests, the head station responds with the exception code 0x0004 ("Slave Device Failure").

- **Behavior 3 (highest restriction):**

Further communication in relation to process data should be prevented. Any attempt to access process data via Modbus function codes should be answered with an error.

=> Select the operating mode "Standard" for this.

In addition, the TCP connection should also be closed to prevent access to the Modbus watchdog registers. For example thereby a restart of the Modbus watchdog is not possible without a previous TCP reconnection.

=> Set the register 0x1009 to the value '1'.

After renewed TCP connection, in the "Standard" operating mode the Modbus watchdog is still in the "expired" status and must be restarted (register 0x1003 or 0x1007).

11.2.5.3 Modbus Watchdog Register

The watchdog registers can be addressed analogously with the described Modbus function codes (read and write). Instead of the address of an I/O module channel, the respective register address is therefor specified.

Table 134: Register Address 0x1000

Register address 0x1000 (4096 _{dec})	
Value	Watchdog time, WS_TIME
Access	Read/write
Default	0x0064
Description	This register stores the watchdog timeout value as an unsigned 16 bit value. The default value is 0. Setting this value will not trigger the watchdog. However, a non zero value must be stored in this register before the watchdog can be triggered. The time value is stored in multiples of 100ms (e.g., 0x0009 is .9 seconds). It is not possible to modify this value while the watchdog is running.

Table 135: Register Address 0x1001

Register address 0x1001 (4097 _{dec})	
Value	Watchdog function coding mask, function code 1...16, WDFCM_1_16
Access	Read/write
Default	0xFFFF
Description	<p>Using this mask, the function codes can be set to trigger the watchdog function. The function code can be selected via a "1"</p> <p>FC 1 Bit 0 FC 2 Bit 1 FC 3 Bit 2 FC 4 Bit 3 FC 5 Bit 4 ... FC 16 Bit 15</p> <p>Changes to the register value can only be made if the watchdog is deactivated. The bit pattern stored in the register defines the function codes that trigger the watchdog. Some function codes are not supported. For those the watchdog will not be triggered even if another Modbus device transmits one of them. When switching the watchdog type from "Standard" to "Alternative", the coding mask is reset to default value 0xFFFF.</p>

Table 136: Register Address 0x1002

Register address 0x1002 (4098 _{dec})	
Value	Watchdog function coding mask, function code 17...32, WD_FCM_17_32
Access	Read/write
Default	0xFFFF
Description	<p>Same function as above, however, with the function codes 17 to 32.</p> <p>FC 17 Bit 0 FC 18 Bit 1 ... FC 32 Bit 15</p> <p>These codes are currently not supported, for this reason the default value should not be changed. Changes to the register value can only be made if the watchdog is deactivated. It is not possible to modify this value while the watchdog is running.</p>

Table 137: Register Address 0x1003

Register address 0x1003 (4099 _{dec})	
Value	Watchdog trigger, WD_TRIGGER
Access	Read/write
Standard	0x0000
Description	<p>This register is used for an alternative trigger method. The watchdog is triggered by writing different values in this register. Values following each other must differ in size. Writing of a value not equal to zero starts the watchdog after a Power-on. For a restart the written value must necessarily be unequal the before written value! A watchdog fault is reset and writing process data is possible again.</p>

Table 138: Register Address 0x1004

Register address 0x1004 (4100 _{dec})	
Value	Minimum current trigger time, WD_AC_TRG_TIME
Access	Read
Standard	0xFFFF
Description	This register saves the minimum current watchdog trigger time. For user this register is irrelevant.

Table 139: Register Address 0x1005

Register address 0x1005 (4101 _{dec})	
Value	Stop watchdog, WD_AC_STOP_MASK
Access	Read/write
Standard	0x0000
Description	<p>The watchdog is stopped if here the value 0xAAAA is written first, followed by 0x5555. The watchdog fault reaction is blocked. A watchdog fault is reset and writing on the process data is possible again.</p>

Table 140: Register Address 0x1006

Register address 0x1006 (4102 _{dez})	
Value	While watchdog is running, WD_RUNNING
Access	Read
Standard	0x0000
Description	Current watchdog status. at 0x0000: Watchdog not active at 0x0001: Watchdog active at 0x0002: Watchdog exhausted.

Table 141: Register Address 0x1007

Register address 0x1007 (4103 _{dez})	
Value	Restart watchdog, WD_RESTART
Access	Read/write
Standard	0x0000
Description	This register restarts the watchdog timer after time out by writing a value of 0x1 into it. If the watchdog was stopped before the time out, it is not restarted.

Table 142: Register Address 0x1008

Register address 0x1008 (4104 _{dez})	
Value	Simply stop watchdog, WD_AC_STOP_SIMPLE
Access	Read/write
Standard	0x0000
Description	This register stops the watchdog by writing the value 0xAA55 or 0x55AA into it. The watchdog timeout fault is deactivated and it is possible to write in the watchdog register again. If there is an existing watchdog fault, it is reset

Table 143: Register Address 0x1009

Register address 0x1009 (4105 _{dez})	
Value	Close Modbus socket after watchdog timeout
Access	Read/write
Standard	0x0000
Description	0: Modbus socket is not closed 1: Modbus socket is closed

Table 144: Register Address 0x100A

Register address 0x100A (4106 _{dez})	
Value	Watchdog type Standard/Alternative
Access	Read/write
Standard	0x0000
Description	0: Modbus watchdog type "Standard" 1: Modbus watchdog type "Alternative"

The length of each register is 1 word; i.e., with each access only one word can be written or read. Following are two examples of how to set the value for a time overrun:

Setting the watchdog for a timeout of more than 1 second:

1. Write 0x000A in the register for time overrun (0x1000).
Register 0x1000 works with a multiple of 100 ms;
 $1\text{ s} = 1000\text{ ms}$; $1000\text{ ms} / 100\text{ ms} = 10_{\text{dec}} = A_{\text{hex}}$
2. Use the function code 5 to write $0x0010 (= 2^{(5-1)})$ in the coding mask (register 0x1001).

Table 145: Starting Watchdog

FC	FC16	FC15	FC14	FC13	FC12	FC11	FC10	FC9	FC8	FC7	FC6	FC5	FC4	FC3	FC2	FC1
Bit	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
bin	0	0	0	0	0	0	0	0	0	0	0	1	0	0	0	0
hex	0				0				1				0			

Function code 5 (writing a digital output bit) continuously triggers the watchdog to restart the watchdog timer again and again within the specified time. If time between requests exceeds 1 second, a watchdog timeout error occurs.

3. To stop the watchdog, write the value 0xAA55 or 0x55AA into 0x1008 (Simply Stop Watchdog register, WD_AC_STOP_SIMPLE).

Setting the watchdog for a timeout of 10 minutes or more:

1. Write 0x1770 ($= 10 \cdot 60 \cdot 1000\text{ ms} / 100\text{ ms}$) in the register for time overrun (0x1000).
(Register 0x1000 works with a multiple of 100 ms;
 $10\text{ min} = 600,000\text{ ms}$; $600,000\text{ ms} / 100\text{ ms} = 6000_{\text{dec}} = 1770_{\text{hex}}$)
2. Write 0x0001 in the watchdog trigger register (0x1003) to start the watchdog.
3. Write different values (e.g., counter values 0x0000, 0x0001) in the watchdog to trigger register (0x1003).

Values following each other must differ in size. Writing of a value not equal to zero starts the watchdog. Watchdog faults are reset and writing process data is possible again.

4. To stop the watchdog, write the value 0xAA55 or 0x55AA into 0x1008 (Simply Stop Watchdog register, WD_AC_STOP_SIMPLE).

Table 146: Register Address 0x100B

Register address 0x100B (4107 _{dez})	
Value	Save watchdog parameter
Access	Write
Standard	0x0000
Description	With writing of '0x55AA' or '0xAA55' in register 0x100B the registers 0x1000, 0x1001, 0x1002 are set on remanent.

11.2.5.4 Diagnostic Registers

The following registers can be read to determine errors in the node:

Table 147: Register Address 0x1020

Register address 0x1020 (4128 _{dec})	
Value	LedErrCode
Access	Read
Description	Declaration of the error code

Table 148: Register Address 0x1021

Register address 0x1021 (4129 _{dec})	
Value	LedErrArg
Access	Read
Description	Declaration of the error argument

11.2.5.5 Configuration Registers

The following registers contain configuration information of the connected modules:

Table 149: Register Address 0x1022

Register address 0x1022 (4130 _{dec})	
Value	CnfLen.AnalogOut
Access	Read
Description	Number of word-based outputs registers in the process image in bits (divide by 16 to get the total number of analog words)

Table 150: Register Address 0x1023

Register address 0x1023 (4131 _{dec})	
Value	CnfLen.AnalogInp
Access	Read
Description	Number of word-based inputs registers in the process image in bits (divide by 16 to get the total number of analog words)

Table 151: Register Address 0x1024

Register address 0x1024 (4132 _{dec})	
Value	CnfLen.DigitalOut
Access	Read
Description	Number of digital output bits in the process image

Table 152: Register Address 0x1025

Register address 0x1025 (4133 _{dec})	
Value	CnfLen.DigitalInp
Access	Read
Description	Number of digital input bits in the process image

Table 153: Register Address 0x1029

Register Address 0x1029 (4137 _{dec}) with 9 Words		
Value	MODBUS TCP statistics	
Access	Read/write	
Description	<div> <div>1 word SlaveDeviceFailure</div> <div>→ local bus error, fieldbus error by activated watchdog</div> </div> <div> <div>1 word BadProtocol</div> <div>→ error in the MODBUS TCP header</div> </div> <div> <div>1 word BadLength</div> <div>→ Wrong telegram length</div> </div> <div> <div>1 word BadFunction</div> <div>→ Invalid function code</div> </div> <div> <div>1 word BadAddress</div> <div>→ Invalid register address</div> </div> <div> <div>1 word BadData</div> <div>→ Invalid value</div> </div> <div> <div>1 word TooManyRegisters</div> <div>→ Number of the registers which can be worked on is too large, Read/Write 125/100</div> </div> <div> <div>1 word TooManyBits</div> <div>→ Number of the coils which can be worked on is too large, Read/Write 2000/800</div> </div> <div> <div>1 word ModTcpMessageCounter</div> <div>→ Number of received MODBUS/TCP requests</div> </div> <div> <div>By writing 0xAA55 or 0x55AA the register is reset.</div> </div>	

Table 154: Register Address 0x102A

Register address 0x102A (4138 _{dec}) with a word count of 1	
Value	MODBUS/TCP connections
Access	Read
Description	Number of TCP connections

Table 155: Register Address 0x102B

Register Address 0x102B (4139 _{dec}) with a Word Count of up to 1	
Value	Local bus reset
Access	Write
Description	Writing of this register restarts the local bus

Table 156: Register Address 0x1030

Register address 0x1030 (4144 _{dec}) with a word count of 1	
Value	Configuration MODBUS/TCP time-out
Access	Read/write
Default	0x0258 (600 decimal)
Description	This is the maximum number of milliseconds the fieldbus coupler will allow a MODBUS/TCP connection to stay open without receiving a MODBUS request. Upon time-out, idle connection will be closed. Outputs remain in last state. Default value is 600 ms (60 seconds), the time base is 100 ms, the minimal value is 100 ms. If the value is set to '0', the timeout is disabled. On this connection, the watchdog is triggered with a request.

Table 157: Register Address 0x1031

Register address 0x1031 (4145 _{dec}) with a word count of 3	
Value	Read the MAC-ID of the controller
Access	Read
Description	This register gives the MAC-ID, with a length of 3 words

Table 158: Register Address 0x1037

Register address 0x1037 (4151 _{dec}) with a word count of 3	
Value	Configuration of Modbus Response Delay Time
Access	Read/write
Default	0x0000
Description	This register saves the value for the Modbus Response Delay Time for a Modbus connection. The time base is 1 ms. On the Modbus TCP connection, the response will be delayed by the inscribed time.

Table 159: Register Address 0x1038

Register address 0x1038 (4152 _{dec}) with a word count of 4	
Value	Configuration of Modbus TOS
Access	Read/write
Default	0x0000
Description	This register saves the value for the Modbus Response Delay Time for a Modbus TCP connection. The time base is 1 ms. On the Modbus TCP connection, the response will be delayed by the inscribed time. Range 0 ... 63

Table 160: Register Address 0x1050

Register address 0x1050 (4176 _{dec}) with a word count of 3	
Value	Diagnosis of the connected I/O modules
Access	Read
Description	<p>Diagnosis of the connected I/O modules, length 3 words</p> <p>Word 1: Number of the module</p> <p>Word 2: Number of the channel</p> <p>Word 3: Diagnosis</p> <p>Mapping Diagnosis (Word 3)</p> <p>Bit 0: Underrange</p> <p>Bit 1: Overrange</p> <p>Bit 2: User underrange</p> <p>Bit 3: User overrange</p> <p>Bit 4: Short circuit</p> <p>Bit 5: Wire break</p> <p>Bit 6: Collective failure</p>

11.2.5.6 Constant Registers

The following registers contain constants, which can be used to test communication with the master:

Table 161: Register Address 0x2000

Register address 0x2000 (8192 _{dec})	
Value	Zero, GP_ZERO
Access	Read
Description	Constant with zeros

Table 162: Register Address 0x2001

Register address 0x2001 (8193 _{dec})	
Value	Ones, GP_ONES
Access	Read
Description	<p>Constant with ones</p> <ul style="list-style-type: none"> • -1 if this is declared as "signed int" • MAXVALUE if it is declared as "unsigned int"

Table 163: Register Address 0x2002

Register address 0x2002 (8194 _{dec})	
Value	1,2,3,4, GP_1234
Access	Read
Description	<p>This constant value is used to test the Intel/Motorola format specifier. If the master reads a value of 0x1234, then with Intel format is selected – this is the correct format. If 0x3412 appears, Motorola format is selected.</p>

Table 164: Register Address 0x2003

Register address 0x2003 (8195 _{dec})	
Value	Mask 1, GP_AAAA
Access	Read
Description	This constant is used to verify that all bits are accessible to the fieldbus master. This will be used together with register 0x2004.

Table 165: Register Address 0x2004

Register address 0x2004 (8196 _{dec})	
Value	Mask 1, GP_5555
Access	Read
Description	This constant is used to verify that all bits are accessible to the fieldbus master. This will be used together with register 0x2003.

Table 166: Register Address 0x2005

Register address 0x2005 (8197 _{dec})	
Value	Maximum positive number, GP_MAX_POS
Access	Read
Description	Constant in order to control arithmetic.

Table 167: Register Address 0x2006

Register address 0x2006 (8198 _{dec})	
Value	Maximum negative number, GP_MAX_NEG
Access	Read
Description	Constant in order to control arithmetic

Table 168: Register Address 0x2007

Register address 0x2007 (8199 _{dec})	
Value	Maximum half positive number, GP_HALF_POS
Access	Read
Description	Constant in order to control arithmetic

Table 169: Register Address 0x2008

Register address 0x2008 (8200 _{dec})	
Value	Maximum half negative number, GP_HALF_NEG
Access	Read
Description	Constant in order to control arithmetic

11.2.5.7 Firmware Information Registers

The following registers contain information on the firmware of the controller:

Table 170: Register Address 0x2010

Register address 0x2010 (8208 _{dec}) with a word count of 1	
Value	Revision, INFO_REVISION
Access	Read
Description	Firmware index, e.g. 0x0005 for version 5

Table 171: Register Address 0x2011

Register address 0x2011 (8209 _{dec}) with a word count of 1	
Value	Series code, INFO_SERIES
Access	Read
Description	WAGO serial number, e.g. 0x02EE (750 dec.) for WAGO-I/O-SYSTEM 750

Table 172: Register Address 0x2012

Register address 0x2012 (8210 _{dec}) with a word count of 1	
Value	Order number, INFO_ITEM
Access	Read
Description	First part of WAGO order number, e.g. 0x0349 (841 dec.) for the controller 750-841 or 0x0155 (341 dec.) for the coupler 750-341 etc.

Table 173: Register Address 0x2013

Register address 0x2013 (8211 _{dec}) with a word count of 1	
Value	Major sub item code, INFO_MAJOR
Access	Read
Description	Firmware version major revision

Table 174: Register Address 0x2014

Register address 0x2014 (8212 _{dec}) with a word count of 1	
Value	Minor sub item code, INFO_MINOR
Access	Read
Description	Firmware version minor revision

Table 175: Register Address 0x2020

Register address 0x2020 (8224 _{dec}) with a word count of up to 16	
Value	Description, INFO_DESCRIPTION
Access	Read
Description	Information on the controller, 16 words

Table 176: Register Address 0x2021

Register address 0x2021 (8225 _{dec}) with a word count of up to 8	
Value	Description, INFO_DESCRIPTION
Access	Read
Description	Time of the firmware version, 8 words

Table 177: Register Address 0x2022

Register address 0x2022 (8226 _{dec}) with a word count of up to 8	
Value	Description, INFO_DATE
Access	Read
Description	Date of the firmware version, 8 words

Table 178: Register Address 0x2023

Register address 0x2023 (8227 _{dec}) with a word count of up to 32	
Value	Description, INFO_LOADER_INFO
Access	Read
Description	Information to the programming of the firmware, 32 words

Table 179: Register Address 0x2030

Register address 0x2030 (8240 _{dec}) with a word count of up to 65																
Value	Description of the connected I/O modules															
Access	Read module 0...64															
Description	Length 1...65 words															
	The node configuration can be specified in the 0x2030 register. The item number of the I/O modules or fieldbus coupler/controller (without leading 750) is listed in order. Each module is represented in a word. Because order numbers cannot be read out of digital modules, a code is displayed for them, as defined below:															
	Bit position 0				→				Input module							
	Bit position 1				→				Output module							
	Bit position 2...7				→				Not used							
	Bit position 8...14				→				Module size in bits							
	Bit position 15				→				Designation digital module							
	Examples:															
	4 Channel Digital Input Module = 0x8401															
	Bit	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1
Code	1	0	0	0	0	1	0	0	0	0	0	0	0	0	0	1
Hex	8				4				0				1			
2 Channel Digital Output Module = 0x8202																
Bit	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Code	1	0	0	0	0	0	1	0	0	0	0	0	0	0	1	0
Hex	8				2				0				2			

Table 180: Register Address 0x2031

Register address 0x2031 (8241 _{dec}) with a word count of up to 65																
Value	Description of the connected I/O modules															
Access	Read modules 65...128															
Description	Length 1...64 words															
	The node configuration can be specified in the 0x2031 register. The item number of the I/O modules or fieldbus coupler/controller (without leading 750) is listed in order. Because order numbers cannot be read out of digital modules, a code is displayed for them, as defined below:															
	Bit position 0 → Input module															
	Bit position 1 → Output module															
	Bit position 2...7 → Not used															
	Bit position 8...14 → Module size in bits															
	Bit position 15 → Designation digital module															

Table 181: Register Address 0x2032

Register address 0x2032 (8242 _{dec}) with a word count of up to 65																
Value	Description of the connected I/O modules															
Access	Read modules 129...192															
Description	Length 1...64 words															
	The node configuration can be specified in the 0x2032 register. The item number of the I/O modules or fieldbus coupler/controller (without leading 750) is listed in order. Because order numbers cannot be read out of digital modules, a code is displayed for them, as defined below:															
	Bit position 0 → Input module															
	Bit position 1 → Output module															
	Bit position 2...7 → Not used															
	Bit position 8...14 → Module size in bits															
	Bit position 15 → Designation digital module															

Table 182: Register Address 0x2033

Register address 0x2033 (8243 _{dec}) with a word count of up to 65	
Value	Description of the connected I/O modules
Access	Read modules 193 ... 255
Description	<p>Length 1...63 words</p> <p>The node configuration can be specified in the 0x2033 register. The item number of the I/O modules or fieldbus coupler/controller (without leading 750) is listed in order. Because order numbers cannot be read out of digital modules, a code is displayed for them, as defined below:</p> <p>Bit position 0 → Input module</p> <p>Bit position 1 → Output module</p> <p>Bit position 2...7 → Not used</p> <p>Bit position 8...14 → Module size in bits</p> <p>Bit position 15 → Designation digital module</p>

Table 183: Register Address 0x2035

Register address 0x2035 (8245 _{dec})	
Value	Process image settings
Access	Read/Write
Description	<p>For internal use only.</p> <div style="background-color: #0070C0; color: white; text-align: center; padding: 5px;">NOTICE</div> <p>No access to I/O data when changes are made!</p> <p>Note that this register is intended for internal use only.</p> <p>Changes can mean that access to the I/O data is no longer possible!</p>

Table 184: Register Address 0x2036

Register address 0x2036 (8246 _{dec}) with a word count of up to 17							
Value	Fieldbus coupler/controller diagnostics						
Access	Read						
Description	Register allocation	0.0	Fieldbus error			0/1	0
		0.1	Internal bus error			0/1	0
		0.2	I/O module error			0/1	0
		0.3	Fieldbus coupler/controller error			0/1	0
	Register number	1	Error code in the event of a configuration error			0 - 65535	
	Register number	2	0.1=0	Bit length of Internal bus		0 - 65535	
			0.1=1	Error code in the event of an internal bus error			
	Register number	3	0.1=0	Number of I/O modules			
			0.1=1	I/O module number, at which the error occurred			
	Register number	4	Error code in the event of an internal bus error				
	Register number	5	Internal bus command error Counter				
		6	Internal bus command error „Quality“				
		7	Internal bus command error „Quality-Overall“				
	Register number	8	Internal bus timeout error Counter				
		9	Internal bus timeout error „Quality“				
		10	Internal bus timeout error „Quality-Overall“				
	Register number	11	Internal bus input data error Counter				
		12	Internal bus input data error „Quality“				
		13	Internal bus input data error „Quality -Overall“				
	Register number	14	Internal bus output data error Counter				
		15	Internal bus output data error „Quality“				
		16	Internal bus output data error „Quality-Overall“				

Table 185: Register Address 0x2040

Register address 0x2040 (8256 _{dec})	
Value	Implement a software reset
Access	Write (Write sequence 0xAA55 or 0x55AA)
Description	The fieldbus coupler/controller performs a restart by writing the values 0xAA55 or 0x55AA.

Table 186: Register Address 0x2043

Register address 0x2043 (8259 _{dec})	
Value	0x55AA
Access	Write
Description	Factory settings The default settings are applied after the next reset, e.g., software reset via Modbus register address 0x2040.

12 I/O Modules

12.1 Overview

For modular applications with the WAGO I/O SYSTEM 750, different types of I/O modules are available

- Digital Input Modules
- Digital Output Modules
- Analog Input Modules
- Analog Output Modules
- Communication Modules, Supply and Segment Modules
- Function and Technology Modules

For detailed information on the I/O modules and the module variations, refer to the manuals for the I/O modules.

You will find these manuals on the WAGO web pages under www.wago.com.



Information

More Information about the WAGO I/O SYSTEM

Current information on the modular WAGO I/O SYSTEM is available in the Internet under: www.wago.com.

12.2 Process Data Architecture for Modbus TCP

With some I/O modules, the structure of the process data is fieldbus specific.

Modbus TCP process image uses a word structure (with word alignment). The internal mapping method for data greater than one byte conforms to the Intel format.

The following section describes the process image for various WAGO-I/O-SYSTEM 750 XTR I/O modules with Modbus TCP.

NOTICE

Equipment damage due to incorrect address!

Depending on the specific position of an I/O module in the fieldbus node, the process data of all previous byte or bit-oriented modules must be taken into account to determine its location in the process data map.

12.2.1 Digital Input Modules

The digital input modules provide a process value of one bit per channel, which indicates the status of the respective channel. These bits are mapped into the input process image.

Some digital input modules have an additional diagnostic bit per channel in the input process image. The diagnostic bit detects faults (e.g., wire breakage, overloads and/or short circuits).

If analog input modules are in the node, the digital data is grouped in bytes and added to the analog input data in the process image.

12.2.1.1 2-Channel Digital Input Modules

Table 187: 2-Channel Digital Input Modules

Input Process Image							
Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
						Data bit DI 2 Channel 2	Data bit DI 1 Channel 1

12.2.1.2 8-Channel Digital Input Modules

Table 188: 8-Channel Digital Input Modules

Input Process Image							
Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Data bit DI 8 Channel 8	Data bit DI 7 Channel 7	Data bit DI 6 Channel 6	Data bit DI 5 Channel 5	Data bit DI 4 Channel 4	Data bit DI 3 Channel 3	Data bit DI 2 Channel 2	Data bit DI 1 Channel 1

12.2.1.3 16-Channel Digital Input Modules

Table 189: 16-Channel Digital Input Modules

Input Process Image															
Bit 15	Bit 14	Bit 13	Bit 12	Bit 11	Bit 10	Bit 9	Bit 8	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Data bit DI 16 Channel 16	Data bit DI 15 Channel 15	Data bit DI 14 Channel 14	Data bit DI 13 Channel 13	Data bit DI 12 Channel 12	Data bit DI 11 Channel 11	Data bit DI 10 Channel 10	Data bit DI 9 Channel 9	Data bit DI 8 Channel 8	Data bit DI 7 Channel 7	Data bit DI 6 Channel 6	Data bit DI 5 Channel 5	Data bit DI 4 Channel 4	Data bit DI 3 Channel 3	Data bit DI 2 Channel 2	Data bit DI 1 Channel 1

12.2.2 Digital Output Modules

The digital output modules provide one bit as the process value per channel that indicates the status of the respective channel. These bits are mapped into the output process image.

Some digital input modules have an additional diagnostic bit per channel in the input process image. The diagnostic bit detects faults (e.g., wire breakage, overloads and/or short circuits). For some I/O modules, the data bits also have to be evaluated with the set diagnostic bit.

If analog output modules are in the node, the digital data is grouped in bytes and added after the analog output data in the output process image.

12.2.2.1 2-Channel Digital Output Modules

Table 190: 2-Channel Digital Output Modules

Output Process Image							
Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
						Controls DO 2 Channel 2	Controls DO 1 Channel 1

12.2.2.2 2-Channel Digital Output Modules with Diagnostics and Input Data

In addition to the 2-bit process values in the output process image, the digital output modules provide 2 bits of data in the input process image. A diagnostic bit for each output channel indicates an overload, short circuit or wire breakage.

Table 191: 2-Channel Digital Output Modules with Diagnostics and Input Data

Input Process Image							
Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
						Diag. bit S 2 Channel 2	Diag. bit S 1 Channel 1

Output Process Image							
Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
						Controls DO 2 Channel 2	Controls DO 1 Channel 1

12.2.2.3 4-Channel Digital Output Modules

Table 192: 4-Channel Digital Output Modules

Output Process Image							
Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
				Controls DO 4 Channel 4	Controls DO 3 Channel 3	Controls DO 2 Channel 2	Controls DO 1 Channel 1

12.2.2.4 4-Channel Digital Output Modules with Diagnostics and Input Data

In addition to the 4-bit process values in the output process image, the digital output modules provide 4 bits of data in the input process image. A diagnostic bit for each output channel indicates an overload, short circuit or wire breakage.

Table 193: 4-Channel Digital Output Modules with Diagnostics and Input Data

Input Process Image							
Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
				Diag. bit S 4 Channel 4	Diag. bit S 3 Channel 3	Diag. bit S 2 Channel 2	Diag. bit S 1 Channel 1

Diagnostic bit S = '0'

no error

Diagnostic bit S = '1'

wire break, short circuit or overload

Output Process Image							
Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
				Controls DO 4 Channel 4	Controls DO 3 Channel 3	Controls DO 2 Channel 2	Controls DO 1 Channel 1

12.2.2.5 8-Channel Digital Output Modules

Table 194: 8-Channel Digital Output Modules

Output Process Image							
Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Controls DO 8 Channel 8	Controls DO 7 Channel 7	Controls DO 6 Channel 6	Controls DO 5 Channel 5	Controls DO 4 Channel 4	Controls DO 3 Channel 3	Controls DO 2 Channel 2	Controls DO 1 Channel 1

12.2.2.6 8-Channel Digital Output Modules with Diagnostics and Input Data

In addition to the 8-bit process values in the output process image, the digital output modules provide 8 bits of data in the input process image. A diagnostic bit for each output channel indicates an overload, short circuit or wire breakage.

Table 195: 8-Channel Digital Output Modules with Diagnostics and Input Data

Input Process Image							
Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Diag. bit S 8 Channel 8	Diag. bit S 7 Channel 7	Diag. bit S 6 Channel 6	Diag. bit S 5 Channel 5	Diag. bit S 4 Channel 4	Diag. bit S 3 Channel 3	Diag. bit S 2 Channel 2	Diag. bit S 1 Channel 1

Diagnostic bit S = '0'

no error

Diagnostic bit S = '1'

wire break, short circuit or overload

Output Process Image							
Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Controls DO 8 Channel 8	Controls DO 7 Channel 7	Controls DO 6 Channel 6	Controls DO 5 Channel 5	Controls DO 4 Channel 4	Controls DO 3 Channel 3	Controls DO 2 Channel 2	Controls DO 1 Channel 1

12.2.2.7 16-Channel Digital Output Modules

Table 196: 16-Channel Digital Output Modules

Output Process Image															
Bit 15	Bit 14	Bit 13	Bit 12	Bit 11	Bit 10	Bit 9	Bit 8	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Con- trols DO 16 Chan- nel 16	Con- trols DO 15 Chan- nel 15	Con- trols DO 14 Chan- nel 14	Con- trols DO 13 Chan- nel 13	Con- trols DO 12 Chan- nel 12	Con- trols DO 11 Chan- nel 11	Con- trols DO 10 Chan- nel 10	Con- trols DO 9 Chan- nel 9	Con- trols DO 8 Chan- nel 8	Con- trols DO 7 Chan- nel 7	Con- trols DO 6 Chan- nel 6	Con- trols DO 5 Chan- nel 5	Con- trols DO 4 Chan- nel 4	Con- trols DO 3 Chan- nel 3	Con- trols DO 2 Chan- nel 2	Con- trols DO 1 Chan- nel 1

12.2.3 Analog Input Modules

The hardware of an analog input module has 16 bits of measured analog data per channel and 8 bits of control/status.

However, the coupler/controller with MODBUS/TCP does not have access to the 8 control/status bits.

Therefore, the coupler/controller with MODBUS/TCP can only access the 16 bits of analog data per channel, which are grouped as words and mapped in Intel format in the Input Process Image.

When digital input modules are also present in the node, the analog input data is always mapped into the Input Process Image in front of the digital data.



Information

Information on the structure of control and status bytes

For detailed information on the structure of a particular I/O module's control/status bytes, please refer to that module's manual. Manuals for each module can be found on the Internet at www.wago.com.

12.2.3.1 2-Channel Analog Input Modules

Table 197: 2-Channel Analog Input Modules

Input Process Image			
Offset	Byte designation		Remark
	High byte	Low byte	
0	D1	D0	Measured value channel 1
1	D3	D2	Measured value channel 2

12.2.3.2 4-Channel Analog Input Modules

Table 198: 4-Channel Analog Input Modules

Input process image			
Offset	Byte designation		Remark
	High byte	Low byte	
0	D1	D0	Measured value channel 1
1	D3	D2	Measured value channel 2
2	D5	D4	Measured value channel 3
3	D7	D6	Measured value channel 4

12.2.3.3 -3-Phase Power Measurement Module

The above Analog Input Modules have a total of 9 bytes of user data in both the Input and Output Process Image (6 bytes of data and 3 bytes of control/status). The following tables illustrate the Input and Output Process Image, which has a total of 6 words mapped into each image. Word alignment is applied.

Table 199: 3-Phase Power Measurement Module

Input Process Image			
Offset	Byte Destination		Description
	High Byte	Low Byte	
0	-	S0	Status byte 0
1	D1	D0	Input data word 1
2	-	S1	Status byte 1
3	D3	D2	Input data word 2
4	-	S2	Status byte 2
5	D5	D4	Input data word 3

Output Process Image			
Offset	Byte Destination		Description
	High Byte	Low Byte	
0	-	C0	Control byte 0
1	D1	D0	Output data word 1
2	-	C1	Control byte 1
3	D3	D2	Output data word 2
4	-	C2	Control byte 2
5	D5	D4	Output data word 3

12.2.4 Analog Output Modules

The hardware of an analog output module has 16 bits of measured analog data per channel and 8 bits of control/status. However, the coupler/controller with MODBUS/TCP does not have access to the 8 control/status bits. Therefore, the coupler/controller with MODBUS/TCP can only access the 16 bits of analog data per channel, which are grouped as words and mapped in Intel format in the Output Process Image.

When digital output modules are also present in the node, the analog output data is always mapped into the Output Process Image in front of the digital data.



Information

Information on the structure of control and status bytes

For detailed information on the structure of a particular I/O module's control/status bytes, please refer to that module's manual. Manuals for each module can be found on the Internet at www.wago.com.

12.2.4.1 2 Channel Analog Output Modules

Table 200: 2 Channel Analog Output Modules

Output Process Image			
Offset	Byte Destination		Description
	High Byte	Low Byte	
0	D1	D0	Output Value Channel 1
1	D3	D2	Output Value Channel 2

12.2.4.2 4 Channel Analog Output Modules

Table 201: 4 Channel Analog Output Modules

Output Process Image			
Offset	Byte Destination		Description
	High Byte	Low Byte	
0	D1	D0	Output Value Channel 1
1	D3	D2	Output Value Channel 2
2	D5	D4	Output Value Channel 3
3	D7	D6	Output Value Channel 4

12.2.5 Specialty Modules

In addition to the data bytes, the control/status byte is also displayed for select I/O modules. This byte is used for the bi-directional data exchange of the I/O module with the higher-level control system.

The control byte controls the I/O module's behavior and operation. The status byte reports the I/O module's status. It is possible to set the counter with the control byte or indicate a range overflow/underflow with the status byte.

The control/status byte is always in the low byte in the process image.

Note



Information for the control/status byte development

Please refer to the corresponding description of the I/O modules for the structure of the control/status bytes. You can find a manual with the relevant I/O module description at: <http://www.wago.com>.

12.2.5.1 Serial Interfaces with Alternative Data Format

Note



The process image depends on the parameterized operating mode!

The operating mode of the configurable I/O module can be set. Based on the operating mode, the process image of these I/O modules is then the same as that of the respective version.

The I/O modules with serial interface that are set to the alternative data format occupy 4 bytes of user data in the input and output area of the process image, 3 data bytes and one additional control/status byte. Two words are assigned in the process image via word alignment.

Table 202: Serial interfaces with alternative data format

Input and Output Process Image				
Offset	Byte designation		Remark	
	High byte	Low byte		
0	D0	C/S	Data byte	Control/status byte
1	D2	D1	Data bytes	

12.2.5.2 SSI Transmitter Interface I/O Modules**Note****The process image depends on the parameterized operating mode!**

The operating mode of the configurable I/O module can be set. Based on the operating mode, the process image of these I/O modules is then the same as that of the respective version.

In the input process image, SSI transmitter interface modules with status occupy 4 data bytes. Two words are assigned in the process image via word alignment.

Table 203: SSI transmitter interface modules with alternative data format

Input process image			
Offset	Byte designation		Remark
	High byte	Low byte	
0	D1	D0	Data bytes
1	D3	D2	

12.2.5.3 Distance and Angle Measurement

The incremental encoder interface module occupies 6 bytes of user data in the input and output area of the process image, 4 data bytes and two additional control/status bytes. Four words are assigned in the process image via word alignment.

Table 204: Incremental Encoder Interface

Input and Output Process Image			
Offset	Byte designation		Remark
	High byte	Low byte	
0	-	C0/S0	Control/status byte of channel 1
1	D1	D0	Data values of channel 1
2	-	C1/S1	Control/status byte of channel 2
3	D3	D2	Data values of channel 2

12.2.5.4 Counter Modules

Operating modes:

- “Up/Down Counter / 100 kHz”,
- “Up Counter / Enable Input”,
- “Peak Time Counter”
- “Frequency Counter”
- “Up/Down Counter / Signal Outputs (DO)”

The above Counter Modules have a total of 5 bytes of user data in both the Input and Output Process Image (4 bytes of counter data and 1 byte of control/status). The counter value is supplied as 32 bits. The following tables illustrate the Input

and Output Process Image, which has a total of 3 words mapped into each image. Word alignment is applied.

Table 205: Counter Modules

Input Process Image			
Offset	Byte Designation		Description
	High Byte	Low Byte	
0	-	S	Status byte
1	D1	D0	Counter value
2	D3	D2	

Output Process Image			
Offset	Byte Designation		Description
	High Byte	Low Byte	
0	-	C	Control byte
1	D1	D0	Counter setting value
2	D3	D2	

Special case: Operating mode “2 Up Counter / 16 Bit / 5 kHz”

The above Counter Modules have a total of 5 bytes of user data in both the Input and Output Process Image (4 bytes of counter data and 1 byte of control/ status). The two counter values are supplied as 32 bits. The following tables illustrate the Input and Output Process Image, which has a total of 3 words mapped into each image. Word alignment is applied.

Table 206: Counter Module, Operating mode “2 Up Counter/16 Bit / 5 kHz”

Input Process Image			
Offset	Byte Designation		Description
	High Byte	Low Byte	
0	-	S	Status byte
1	D1	D0	Counter Value of Counter 1
2	D3	D2	Counter Value of Counter 2

Output Process Image			
Offset	Byte Designation		Description
	High Byte	Low Byte	
0	-	C	Control byte
1	D1	D0	Counter Setting Value of Counter 1
2	D3	D2	Counter Setting Value of Counter 2

12.2.5.5 CAN Gateway

The process image size of the CAN Gateway can be set in the specified sizes of 8, 12, 16, 20, 24, 32, 40 or 48 bytes.

The CAN Gateway has an acyclic communication channel (Mailbox) in the process image.

This is used to transmit configuration, parameterization and diagnostic data.

The length of the first acyclic channel can be set between 2 and a maximum of x bytes ($x = \text{total PA size} - 3$). This is followed by the CAN user data area, where CAN telegrams are transmitted via the "Mailbox 2.0" communication mechanism in the operating modes "Sniffer Mode" and "Transparent Mode". In the operating mode "Mapped Mode", in this area transmitted and received CAN telegrams can be mapped to the process image without using any protocol.

The operating mode and also the mailbox and the process image sizes are set with the startup tool WAGO-I/O-CHECK.

Table 207: CAN Gateway

Input and Output Process Image					
Process image size	Offset	Byte Designation		Description	
		High Byte	Low Byte		
8 bytes	0	C/D_MBX	C0/S0	Config/Diag Mailbox	Control/Status byte
	1	C/D_MBX / CAN_X	C/D_MBX	Config/Diag Mailbox (1 ... 44 bytes)/ CAN user data Mailbox (5 ... 45 bytes) **) bzw. Toggle-Byte +CAN-Nutzdaten (4-44 Byte) ***)	
	2	C/D_MBX / CAN_X	C/D_MBX / CAN_X		
	3	C/D_MBX / CAN_X	C/D_MBX / CAN_X		
12 bytes	4	C/D_MBX / CAN_X	C/D_MBX / CAN_X		
	5	C/D_MBX / CAN_X	C/D_MBX / CAN_X		
16 bytes	6	C/D_MBX / CAN_X	C/D_MBX / CAN_X		
	7	C/D_MBX / CAN_X	C/D_MBX / CAN_X		
20 bytes	8	C/D_MBX / CAN_X	C/D_MBX / CAN_X		
	9	C/D_MBX / CAN_X	C/D_MBX / CAN_X		
24 bytes *	10	C/D_MBX / CAN_X	C/D_MBX / CAN_X		
	11	C/D_MBX / CAN_X	C/D_MBX / CAN_X		
32 bytes	12	C/D_MBX / CAN_X	C/D_MBX / CAN_X		
	...				
	15	C/D_MBX / CAN_X	C/D_MBX / CAN_X		
40 bytes	16	C/D_MBX / CAN_X	C/D_MBX / CAN_X		
	...				
	19	C/D_MBX / CAN_X	C/D_MBX / CAN_X		
48 bytes	20	C/D_MBX / CAN_X	C/D_MBX / CAN_X		
	21	C/D_MBX / CAN_X	C/D_MBX / CAN_X		
	22	C/D_MBX / CAN_X	C/D_MBX / CAN_X		
	23	CAN_X	CAN_X		

*) Factory Setting

**) Operating mode „Sniffer Mode“ and operating mode „Transparent Mode“

***) Operating mode „Mapped Mode“

12.2.6 System Modules

12.2.6.1 System Modules with Diagnostics

The intrinsically safe supply modules provide 2 bits of diagnostics in the Input Process Image for monitoring of the internal power supply.

Table 208: Intrinsically Safe Supply Modules with Diagnostics

Input Process Image							
Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
						Diagnostics bit S_out	Diagnostics bit S_in

The supply modules with fuse carrier and diagnostics provide 2 bits of diagnostics in the Input Process Image for monitoring of the internal power supply.

Table 209: Supply Modules with fuse Carrier and Diagnostics

Input Process Image							
Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
						Diagnostics bit S 2 Fuse	Diagnostics bit S 1 Fuse

13 Application Examples

13.1 Test of Modbus protocol and fieldbus nodes

You require a Modbus master to test the function of your fieldbus node. For this purpose, various manufacturers offer a range of PC applications that you can, in part, download from the Internet as free of charge demo versions.

One of the programs which is particularly suitable to test your ETHERNET TCP/IP fieldbus node, is for instance **ModScan** from Win-Tech.

Information



Additional Information

A free of charge demo version from ModScan32 and further utilities from Win-Tech can be found in the Internet under:

<http://www.win-tech.com/html/demos.htm>

ModScan32 is a Windows application that works as a Modbus master.

This program allows you to access the data points of your connected ETHERNET TCP/IP fieldbus node and to proceed with the desired changes.

Information



Additional Information

For a description example relating to the software operation, refer to:

<http://www.win-tech.com/html/modscan32.htm>

13.2 Visualization and Control using SCADA Software

This chapter is intended to give insight into how the WAGO ETHERNET fieldbus coupler/controller can be used for process visualization and control using standard user software.

There is a wide range of process visualization programs, called SCADA Software, from various manufacturers.

SCADA is the abbreviation for Supervisory Control and Data Acquisition.

It is a user-orientated tool used as a production information system in the areas of automation technology, process control and production monitoring.

The use of SCADA systems includes the areas of visualization and monitoring, data access, trend recording, event and alarm processing, process analysis and targeted intervention in a process (control).

The WAGO ETHERNET fieldbus node provides the required process input and output values.



Note

SCADA software has to provide a Modbus device driver and support Modbus TCP functions!

When choosing suitable SCADA software, ensure that it provides a Modbus device driver and supports the Modbus TCP functions in the coupler.

Visualization programs with Modbus device drivers are available from i.e. Wonderware, National Instruments, Think&Do or KEPware Inc., some of which are available on the Internet as demo versions.

The operation of these programs is very specific.
However, a few essential steps are described to illustrate the way an application can be developed using a WAGO ETHERNET fieldbus node and SCADA software in principle:

1. Load the Modbus ETHERNET driver and select Modbus ETHERNET
2. Enter the IP address for addressing the fieldbus node

At this point, some programs allow the user to give the node an alias name, i.e. to call the node "Measuring data". The node can then be addressed with this name.

3. Create a graphic object, such as a switch (digital) or a potentiometer (analog)

This object is displayed on the work area.

4. Link the object to the desired data point on the node by entering the following data:
 - Node address (IP address or alias name)
 - The desired Modbus function codes (register/bit read/write)
 - The Modbus address of the selected channel

Entry is program specific.

Depending on the user software the Modbus addressing of a bus module can be represented with up to 5 digits.

Example of the Modbus Addressing

In the case of SCADA Software Lookout from National Instruments the Modbus function codes are used with a 6 digit coding, whereby the first digit represents the Modbus table (0, 1, 3 or 4) and implicit the function code (see following table):

Table 210: Modbus Table and Function Codes

Modbus table	Modbus function code	
0	FC1 or FC15	Reading of input bits or writing of several output bits
1	FC2	Reading of several input bits
3	FC4 or FC 16	Reading of several input registers or writing of several output registers
4	FC3	Reading of several input registers

The following five digits specify the channel number (beginning with 1) of the consecutively numbered digital or analog input and/or output channels.

Examples:

- Reading/writing the first digital input: i.e. 0 0000 1
- Reading/writing the second analog input: i.e. 3 0000 2

Application Example:

Thus, the digital input channel 2 of the above node “Measuring data” can be read out with the input: “Measuring data. 0 0000 2”.

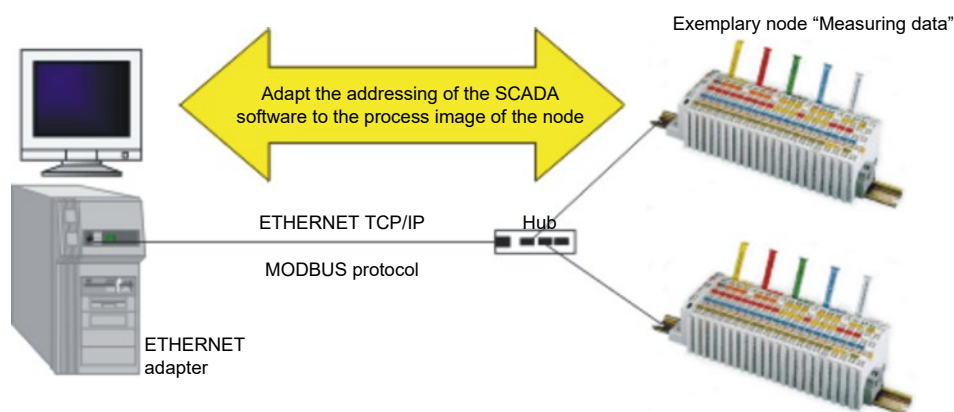


Figure 52: Example SCADA Software with Modbus Driver



Information

Additional Information

Please refer to the respective SCADA product manual for a detailed description of the particular software operation.

14 Use in Hazardous Environments

The **WAGO I/O System 750** (electrical equipment) is designed for use in Zone 2 hazardous areas and shall be used in accordance with the marking and installation regulations.

The following sections include both the general identification of components (devices) and the installation regulations to be observed. The individual subsections of the “Installation Regulations” section must be taken into account if the I/O module has the required approval or is subject to the range of application of the ATEX directive.

14.1 Marking Configuration Examples

14.1.1 Marking for Europe According to ATEX and IECEx

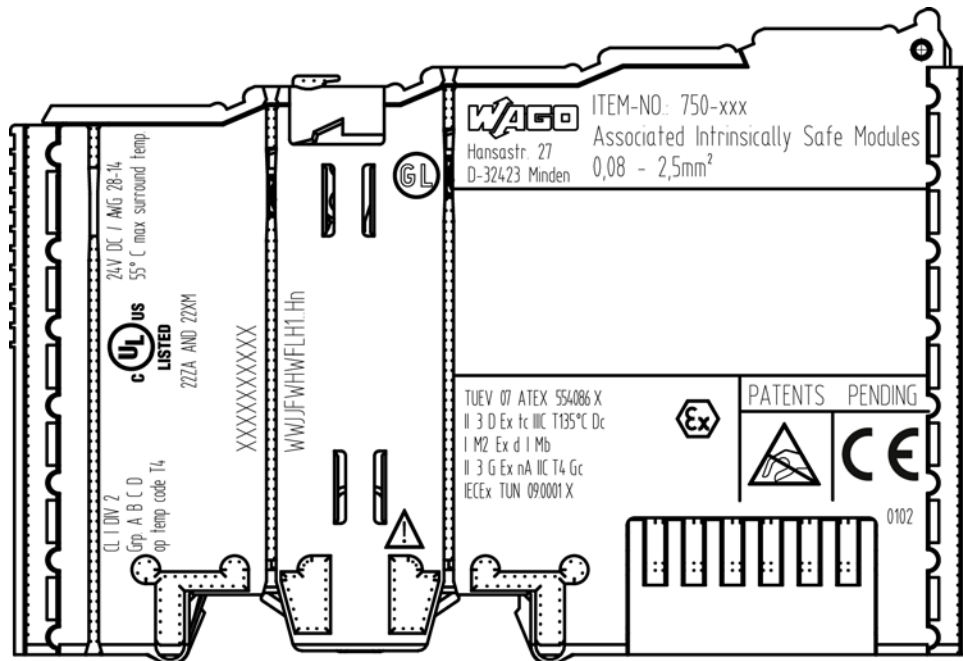


Figure 53: Marking Example According to ATEX and IECEx

TUEV 07 ATEX 554086 X
II 3 D Ex tc IIC T135°C Dc
I M2 Ex d I Mb
II 3 G Ex nA IIC T4 Gc
IECEx TUN 090001 X



Figure 54: Text Detail – Marking Example According to ATEX and IECEx

Table 211: Description of Marking Example According to ATEX and IECEx

Marking	Description
TUEV 07 ATEX 554086 X IECEx TUN 09.0001 X	Approving authority resp. certificate numbers
Dust	
II	Equipment group: All except mining
3 D	Category 3 (Zone 22)
Ex	Explosion protection mark
tc	Type of protection: Protection by enclosure
IIIC	Explosion group of dust
T135°C	Max. surface temperature of the enclosure (without a dust layer)
Dc	Equipment protection level (EPL)
Mining	
I	Equipment group: Mining
M2	Category: High level of protection
Ex	Explosion protection mark
d	Type of protection: Flameproof enclosure
I	Explosion group for electrical equipment for mines susceptible to firedamp
Mb	Equipment protection level (EPL)
Gases	
II	Equipment group: All except mining
3 G	Category 3 (Zone 2)
Ex	Explosion protection mark
nA	Type of protection: Non-sparking equipment
IIC	Explosion group of gas and vapours
T4	Temperature class: Max. surface temperature 135 °C
Gc	Equipment protection level (EPL)

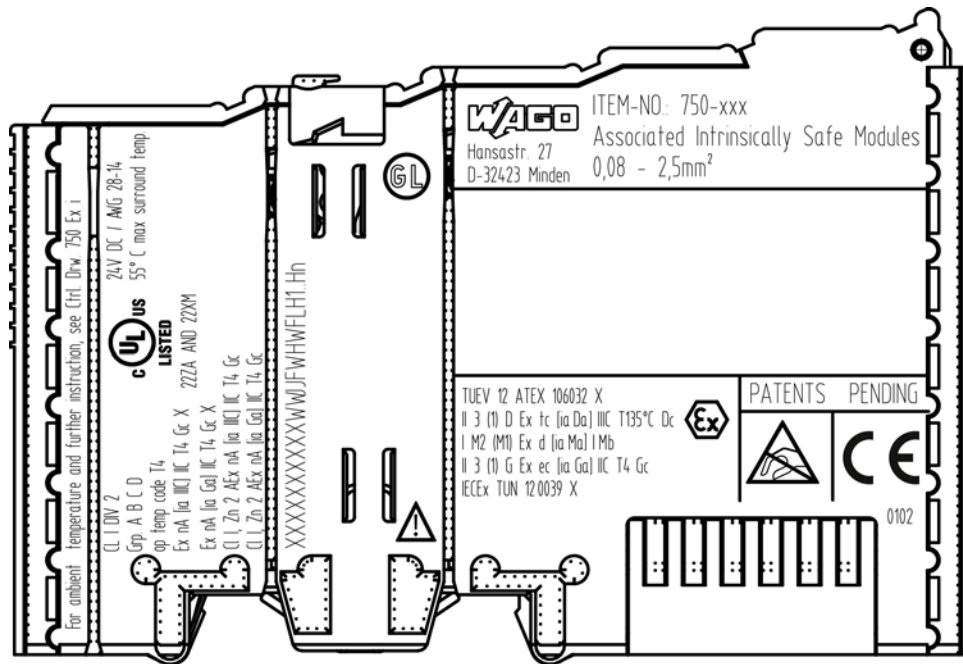


Figure 55: Marking Example for Approved I/O Module Ex i According to ATEX and IECEx

TUEV 12 ATEX 106032 X
 II 3 (1) D Ex tc [ia Da] IIC T135°C Dc
 I M2 (M1) Ex d [ia Ma] IMb
 II 3 (1) G Ex ec [ia Ga] IIC T4 Gc
 IECEx TUN 120039 X



Figure 56: Text Detail – Marking Example for Approved I/O Module Ex i According to ATEX and IECEx

Table 212: Description of Marking Example for Approved I/O Module Ex I According to ATEX and IECEx

Marking	Description
TUEV 12 ATEX 106032 X IECEx TUN 12 0039 X	Approving authority resp. certificate numbers
Dust	
II	Equipment group: All except mining
3 (1) D	Category 3 (Zone 22) equipment containing a safety device for a category 1 (Zone 20) equipment
Ex	Explosion protection mark
tc	Type of protection: Protection by enclosure
[ia Da]	Type of protection and equipment protection level (EPL): Associated apparatus with intrinsic safety circuits for use in Zone 20
IIIC	Explosion group of dust
T135°C	Max. surface temperature of the enclosure (without a dust layer)
Dc	Equipment protection level (EPL)
Mining	
I	Equipment Group: Mining
M2 (M1)	Category: High level of protection with electrical circuits which present a very high level of protection
Ex	Explosion protection mark
d	Type of protection: Flameproof enclosure
[ia Ma]	Type of protection and equipment protection level (EPL): Associated apparatus with intrinsic safety electrical circuits
I	Explosion group for electrical equipment for mines susceptible to firedamp
Mb	Equipment protection level (EPL)
Gases	
II	Equipment group: All except mining
3 (1) G	Category 3 (Zone 2) equipment containing a safety device for a category 1 (Zone 0) equipment
Ex	Explosion protection mark
ec	Equipment protection by increased safety "e"
[ia Ga]	Type of protection and equipment protection level (EPL): Associated apparatus with intrinsic safety circuits for use in Zone 0
IIC	Explosion group of gas and vapours
T4	Temperature class: Max. surface temperature 135 °C
Gc	Equipment protection level (EPL)

14.1.2 Marking for the United States of America (NEC) and Canada (CEC)

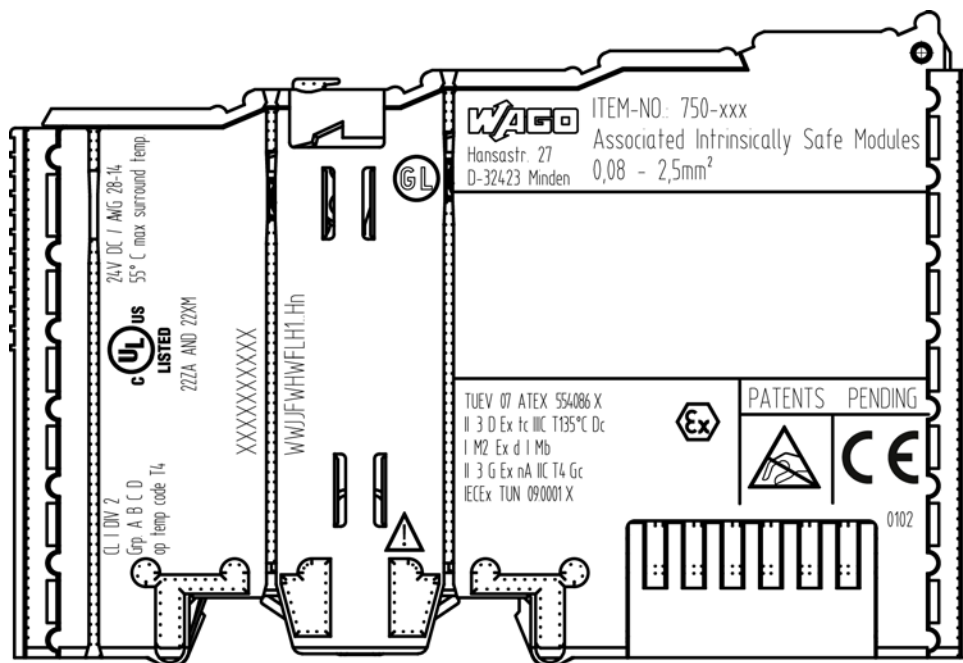


Figure 57: Marking Example According to NEC

CL I DIV 2
Grp. A B C D
op temp code T4

Figure 58: Text Detail – Marking Example According to NEC 500

Table 213: Description of Marking Example According to NEC 500

Marking	Description
CL I	Explosion protection (gas group)
DIV 2	Area of application
Grp. A B C D	Explosion group (gas group)
op temp code T4	Temperature class

CI I, Zn 2 AEx nA [ia Ga] IIC T4 Gc

Figure 59: Text Detail – Marking Example for Approved I/O Module Ex i According to NEC 505

Table 214: Description of Marking Example for Approved I/O Module Ex i According to NEC 505

Marking	Description
CI I,	Explosion protection group
Zn 2	Area of application
AEx	Explosion protection mark
nA	Type of protection
[ia Ga]	Type of protection and equipment protection level (EPL): Associated apparatus with intrinsic safety circuits for use in Zone 20
IIC	Group
T4	Temperature class
Gc	Equipment protection level (EPL)

CI I, Zn 2 AEx nA [ia IIIC] IIC T4 Gc

Figure 60: Text Detail – Marking Example for Approved I/O Module Ex i According to NEC 506

Table 215: Description of Marking Example for Approved I/O Module Ex i According to NEC 506

Marking	Description
CI I,	Explosion protection group
Zn 2	Area of application
AEx	Explosion protection mark
nA	Type of protection
[ia IIIC]	Type of protection and equipment protection level (EPL): Associated apparatus with intrinsic safety circuits for use in Zone 20
IIC	Group
T4	Temperature class
Gc	Equipment protection level (EPL)

Ex nA [ia IIC] IIC T4 Gc X
Ex nA [ia Ga] IIC T4 Gc X

Figure 61: Text Detail – Marking Example for Approved I/O Module Ex i According to CEC 18 attachment J

Table 216: Description of Marking Example for Approved I/O Module Ex i According to CEC 18 attachment J

Marking	Description
Dust	
Ex	Explosion protection mark
nA	Type of protection
[ia IIC]	Type of protection and equipment protection level (EPL): Associated apparatus with intrinsic safety circuits for use in Zone 20
IIC	Group
T4	Temperature class
Gc	Equipment protection level (EPL)
X	Symbol used to denote specific conditions of use
Gases	
Ex	Explosion protection mark
nA	Type of protection
[ia Ga]	Type of protection and equipment protection level (EPL): Associated apparatus with intrinsic safety circuits for use in Zone 0
IIC	Group
T4	Temperature class
Gc	Equipment protection level (EPL)
X	Symbol used to denote specific conditions of use

14.2 Installation Regulations

For the installation and operation of electrical equipment in hazardous areas, the valid national and international rules and regulations which are applicable at the installation location must be carefully followed.

14.2.1 Special Notes including Explosion Protection

The following warning notices are to be posted in the immediately proximity of the WAGO I/O System 750 (hereinafter “product”):

WARNING – DO NOT REMOVE OR REPLACE FUSED WHILE ENERGIZED!

WARNING – DO NOT DISCONNECT WHILE ENERGIZED!

WARNING – ONLY DISCONNECT IN A NON-HAZARDOUS AREA!

Before using the components, check whether the intended application is permitted in accordance with the respective printing. Pay attention to any changes to the printing when replacing components.

The product is an open system. As such, the product must only be installed in appropriate enclosures or electrical operation rooms to which the following applies:

- Can only be opened using a tool or key
- Inside pollution degree 1 or 2
- In operation, internal air temperature within the range of $0\text{ °C} \leq T_a \leq +55\text{ °C}$ or $-20\text{ °C} \leq T_a \leq +60\text{ °C}$ for components with extension number .../025-xxx or $-40\text{ °C} \leq T_a \leq +70\text{ °C}$ for components with extension number .../040-xxx
- Minimum degree of protection: min. IP54 (acc. to EN/IEC 60529)
- For use in Zone 2 (Gc), compliance with the applicable requirements of the standards EN/IEC/ABNT NBR IEC 60079-0, -7, -11, -15
- For use in Zone 22 (Dc), compliance with the applicable requirements of the standards EN/IEC/ABNT NBR IEC 60079-0, -7, -11, -15 and -31
- For use in mining (Mb), minimum degree of protection IP64 (acc. EN/IEC 60529) and adequate protection acc. EN/IEC/ABNT NBR IEC 60079-0 and -1
- Depending on zoning and device category, correct installation and compliance with requirements must be assessed and certified by a “Notified Body” (ExNB) if necessary!

Explosive atmosphere occurring simultaneously with assembly, installation or repair work must be ruled out. Among other things, these include the following activities

- Insertion and removal of components
- Connecting or disconnecting from fieldbus, antenna, D-Sub, ETHERNET or USB connections, DVI ports, memory cards, configuration and programming interfaces in general and service interface in particular:
 - Operating DIP switches, coding switches or potentiometers
 - Replacing fuses

Wiring (connecting or disconnecting) of non-intrinsically safe circuits is only permitted in the following cases

- The circuit is disconnected from the power supply.
- The area is known to be non-hazardous.

Outside the device, suitable measures must be taken so that the rated voltage is not exceeded by more than 40 % due to transient faults (e.g., when powering the field supply).

Product components intended for intrinsically safe applications may only be powered by 750-606 or 750-625/000-001 bus supply modules.

Only field devices whose power supply corresponds to overvoltage category I or II may be connected to these components.

14.2.2 Special Notes Regarding ANSI/ISA Ex

For ANSI/ISA Ex acc. to UL File E198726, the following additional requirements apply:

- Use in Class I, Division 2, Group A, B, C, D or non-hazardous areas only
- ETHERNET connections are used exclusively for connecting to computer networks (LANs) and may not be connected to telephone networks or telecommunication cables
- **WARNING** – The radio receiver module 750-642 may only be used to connect to external antenna 758-910!
- **WARNING** – Product components with fuses must not be fitted into circuits subject to overloads!
These include, e.g., motor circuits.
- **WARNING** – When installing I/O module 750-538, “Control Drawing No. 750538” in the manual must be strictly observed!



Information

Additional Information

Proof of certification is available on request.

Also take note of the information given on the operating and assembly instructions.

The manual, containing these special conditions for safe use, must be readily available to the user.

List of Figures

Figure 1: Fieldbus Node (Example)	21
Figure 2: Marking Area for Serial Numbers	24
Figure 3: Update Matrix up to 2015	25
Figure 4: Update Matrix from 2016	25
Figure 5: Isolation (Example)	28
Figure 6: System supply (example)	29
Figure 7: System Voltage (Example)	30
Figure 8: Field supply (sensor/actuator) (example)	34
Figure 9: Supply Module with Fuse Carrier (Example 750-610/040-000)	35
Figure 10: Removing the Fuse Carrier	36
Figure 11: Opening the Fuse Carrier and Changing the Fuse	36
Figure 12: Changing the Fuse and Closing the Fuse Carrier	37
Figure 13: Push Back the Fuse Carrier	37
Figure 14: Fuse Modules for Automotive Fuses, Series 282	38
Figure 15: Fuse Modules for Automotive Fuses, Series 2006	38
Figure 16: Fuse Modules with Pivotal Fuse Carrier, Series 281	38
Figure 17: Fuse Modules with Pivotal Fuse Carrier, Series 2002	38
Figure 18: Power supply concept	42
Figure 19: Supply example	43
Figure 20: Carrier Rail Contact (Example)	47
Figure 21: Cable Shield at Ground Potential	48
Figure 22: Examples of the WAGO Shield Connecting System	49
Figure 23: Application of the WAGO Shield Connecting System	49
Figure 24: View FC Modbus TCP; G4	52
Figure 25: Data Contacts	54
Figure 26: Power Jumper Contacts	55
Figure 27: CAGE CLAMP® Connectors	56
Figure 28: Device Supply	57
Figure 29: RJ-45 Connector	58
Figure 30: Display Elements	59
Figure 31: Service Interface (Closed and Opened Flap)	60
Figure 32: Address Selection Switch (for example setting "0")	61
Figure 33: Coordinates Model: Width (x), Height (y), Depth (z)	75
Figure 34: Mounting Positions	76
Figure 35: Spacing	79
Figure 36: Release Tab of Extended ECO Fieldbus Coupler (Example)	81
Figure 37: Inserting I/O Module (Example)	82
Figure 38: Snap the I/O Module into Place (Example)	83
Figure 39: Removing the I/O Module (Example)	83
Figure 40: Data Contacts	84
Figure 41: Example for the Arrangement of Power Contacts	85
Figure 42: Connecting a Conductor to a CAGE CLAMP®	86
Figure 43: Operating System	87
Figure 44: Memory Areas and Data Exchange	91
Figure 45: Data Exchange Between MODBUS Master and I/O Modules	94
Figure 46: Address Selection Switch, for Example the Value Setting "50" ($2^1 + 2^4 + 2^5$)	100

Figure 47: Example for a WBM page structure (simplified representation)	119
Figure 48: Display Elements	145
Figure 49: Node Status – I/O LED Signaling	148
Figure 50: Error Message Coding	148
Figure 51: Use of the MODBUS Functions	177
Figure 52: Example SCADA Software with Modbus Driver	230
Figure 53: Marking Example According to ATEX and IECEEx	232
Figure 54: Text Detail – Marking Example According to ATEX and IECEEx	232
Figure 55: Marking Example for Approved I/O Module Ex i According to ATEX and IECEEx	234
Figure 56: Text Detail – Marking Example for Approved I/O ModuleEx i According to ATEX and IECEEx	234
Figure 57: Marking Example According to NEC	236
Figure 58: Text Detail – Marking Example According to NEC 500	236
Figure 59: Text Detail – Marking Example for Approved I/O Module Ex i According to NEC 505	237
Figure 60: Text Detail – Marking Example for Approved I/O Module Ex i According to NEC 506	237
Figure 61: Text Detail – Marking Example for Approved I/O Module Ex i According to CEC 18 attachment J	238

List of Tables

Table 1: Number Notation.....	12
Table 2: Font Conventions.....	12
Table 3: Labeling Symbols	23
Table 4: Legend for Figure “Update Matrix from 2016”	25
Table 5: Legend for the “System supply” figure	29
Table 6: Alignment.....	31
Table 7: Legend for the “Field supply (sensor/actuator)” figure	34
Table 8: Power Supply Modules	35
Table 9: XTR Supply Modules for Powering XTR Sections	40
Table 10: Filter modules for 24 V power supply	41
Table 11: Legend for Figure “Power Supply Concept”	42
Table 12: Legend for the “Supply example” figure.....	44
Table 13: WAGO Ground Wire Terminals	46
Table 14: Legend for Figure “View”	53
Table 15: Legend for Figure “Power Jumper Contacts”.....	55
Table 16: Legend for Figure “CAGE CLAMP® Connectors”	56
Table 17: RJ-45 Connector and RJ-45 Connector Configuration	58
Table 18: Display Elements Fieldbus Status	59
Table 19: Display Elements Node Status	59
Table 20: Legend for Figure “Service Interface (Closed and Opened Flap)”	60
Table 21: Meaning of DIP Switch Positions.....	61
Table 22: Technical Data – Device	62
Table 23: Technical Data – System.....	62
Table 24: Technical Data – Supply	63
Table 25: Technical Data - Fieldbus Modbus TCP	63
Table 26: Technical Data – Accessories	64
Table 27: Technical Data – Field Wiring	64
Table 28: Technical Data – Power Jumper Contacts	64
Table 29: Technical Data – Data Contacts	64
Table 30: Technical Data – Mechanical Conditions.....	64
Table 31: Technical Data – Climatic Environmental Conditions	65
Table 32: Technical Data – Mechanical Strength	65
Table 33: Technical Data – Software Compatibility	66
Table 34: Standards and Rated Conditions for Explosion Protection Applications	68
Table 35: Climatic and Mechanical Environmental Conditions and Shipbuilding	69
Table 36: EMC – Product and Generic Standards	70
Table 37: EMC – Testing Standards: Immunity to Interference	71
Table 38: EMC – Testing Standards: Emission of Interference	72
Table 39: Standards and Rated Conditions for Rail Applications (EN 50155:2017)	74
Table 40: WAGO DIN Rails	79
Table 41: Data Width for I/O Modules	92
Table 42: Allocation of Digital Inputs and Outputs to Process Data Words in Accordance with the	93
Table 43: Log File Name Syntax	95
Table 44: Address selection switch values (host ID)	100

Table 45: WBM User Groups.....	117
Table 46: WBM Page "Information"	120
Table 47: WBM Page "Administration"	121
Table 48: WBM Page "System Status"	123
Table 49: WBM Page „Clock“	126
Table 50: WBM Page "Miscellaneous"	127
Table 51: WBM page "Storage Media"	128
Table 52: WBM Page "Update"	128
Table 53: WBM Page „Ethernet“	129
Table 54: WBM page „Protocols“	133
Table 55: WBM Page "SNMP v1/v2"	135
Table 56: WBM Page "SNMP V3"	136
Table 57: WBM Page "SNTP"	137
Table 58: WBM page „TCP/IP“	138
Table 59: WBM page "MODBUS"	139
Table 60: WBM page "Modbus Mapping"	141
Table 61: WBM page „I/O Data“	144
Table 62: LED Assignment for Diagnostics	145
Table 63: Fieldbus Diagnostics – Solution in Event of Error.....	146
Table 64: Node Status Diagnostics – Solution in Event of Error	147
Table 65: Blink code- table for the I/O LED signaling, error code 1.....	150
Table 66: Blink Code Table for the I/O LED Signaling, Error Code 2	152
Table 67: Blink Code Table for the I/O LED Signaling, Error Code 3	153
Table 68: Blink Code Table for the I/O LED Signaling, Error Code 4	154
Table 69: Blink Code Table for the I/O LED Signaling, Error Code 5	154
Table 70: Blink Code Table for the I/O LED Signaling, Error Code 6	155
Table 71: Blink Code Table for the I/O LED Signaling, Error Code 7	155
Table 72: Blink Code Table for the I/O LED Signaling, Error Code 8 ... 11.....	155
Table 73: Blink code table for I/O LED signaling, error code 12	156
Table 74: Blink code table for I/O LED signaling, error code 13	156
Table 75: IP Packet	159
Table 76: Network Class A	160
Table 77: Network Class B	160
Table 78: Network Class C	160
Table 79: Key Data Class A, B and C.....	161
Table 80: Example: Class B Address with Field for Subnet IDs	162
Table 81: Subnet Mask for Class A Network	162
Table 82: Subnet Mask for Class B Network	162
Table 83: Subnet Mask for Class C Network.....	162
Table 84: Example for an IP Address from a Class B Network	162
Table 85: BootP Options.....	166
Table 86: Meaning of DHCP Options	168
Table 87: Meaning of the SNTP Parameters	169
Table 88: MIB II groups	171
Table 89: Standard Traps	172
Table 90: Modbus TCP Header	174
Table 91: Basic Data Types of MODBUS Protocol.....	175
Table 92: List of the MODBUS Functions in the Fieldbus Coupler.....	175
Table 93: Exception Codes.....	178
Table 94: Request of Function Code FC1	179

Table 95: Response of Function Code FC1	179
Table 96: Assignment of Inputs	180
Table 97: Exception of Function Code FC1	180
Table 98: Request of Function Code FC2	181
Table 99: Response of Function Code FC2	181
Table 100: Assignment of Inputs	181
Table 101: Exception of Function Code FC2	182
Table 102: Request of Function Code FC3	183
Table 103: Response of Function Code FC3	183
Table 104: Exception of Function Code FC3	183
Table 105: Request of Function Code FC4	184
Table 106: Response of Function Code FC4	184
Table 107: Exception of Function Code FC4	184
Table 108: Request of Function Code FC5	185
Table 109: Response of Function Code FC5	185
Table 110: Exception of Function Code FC5	185
Table 111: Request of Function Code FC6	186
Table 112: Response of Function Code FC6	186
Table 113: Exception of Function Code FC6	186
Table 114: Request of Function code FC11	187
Table 115: Response of Function Code FC11	187
Table 116: Exception of Function Code FC 11	187
Table 117: Request of Function Code FC15	188
Table 118: Response of Function Code FC15	188
Table 119: Exception of Function Code FC15	189
Table 120: Request of Function Code FC16	190
Table 121: Response of Function Code FC16	190
Table 122: Exception of Function Code FC16	190
Table 123: Request of Function Code FC22	191
Table 124: Response of Function Code FC22	191
Table 125: Exception of Function Code FC22	191
Table 126: Request of Function Code FC23	192
Table 127: Response of Function Code FC23	192
Table 128: Exception of Function Code FC23	192
Table 129: Register Access Reading (with FC3 and FC4)	194
Table 130: Register Access Writing (with FC6 and FC16)	195
Table 131: Bit Access Reading (with FC1 and FC2)	196
Table 132: Bit Access Writing (with FC5 and FC15)	196
Table 133: Modbus Registers	197
Table 134: Register Address 0x1000	200
Table 135: Register Address 0x1001	200
Table 136: Register Address 0x1002	201
Table 137: Register Address 0x1003	201
Table 138: Register Address 0x1004	201
Table 139: Register Address 0x1005	201
Table 140: Register Address 0x1006	202
Table 141: Register Address 0x1007	202
Table 142: Register Address 0x1008	202
Table 143: Register Address 0x1009	202
Table 144: Register Address 0x100A	202

Table 145: Starting Watchdog	203
Table 146: Register Address 0x100B	203
Table 147: Register Address 0x1020	204
Table 148: Register Address 0x1021	204
Table 149: Register Address 0x1022	205
Table 150: Register Address 0x1023	205
Table 151: Register Address 0x1024	205
Table 152: Register Address 0x1025	205
Table 153: Register Address 0x1029	205
Table 154: Register Address 0x102A	206
Table 155: Register Address 0x102B	206
Table 156: Register Address 0x1030	206
Table 157: Register Address 0x1031	206
Table 158: Register Address 0x1037	206
Table 159: Register Address 0x1038	206
Table 160: Register Address 0x1050	207
Table 161: Register Address 0x2000	207
Table 162: Register Address 0x2001	207
Table 163: Register Address 0x2002	207
Table 164: Register Address 0x2003	208
Table 165: Register Address 0x2004	208
Table 166: Register Address 0x2005	208
Table 167: Register Address 0x2006	208
Table 168: Register Address 0x2007	208
Table 169: Register Address 0x2008	208
Table 170: Register Address 0x2010	209
Table 171: Register Address 0x2011	209
Table 172: Register Address 0x2012	209
Table 173: Register Address 0x2013	209
Table 174: Register Address 0x2014	209
Table 175: Register Address 0x2020	209
Table 176: Register Address 0x2021	210
Table 177: Register Address 0x2022	210
Table 178: Register Address 0x2023	210
Table 179: Register Address 0x2030	211
Table 180: Register Address 0x2031	211
Table 181: Register Address 0x2032	211
Table 182: Register Address 0x2033	212
Table 183: Register Address 0x2035	212
Table 184: Register Address 0x2036	213
Table 185: Register Address 0x2040	213
Table 186: Register Address 0x2043	213
Table 187: 2-Channel Digital Input Modules.....	216
Table 188: 8-Channel Digital Input Modules.....	216
Table 189: 16-Channel Digital Input Modules.....	216
Table 190: 2-Channel Digital Output Modules.....	217
Table 191: 2-Channel Digital Output Modules with Diagnostics and Input Data.....	217
Table 192: 4-Channel Digital Output Modules.....	217
Table 193: 4-Channel Digital Output Modules with Diagnostics and Input Data.....	218
Table 194: 8-Channel Digital Output Modules.....	218

Table 195: 8-Channel Digital Output Modules with Diagnostics and Input Data	218
Table 196: 16-Channel Digital Output Modules	219
Table 197: 2-Channel Analog Input Modules	220
Table 198: 4-Channel Analog Input Modules	220
Table 199: 3-Phase Power Measurement Module	221
Table 200: 2 Channel Analog Output Modules	222
Table 201: 4 Channel Analog Output Modules	222
Table 202: Serial interfaces with alternative data format	223
Table 203: SSI transmitter interface modules with alternative data format.....	224
Table 204: Incremental Encoder Interface.....	224
Table 205: Counter Modules	225
Table 206: Counter Module, Operating mode “2 Up Counter/16 Bit / 5 kHz” ...	225
Table 207: CAN Gateway	226
Table 208: Intrinsically Safe Supply Modules with Diagnostics	227
Table 209: Supply Modules with fuse Carrier and Diagnostics	227
Table 210: Modbus Table and Function Codes	230
Table 211: Description of Marking Example According to ATEX and IECEx.....	233
Table 212: Description of Marking Example for Approved I/O Module Ex I According to ATEX and IECEx	235
Table 213: Description of Marking Example According to NEC 500.....	236
Table 214: Description of Marking Example for Approved I/O Module Ex i According to NEC 505	237
Table 215: Description of Marking Example for Approved I/O Module Ex i According to NEC 506	237
Table 216: Description of Marking Example for Approved I/O Module Ex i According to CEC 18 attachment J	238



WAGO Kontakttechnik GmbH & Co. KG
Postfach 2880 • D - 32385 Minden
Hansastraße 27 • D - 32423 Minden
Phone: +49 571 887 – 0
Fax: +49 571 887 – 844169
E-Mail: info@wago.com
Internet: www.wago.com