


ISO Busbar Modules

- 2-part construction
 - Device Adapter Plate (or DAP) (carrying the starter) snaps onto the base of the module
 - Base module remains on busbar when exchanging starters, providing isolation from live parts
- Test position with load circuit isolated
- Designed for use with control plug (order separately)
- Modules with current ratings supply the load current by means of wire connections matched to Bulletin 140-M motor protection circuit breakers
- Modules can form bigger platforms using the connection clips (see accessories)
- For plugging on 5 mm or 10 mm thick busbars
- Meets feeder circuit spacings per UL 508A

2

	Description	Rated Thermal Current I_{th} [A]	Width [mm]	Rails	Pkg. Qty.	Cat. No.
	ISO Busbar Modules with Wires — Short Length Wires on DAP for electrical connection 200 mm tall Top Hat Rails: R = MCS-Specific top hat rail	32	45	2R	1	141A-SS45RR25
			54			141A-SS54RR25
		63	54			141A-SS54RR45
			63			141A-SS63RR45
		Without electrical connections	45	1R	1	141A-SS45R
			54			141A-SS54R
	ISO Busbar Modules with Wires — Medium Length Wires on DAP for electrical connection 260 mm tall Top Hat Rails: R = MCS-Specific top hat rail; S = Standard top hat rail	32	45	1R+1S	1	141A-SM45RS25
			54			141A-SM54RS25
		63	54			141A-SM54RS45
			63			141A-SM63RS45
		Without electrical connections	45	1S	1	141A-SM45S
			54			141A-SM54S
			63			141A-SM63S

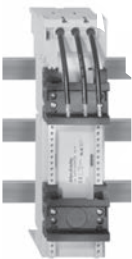

Bulletin 141A


MCS Mounting System

Approximate Dimensions

Dimensions are in millimeters. Dimensions are not intended for manufacturing purposes.

Cat. No. 141A-S...ISO Busbar Modules

2

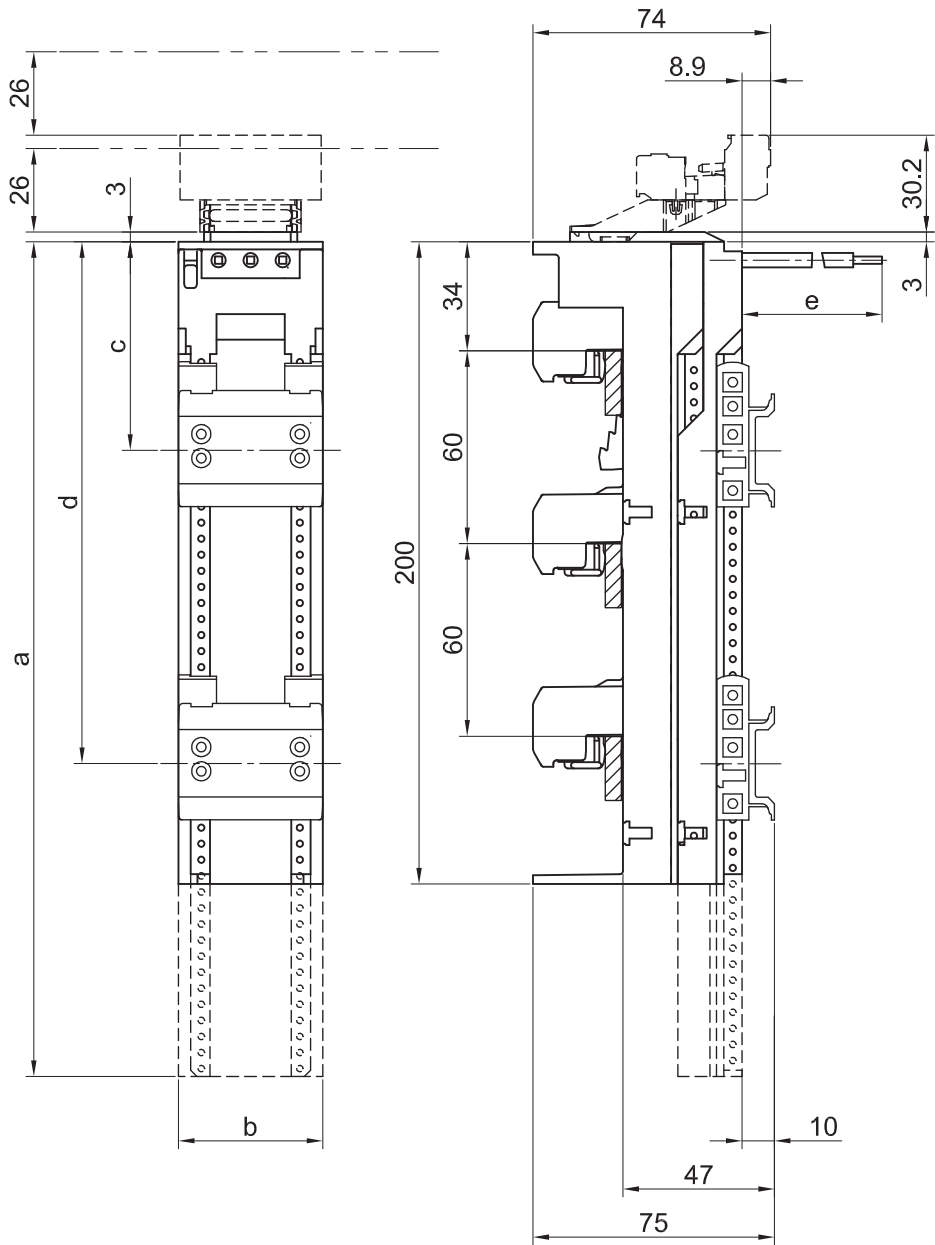

Cat. No.	A	B	C	D	E
141A-SS45RR25	200	45	65	162.5	73
141A-SS54RR25	200	54	65	162.5	73
141A-SS54RR45	200	54	65	170	95
141A-SS63RR45	200	63	65	170	95
141A-SS45R	200	45	—	162.5	—
141A-SS54R	200	54	—	170	—
141A-SM45RS25	260	45	65	170	73
141A-SM54RS25	260	54	65	170	73
141A-SM54RS45	260	54	65	170	95
141A-SM63RS45	260	63	65	170	95
141A-SM45S	260	45	—	170	—
141A-SM54S	260	54	—	170	—
141A-SM63S	260	63	—	170	—

NOTE:
FREE SPACE REQUIRED TO GET THE
DEVICE ADAPTER PLATE IN PARKING
POSITION.