

Kinetix 5000 Shared-bus Connector Kits

Catalog Numbers: Kinetix 5500 and Kinetix 5700 Drive Families

The Kinetix* 5000 servo drive families use the shared-bus connection system to extend AC input power, 24V control power, and DC bus power from drive to drive in shared-bus multi-axis configurations.

These documents contain additional information concerning drive system installation.

Resource	Description
Kinetix 5500 Servo Drives User Manual, publication <u>2198-UM001</u>	Provides detailed information on wiring, applying power, troubleshooting, and integration with Logix5000™
Kinetix 5700 Servo Drives User Manual, publication <u>2198-UM002</u>	controllers.

Power Ratings

Attribute	Value	Drive Family
AC input current, max	52 A	Kinetix 5500
Bus-bar current, max	70 A	Killetix 3300

Attribute	Value	Drive Family
24V control power current, max	32 A	Kinetix 5500 Kinetix 5700

Kinetix 5700 Servo Drives

These shared-bus connector kits apply to Kinetix 5700 multi-axis servo drive systems.

Shared-bus Connector Kits Cat. No.	Drive Cat. No.	Application	Description
2198-TCON-24VDCIN36	2198-P031, 2198-P070, 2198-P141, ⁽¹⁾ 2198-P208, 2198-CAPMOD-2240	24V DC input power to control bus	24V DC input wiring connector
2198-H040-P-T	2198-D006-ERS3, 2198-D012-ERS3 2198-D020-ERS3, 2198-D032-ERS3 Control power sharing		Control power T-connector with bus bars, 55 mm
2198-H070-P-T	2198-D057-ERS3 2198-S086-ERS3 2198-S130-ERS3	Control power sharing	Control power T-connector with bus bars, 85 mm
2198-S160-P-T	2198-S160-ERS3	Control power sharing	Control power T-connector with bus bars, 100 mm

⁽¹⁾ The DC-bus power supply or capacitor module is the typical use. However, the input wiring connector can be inserted into any drive (mid-stream in the drive system) to begin a new 24V control bus when the maximum current value is reached. See the Kinetix 5700 Servo Drives User Manual, publication 2198-UM002.





Kinetix 5500 Servo Drives

These shared-bus connector kits apply to Kinetix 5500 multi-axis servo drive systems.

Shared-bus Connector Kits ⁽¹⁾ Cat. No.	Frame Size and Cat. No.	Application	Description
2198-H040-ADP-IN	Frame 1 or 2	First drive	Mains AC input wiring connector 24V DC input wiring connector DC bus T-connector
2198-H040-A-T		AC sharing only	AC bus T-connector
2198-H040-D-T	Next drive is	DC sharing only	DC bus T-connector
2198-H040-P-T	Frame 1 drives:	Control power sharing only	Control power T-connector
2198-H040-AD-T		AC and DC bus sharing	AC and DC bus T-connectors
2198-H040-AP-T		AC and control power sharing	AC and control power T-connectors
2198-H040-DP-T		DC and control power sharing	DC and control power T-connectors
2198-H040-ADP-T		AC, DC, and control power sharing	AC, DC, and control power T-connectors
2198-H070-ADP-IN	Frame 3 drive: 2198-H070- <i>xxx</i>	First drive	Mains AC input wiring connector 24V DC input wiring connector DC bus T-connector
2198-H070-A-T		AC sharing only	AC bus T-connector
2198-H070-D-T]	DC sharing only	DC bus T-connector
2198-H070-P-T	Next drive is Frame 3 drives: 2198-H070-xxx	Control power sharing only	Control power T-connector
2198-H070-AD-T		AC and DC bus sharing	AC and DC bus T-connectors
2198-H070-AP-T		AC and control power sharing	AC and control power T-connectors
2198-H070-DP-T		DC and control power sharing	DC and control power T-connectors
2198-H070-ADP-T		AC, DC, and control power sharing	AC, DC, and control power T-connectors

⁽¹⁾ Catalog numbers 2198-H040-xxx-T include 55 mm bus bars. Catalog numbers 2198-H070-xxx-T include 85 mm bus bars.

Replacement Bus-Bar Connectors

Cat. No.	Description	Drive Family
2198-BARCON-55DCAC100	Replacement 55 mm bus-bar connectors (quantity 8) for: AC and DC-bus sharing 24V DC control power sharing	Kinetix 5500 Kinetix 5500 and Kinetix 5700
2198-BARCON-85DCAC100	Replacement 85 mm bus-bar connectors (quantity 8) for: AC and DC-bus sharing 24V DC control power sharing	Kinetix 5500 Kinetix 5500 and Kinetix 5700
2198-BARCON-100DC100	Replacement 100 mm bus-bar connectors (quantity 8) for 24V DC control power sharing	Kinetix 5700

Install the Connector Kits

The connection system for both drive families is comprised of three components.



SHOCK HAZARD: To avoid hazard of electrical shock, perform all mounting and wiring of the servo drives and shared-bus connector kits before applying power. Once power is applied, connector terminals can have voltage present even when not in use.


IMPORTANT

When the shared-bus connection system is used, the zero-stack tab and cutout must be engaged between adjacent drives.

Kinetix 5700 Connection System

- The 24V input-wiring connector that plugs into the DC-bus power supply or capacitor module (typically) and receives input wiring for 24V DC.
- 24V DC T-connectors that plug into the drives downstream from the power supply where the 24V control power is shared.
- Bus bars that connect between drives to extend the 24V control power from drive to drive.


This example illustrates the 24V input wiring connector inserting into the DC-bus power supply along with downstream T-connectors and bus-bar connectors. For information on installing the DC-bus connector kit, refer to the Kinetix 5700 DC-bus Connector Kit Installation Instructions, publication 2198-IN007.

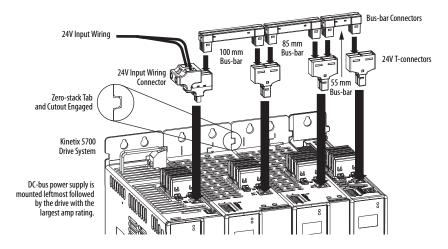

Kinetix 5500 Connection System

- Input-power wiring connectors plug into the leftmost drive and receive input wiring for AC input power and 24V DC input power.
- AC bus, DC bus, and 24V DC T-connectors plug into the drives downstream from the
 first drive where AC, DC, and/or 24V control power is shared. DC bus T-connectors
 also plug into the first drive where DC bus power is shared.
- Bus bars connect between drives to extend the AC input bus, DC bus, and 24V DC control power from drive-to-drive.

This example illustrates the AC input power wiring connector, T-connectors, and bus-bar connectors. The 24V bus and DC bus systems connect in a similar way.

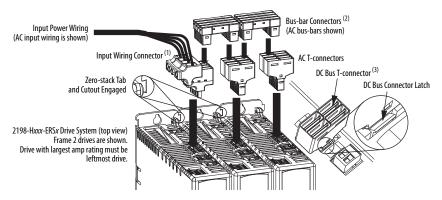

- (1) Due to the higher amp rating of frame 3 drives, input wiring connectors for frame 3 drives (catalog number 2198-H070-ADP-IN) are slightly larger than connectors for frame 1 and 2 drives (catalog number 2198-H040-ADP-IN).
- (2) Due to the extra width of frame 3 drives, bus-bar connectors between frame 3 drives are slightly longer (85 mm) than connectors between frame 2 and frame 1 drives (55 mm).
- (3) DC bus T-connectors latch on both sides when inserted into the drive. To remove the DC bus T-connector, at least one latch must be pried away with a non-conductive probe.

Rockwell Automation maintains current product environmental information on its website at http://www.rockwellautomation.com/rockwellautomation/about-us/sustainability-ethics/product-environmental-compliance.page.

Allen-Bradley, Kinetix, Logix 5000, Rockwell Software, and Rockwell Automation are trademarks of Rockwell Automation, Inc. Trademarks not belonging to Rockwell Automation are property of their respective companies.

 $Rockwell\ Otomasyon\ Ticaret\ A.\$,\ Kar\ Plaza\ \dot{I}_{\S}\ Merkezi\ E\ Blok\ Kat: 6\ 34752\ \dot{I}cerenk\"{o}y,\ \dot{I}stanbul,\ Tel: +90\ (216)\ 5698400$

www.rockwellautomation.com

Power, Control and Information Solutions Headquarters

Americas: Rockwell Automation, 1201 South Second Street, Milwaukee, WT 53204-2496 USA, Tel: (1) 414,382,2000, Fax: (1) 414,382,4444
Europe/Middle East/Africa: Rockwell Automation NIV, Pegasus Park, De Kleetlaan 12a, 1831 Diegem, Belgium, Tel: (32) 2 663 0600, Fax: (32) 2 663 0640
Asia Pacific: Rockwell Automation, Level 14, Core F. Cyberport 3, 100 Cyberport Road, Hong Kong, Tel: (852) 2887-4788, Fax: (852) 2508 1846